




DESIGNED IN CALIFORNIA

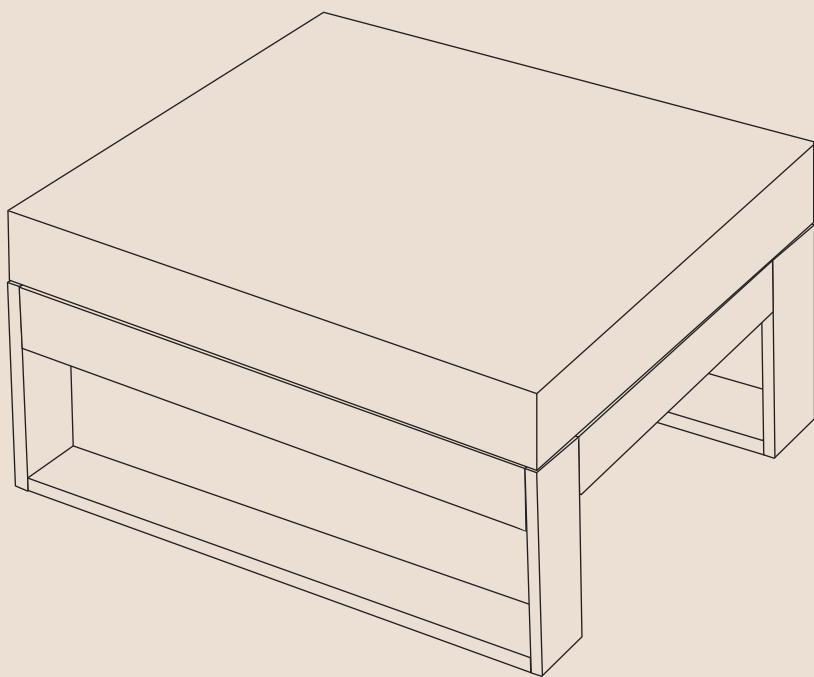

PATIO DEEP SEATING OTTOMAN
WITH CUSHION

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

<https://westintrends.com/welcome>



QUESTIONS OR COMMENTS?

If you have questions reach out to
cs@westintrends.com

FOLLOW, SHARE, & LEARN



PRODUCT REGISTRATION

<https://westintrends.com/apps/product-registration>



ACCESSIBILITY - COMMUNITY - VALUE - SUSTAINABILITY

! CARE & MAINTENANCE

Please keep this instruction for your future reference.

- Be careful when assembly, avoid hurting the top surface.
- Clean the chair with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, do not use any part of this item as a step ladder.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Do not overtighten screws. (Insert all screws before tighten screws.)
- Please do not exceed the weight limitations of this item.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



OTTOMAN
300 LBS
CAPACITY



1 PERSON
ASSEMBLY



UP TO 20 MIN.
ASSEMBLY

HARDWARE

1

SCREW
M6 x 40mm



8 PCS

2

SCREW
M4 x 30mm



8 PCS

3

ALLEN
WRENCH




1 PC

PARTS

A

OTTOMAN TOP

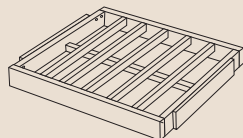

1 PC

B1

LEG I



2 PCS

B2

LEG II



2 PCS

C

BOTTOM BAR




2 PCS

CUSHION

Z4


OTTOMAN
CUSHION

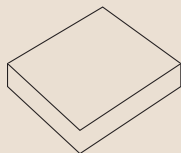

1 PC


PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this ottoman and learn the exact position of each parts to be assembled.

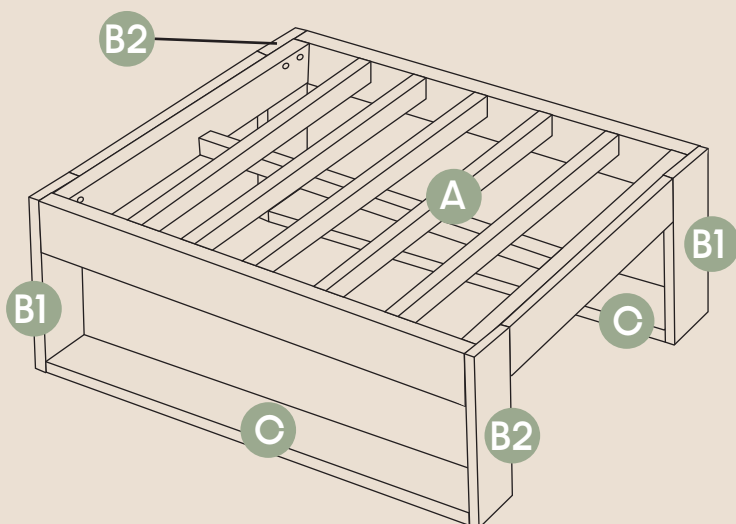

1


Attach **Part C Bottom Bar** to **Part B1 Leg I** with 2 pcs of **Hardware #2 Screw**.

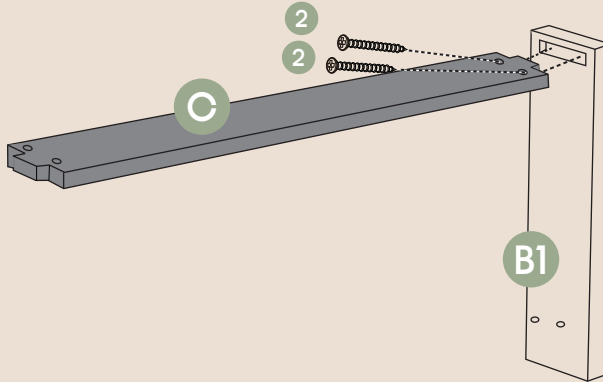

2

Attach 2 pcs of **Part B2 Leg II** to **Part C Bottom Bar** with 4 pcs of **Hardware #2 Screw**.

Do the same to assemble another **Part B1, Part B2** and **Part C**.

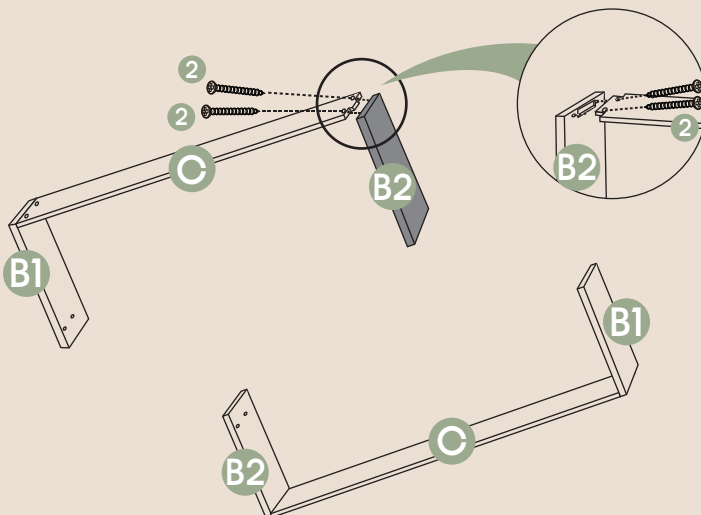


3

Place **Part A Ottoman Top** upside down on flat floor.

Attach 2 pcs of Combined **Part (B1+C+B2) Ottoman Legs** to **Part A Ottoman Top** as below with 8 pcs of **Hardware #1 Screw**.

Pay attention to protect the surface paint.

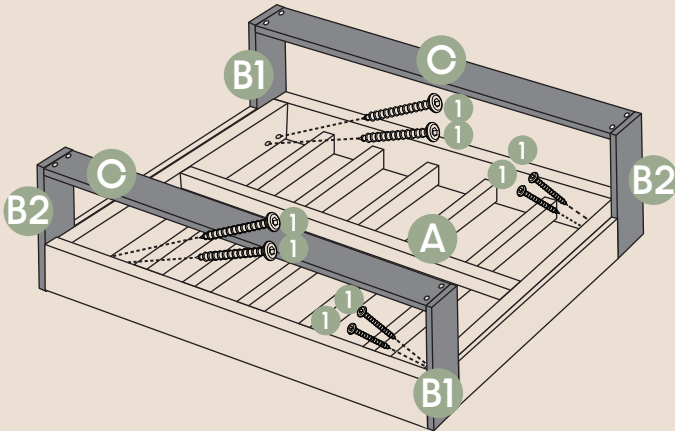


4

Tighten all the screws when the parts are loosely attached.

Place **Cushion Z4** onto the ottoman for comfortable use.

Enjoy the ottoman now.

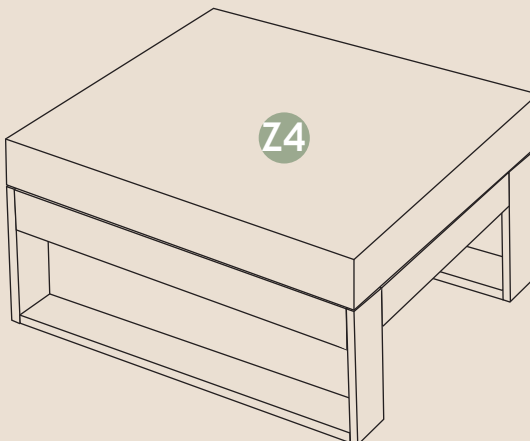

REGISTRATION & REFUND POLICY

<https://westintrends.com/apps/product-registration>



<https://westintrends.com/policies/refund-policy>



HAVING TROUBLE

- **Not sure how to assemble or missing pieces?**

Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #, Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning - **DO NOT exceed 1500 PSI** - this will remove any debris and dirt.