


# OCEAN PLATFORM C-KING BED

## ASSEMBLY INSTRUCTIONS




### BOX #1

- A. HEADBOARD PANEL 1 PC
- B. LEFT HEADBOARD LEG 1 PC
- C. RIGHT HEADBOARD LEG 1 PC
- D. FOOTBOARD 1 PC
- HEADBOARD HARDWARE BOX\*

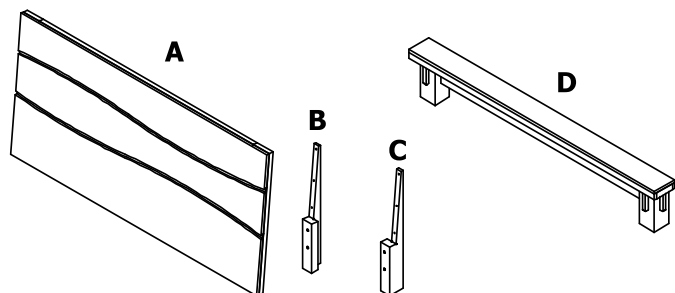


### BOX #2

- E. LEFT SIDE RAIL 1 PC
- F. RIGHT SIDE RAIL 1 PC
- G. CENTER SLAT 1 PC
- H. SUPPORT LEG 4 PCS
- BED HARDWARE BOX\*

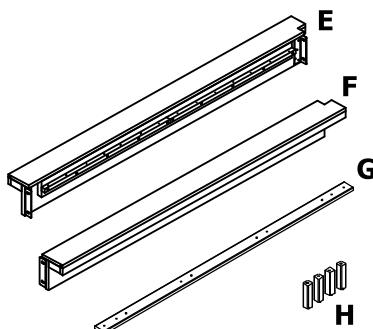


### BOX #3

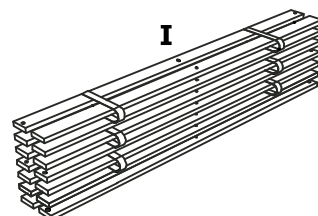






- I. SLAT ROLL 1 SET



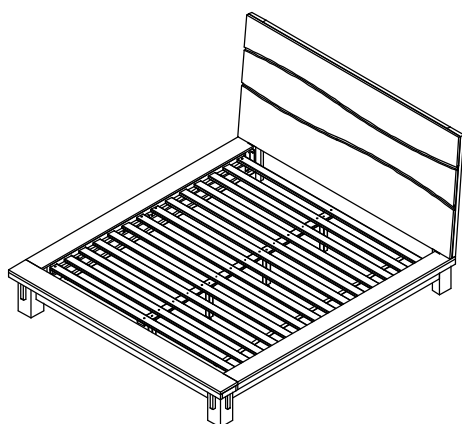



### OCEAN PLATFORM BED ASSEMBLED



### BED HARDWARE PACKED IN BOX #2


1	PHILLIPS HEAD BOLT(8x20mm)	8 PCS	2	SPRING WASHER (M8)	8 PCS	3	FLAT WASHER (M8)	8 PCS	4	METAL PIN (8x40mm)	2 PCS
											
5	WOOD SCREW (8x30mm)	9 PCS	6	ALLEN BOLT (6x40mm)	11 PCS	7	ALLEN KEY			1 PC	
											

### HEADBOARD HARDWARE PACKED IN BOX #1

1	ALLEN BOLT (6x35mm)	2 PCS	2	ALLEN BOLT (6x55mm)	2 PCS	3	ALLEN BOLT (6x70mm)	2 PCS	4	ALLEN KEY	1 PC
											


TOOL REQUIRED : PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED)

YOUR BOX  
MAY CONTAIN  
EXTRA HARDWARE

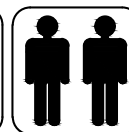


### STEP 1 :

\*USE HEADBOARD HARDWARE FROM BOX #1 FOR STEP 1.

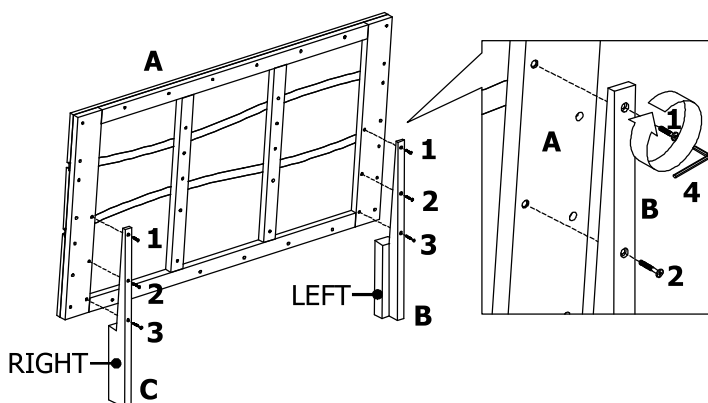


### STEP 2 :


\*USE BED HARDWARE FROM BOX #2 FOR THIS, AND ALL REMAINING STEPS.

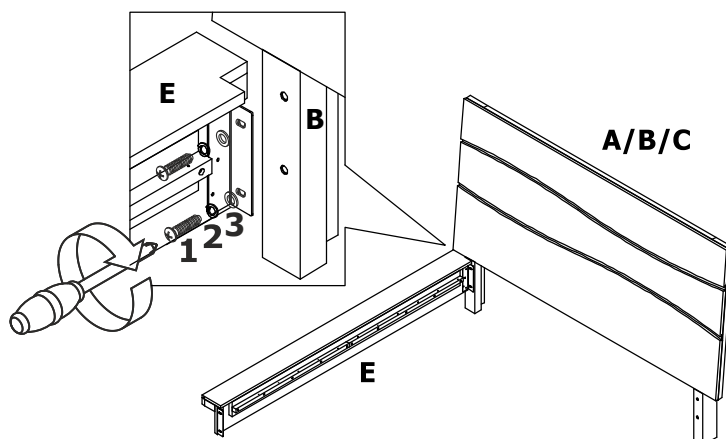

### STEP 3 :

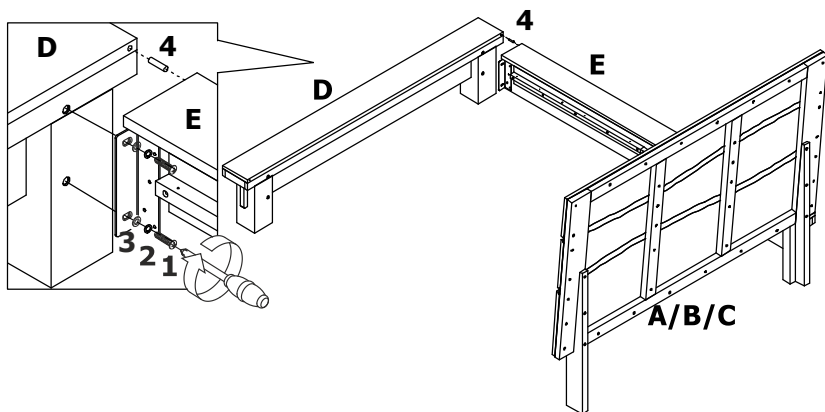


### STEP 4 :

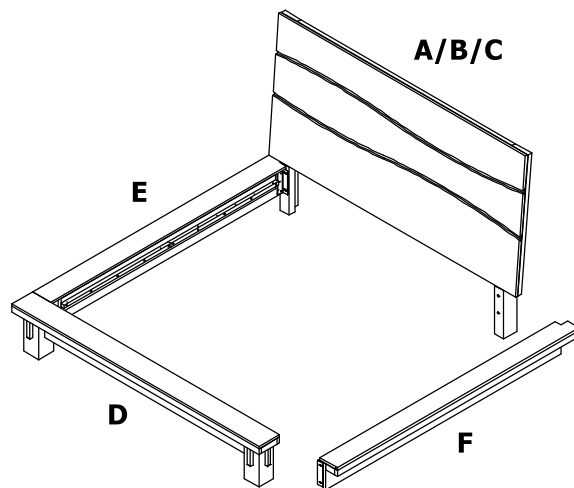


### STOP

- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 5.


### STEP 5 :

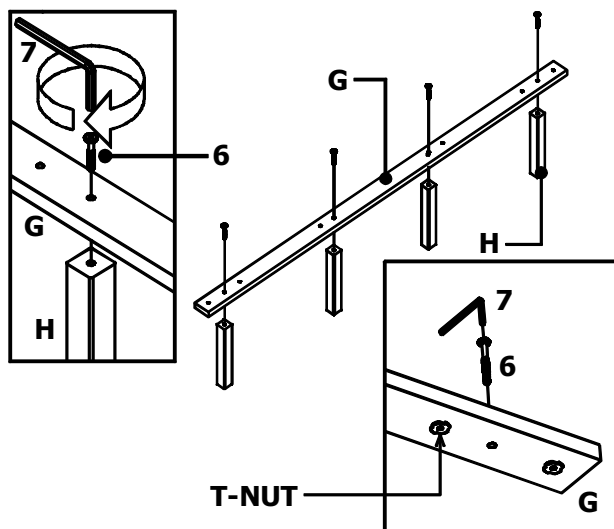

### STEP 6 :

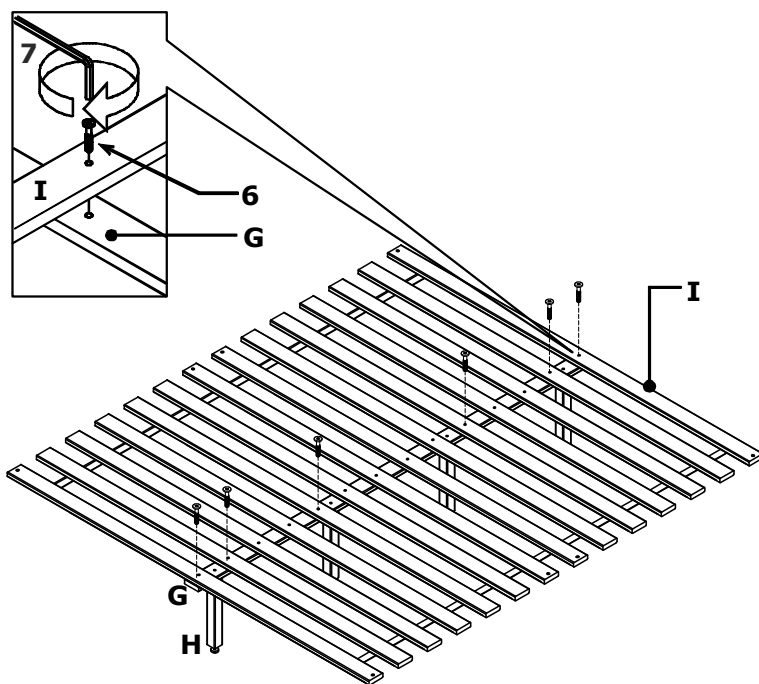

### STEP 7 :

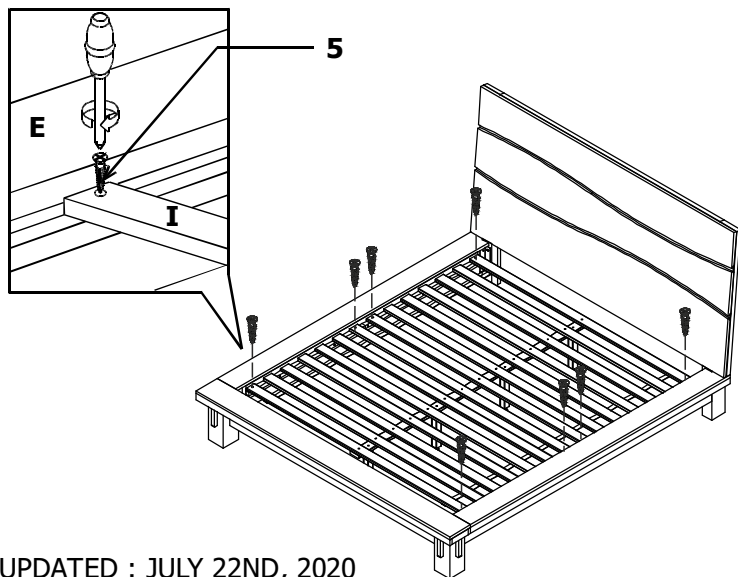


### INSTRUCTIONS FOR ADJUSTING LEVELERS:

POSITION THE BED IN YOUR ROOM. LOCATE LEVELERS UNDER EACH SUPPORT LEG (H).

TURN LEVELERS COUNTER-CLOCKWISE TO EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH SUPPORT LEG IS APPLYING EQUAL UPWARD PRESSURE ON THE CENTER SLAT.

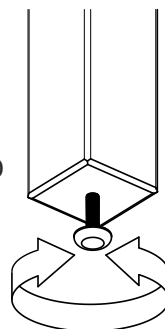

### MAINTENANCE INSTRUCTIONS:

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE THE SUPPORT LEG.
- READJUST LEVELERS AFTER MOVING YOUR BED.

# OCEAN PLATFORM C-KING BED

## APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

G. CENTER SLAT	1 PC	5. WOOD SCREW (8x30mm)	9 PCS
H. SUPPORT LEG	4 PCS	6. ALLEN BOLT (6x40mm)	11 PCS
I. SLAT ROLL	1 SET		

### STEP 1 :

USE ALLEN KEY (7) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

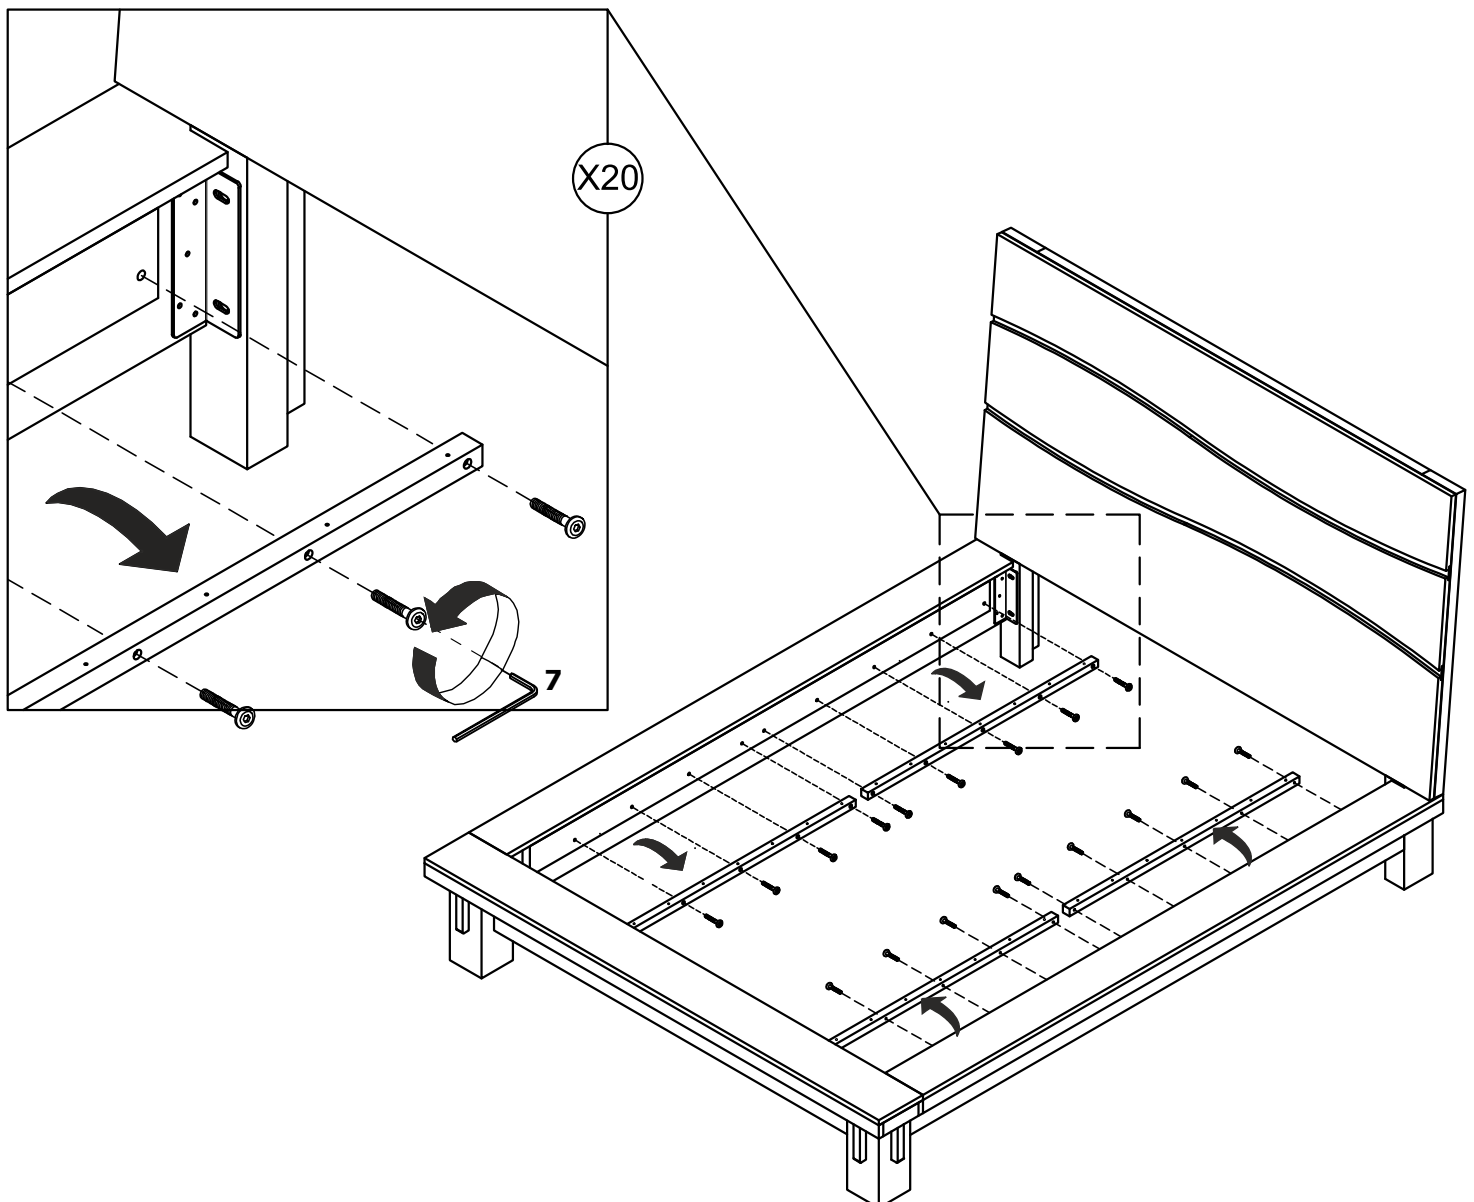

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.