

ROHL®

Authentic Luxury for Kitchen and Bath®

www.rohlhome.com



Pictured with black porcelain levers and handshower. Must be purchased separately.

4-Hole Deck Mount C-Spout Tub Filler

ROHL Italian Bath

A1464LM (Metal Levers)

A1464LP (Porcelain Levers)

A1464XM (Cross Handles)

A1464LC (Swarovski® Crystal Levers)

A1464XC (Swarovski® Crystal Cross Handles)

FEATURES

- Fixed spout
- 1/4-turn ceramic valves
- 4 x 1 5/16" cutouts
- 7 7/8" spout reach
- Single-function handshower **1.75 GPM**
- 6 1/2' hose
- Matching lav set A1408
- 15-17 GPM @ 45 PSI
- 3/4" NPT connectors
- Solid brass

COLORS/FINISHES

- Polished Chrome
- Polished Nickel
- Satin Nickel
- Tuscan Brass
- **Italian** Brass
- Old Iron*


*Old Iron finish only available for A1464LM and A1464XM

WARRANTY


- Limited Lifetime*

* No Warranty on Tuscan Brass Finish (TCB)

A1464LM & A1464LP

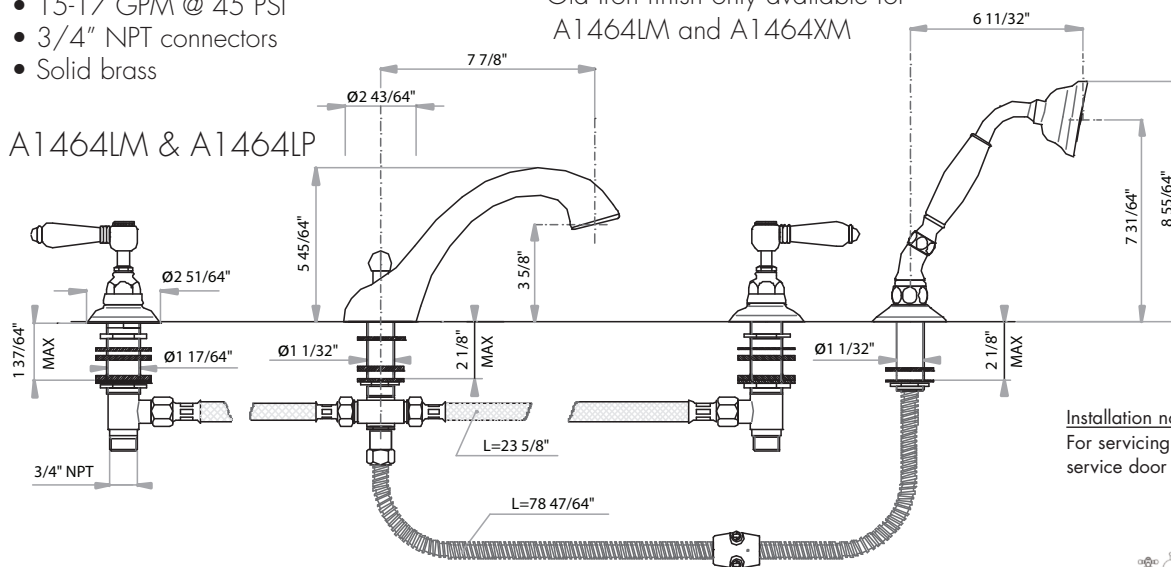


Installation note
For servicing after installation, install a service door near the valves

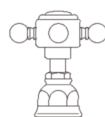


A1464XM



A1464LC

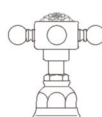

A1464XC

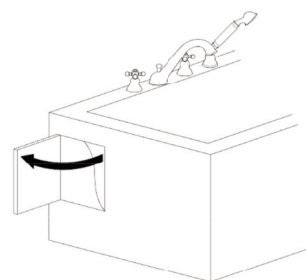


Consult your local ROHL showroom for additional information and specifications. For complete warranty details and a list of showrooms, go to www.rohlhome.com.

ROHL®

Authentic Luxury for Kitchen and Bath®

www.rohlhome.com

A1464 Spare Parts

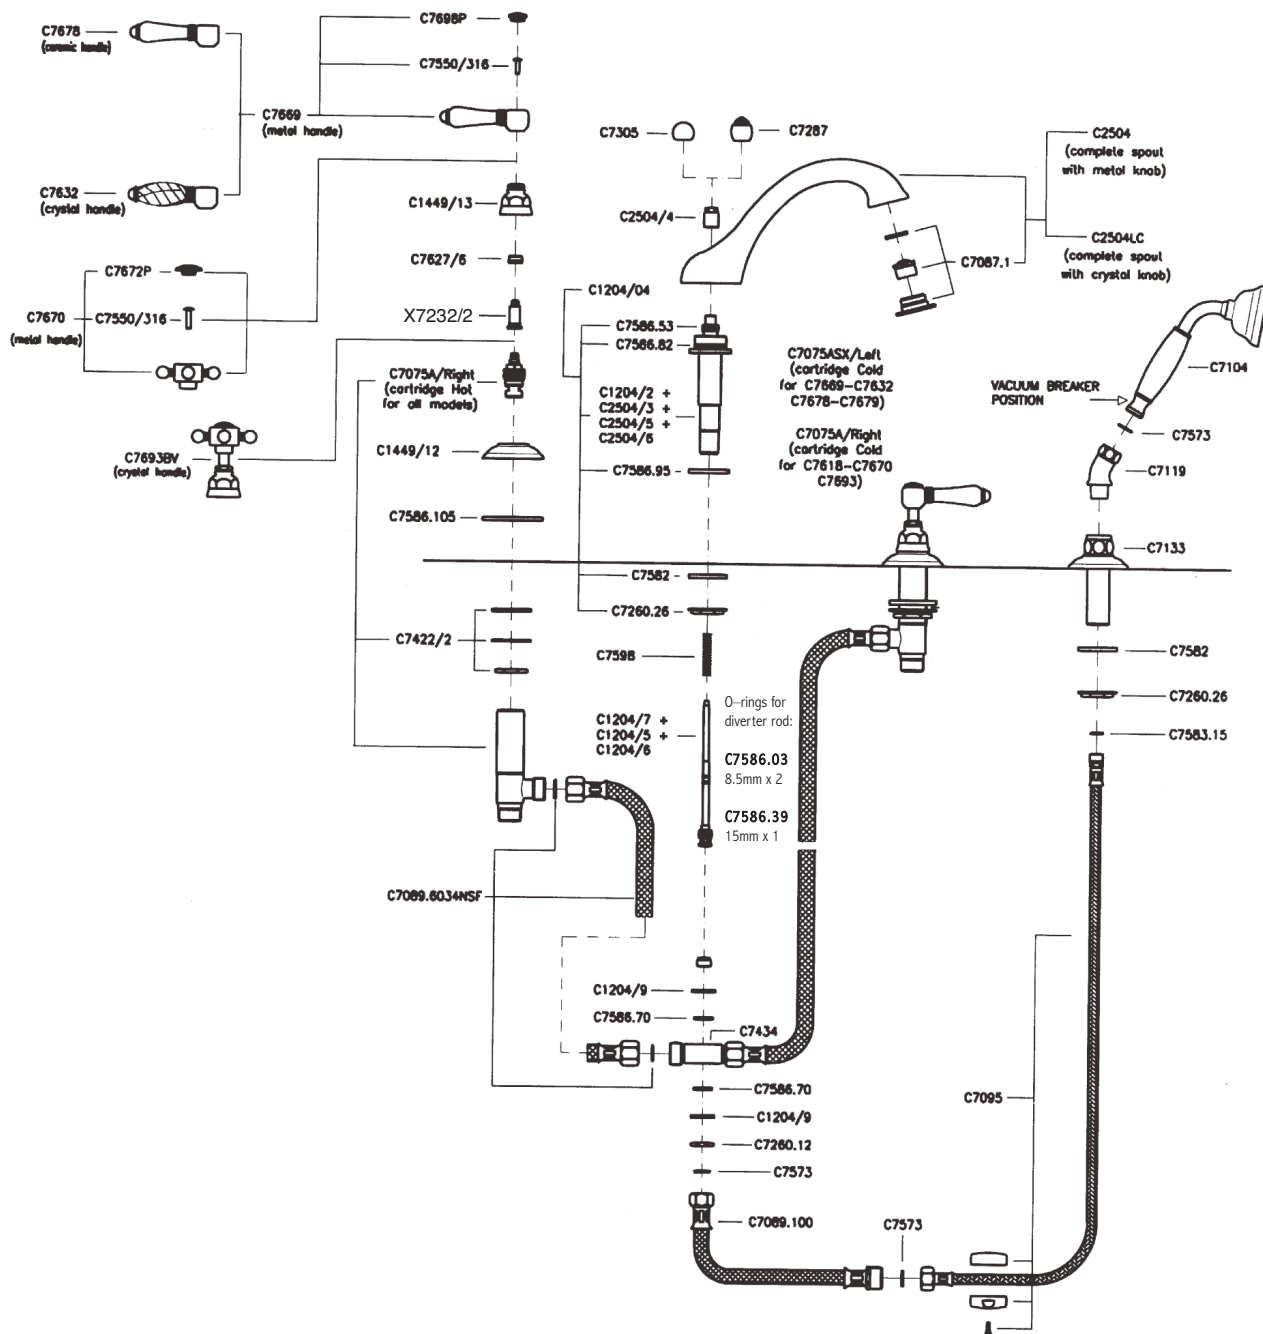

Consult your local ROHL showroom for additional information and specifications. For complete warranty details and a list of showrooms, go to www.rohlhome.com.

Installation Instructions

INSTALLATION AND CARE & MAINTENANCE GUIDE

Installation guide

Bath mixer on edge type with 4 holes

Art. A1464X--


Art. A14641 C--

Art. A1464| M--

Art. A1464XM--

Art. A1464LP--

Art. A1464XC--

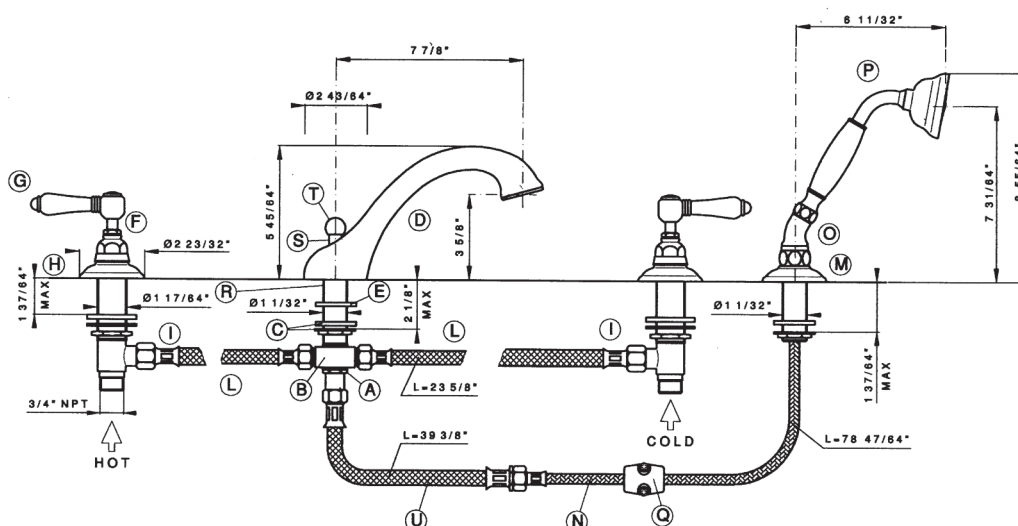

Installation must comply with local plumbing codes

a - Preparation

Flush out the pipework to remove any foreign matter.

The hot supply should be on the left when viewed from the front of the fitting.

b - Assembly

- Disassemble the nut (A), the two holes cross (B) and the fixing kit (C).
- Introduce the spout shank (R) in the hole of the deck, placing the rubber washer (E), between the base of the shank and the deck.
- Fix the shank (R) placing, before the washer and then the metal disk and the nut.
- Introduce the spout body (D) in the spout shank (R) and fix it, placing before the block connection (S) and then the knob (T).
- Assemble the two hole cross (B) placing, before the metal ring and then the O-Ring washer.
- Fix the two holes cross (B) placing, before the O-Ring and then the metal ring and the nut (A).
- Unscrew the cover valve (F) and extract the handle set (G). Unscrew the cap (H).
- Assemble the valve body (I), placing before the nut and then the metal disk and the rubber washer.
- Introduce the valve body (I) in the hole of the deck and fix it, placing before the o-ring washer and then the cap (H).
- Assemble the handle set (G) screwing the cover valve (F). ATTENTION: Be sure that the handle has no play.
- Unscrew the cap (H) just to get in touch with the cover valve (F).
- Lock the valve body (I) underside with the brass nut.

Installation Instructions

ATTENTION

Maximum fixing nut torque value = 10 lbf.ft.

- Repeat this procedure for the cold valve.
- Connect the hot and cold valve body (I) to the two holes cross (B) using the flexible hoses (L) and placing the washer between the two parts.
- Unscrew the fixing kit of the shower holder on both edge (M).
- Introduce the shower holder in the hole of the deck and fix it, placing before the rubber washer and then the metal disk and the nut.
- Connect the nylon flex hose (N) to the stainless steel hose (U), placing the washer between the two parts.
- Connect the stainless steel hose (U) to the spout (D) with the hexagonal nut, placing the washer between the two parts.
- Introduce the other end of hose in the shower holder (M).
- Connect the hose to the curved joint (O), placing the washer between the two parts.
- Connect the hand shower (P) to the curved joint (O), placing the washer between the two parts.
- Assemble counterweight (Q) at the nylon flex hose (N).
- Connect hot and cold water supplies to side valve inlet.
- Ensure all connections are firmly tightened.

c - Before use

Turn on the Hot and Cold supplies to the faucet.

Maximum temperature for Hot water supply to the faucet is 145° F.

Minimum recommended pressure is 15 psi — Maximum recommended pressure is 75 psi.

Check the installation carefully for leaks.

If further building work is to be carried out in the vici of the faucet, it should be covered to prevent paint, adhesive, etc. from damaging the surface.

Care and use for finishes

Country Bath Products are all authentic finishes that have not been coated with any product.

After each use, pat the fixture down to remove any excess water. This will prevent any water spotting or mineral build-up. Use only soft liquid soap and water to clean the surface. Use a soft brush to clean any gaps. Avoid any products that have ammonia or alcohol like Windex, 409 or Fantastik. These products can damage the finish leaving black or white spots. Never use an abrasive product like Softscrub, Comet, Ajax or Bon Ami.

For deep polishing we recommend Bruno's Wax for all finishings.

Tuscan Brass is a living finish and has no warranty. It will lighten with use. To extend the life of the finish, apply Bruno's Wax by patting it on, letting it dry and patting it off. Never rub or buff this finish.

WARNING: the use of cleaning products not recommended might irreparably harm the surfaces of the faucets which in such case are not covered by our warranty.

Limescale

The faucet is fitted with an aeration device in the Hot/Cold water outlet.

This may need occasional cleaning especially in hard water areas.

This is accomplished by unscrewing the outlet in a counter clockwise direction, dismantling and leaving the inner screen mesh immersed over night in vinegar or lemon juice.

Do not use chemical descaling liquids for this purpose.

