


Item # : HLLK2IWH

Assembly Instructions

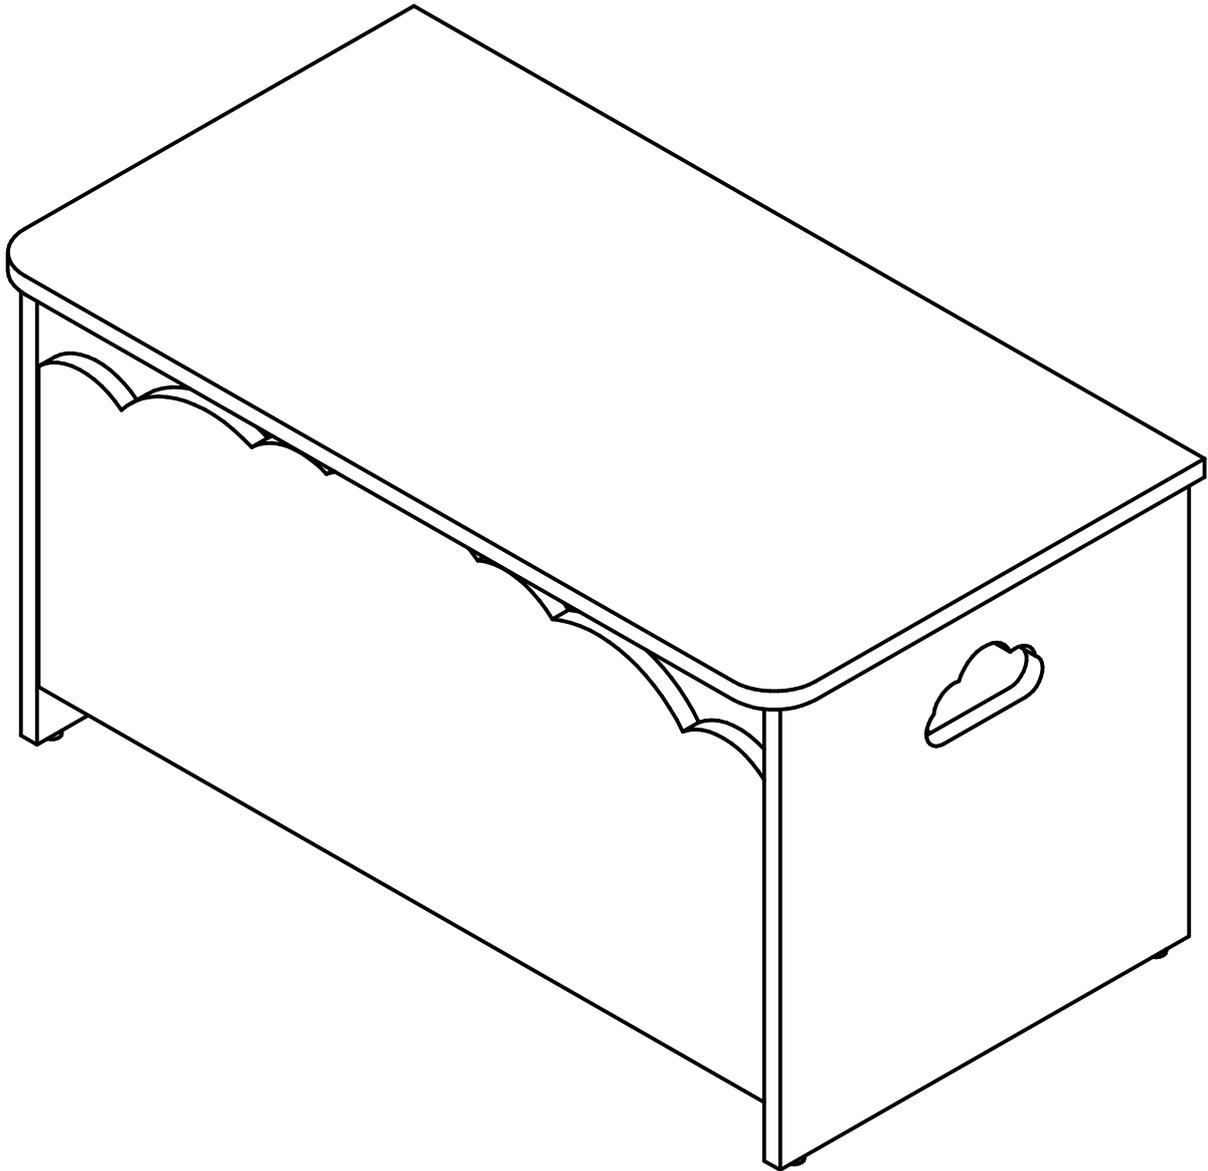


Please visit our website for the most current instructions, assembly tips, to report damage, or request parts. www.walkerediton.com



Revised 07/2022

General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The two main types of hardware used to assemble this product are: wood dowels and screws.
- V. A Phillips head screwdriver is required for the assembly of this product (not included)





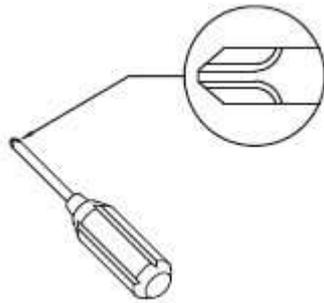


Parts List

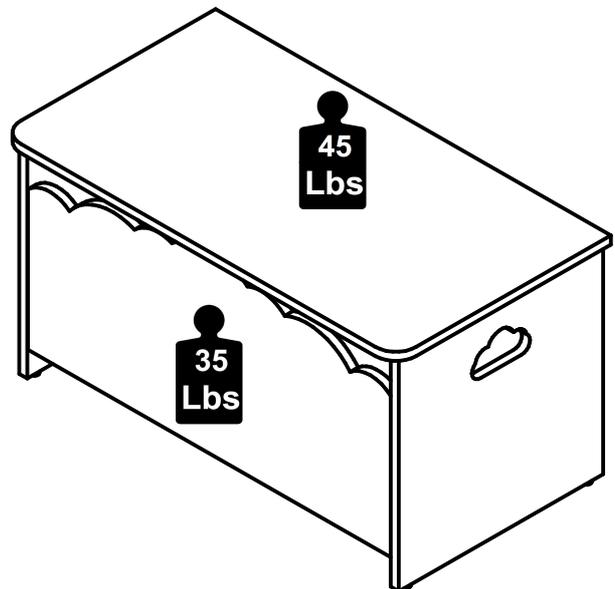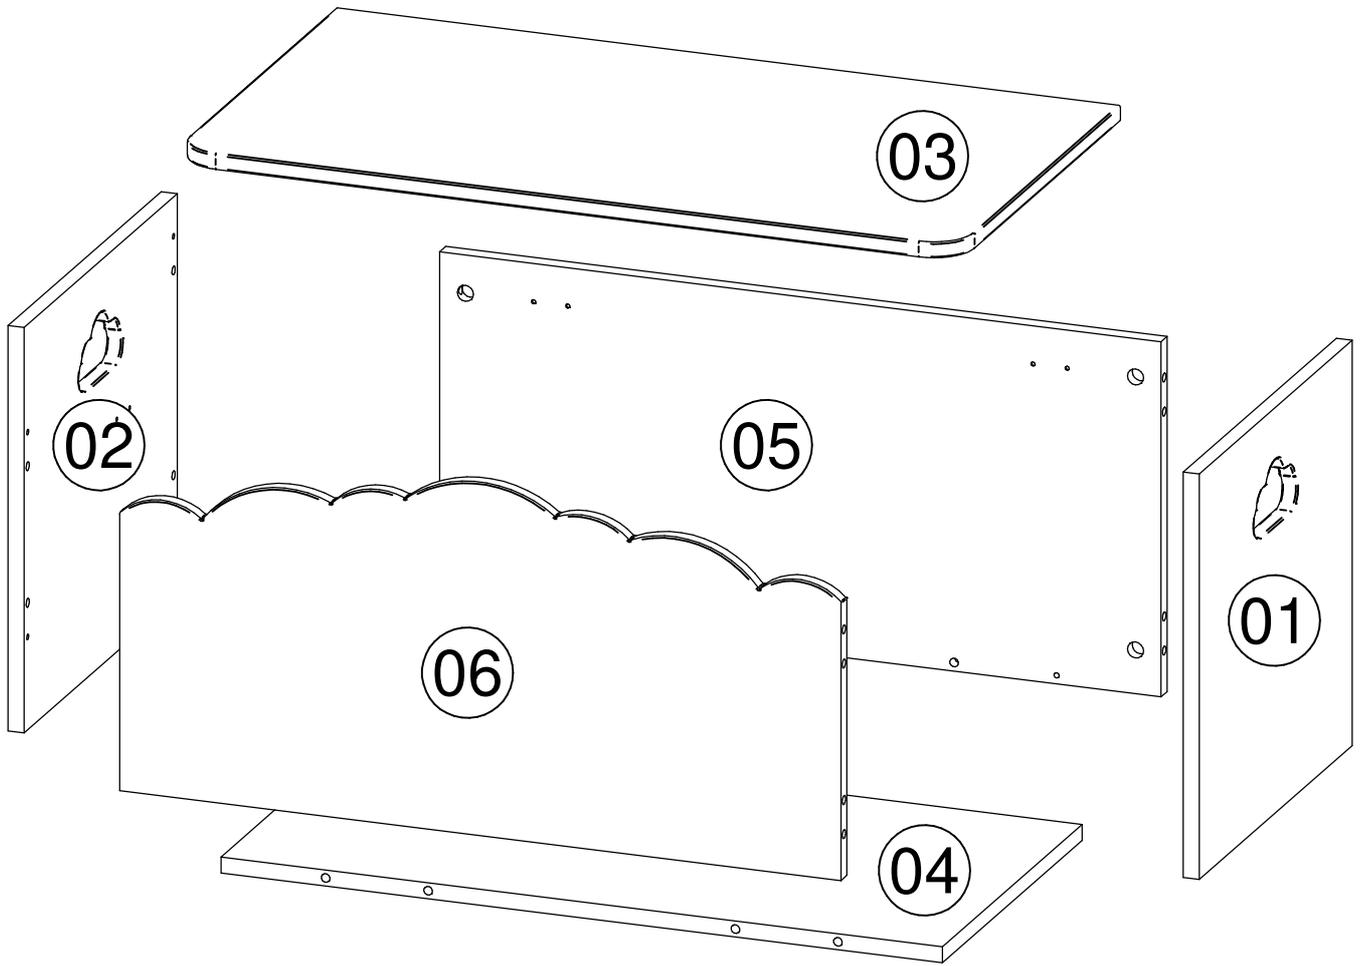


Part#	Description	Qty
01	Right Side Panel	1
02	Left Side Panel	1
03	Top Panel	1
04	Bottom Panel	1
05	Back Panel	2
06	Front Panel	1

Hardware List

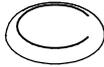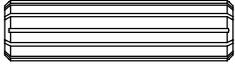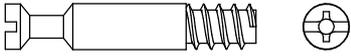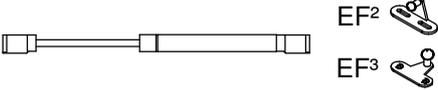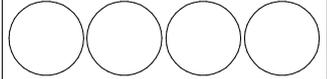
AF		Ø 8x1,5mm	Silicone Stop	2 pcs
AT		Ø 8x30mm	Wooden Dowel	12 pcs
B		Ø 6x35mm	Cam Bolt	12 pcs
C		Ø 15mm	Cam Lock	12 pcs
D		Ø 3,5x14mm	Screw	12 pcs
DB		Ø 35mm	Hinge	2 pcs
EF		270mm	Piston 60N	1 pcs
EN		Ø 1,5x22mm	Nail	4 pcs
X		Ø 5x14mm	Foot	4 pcs
Y		Ø 19mm	Sticker	8 pcs

STEP 1. Secure cam bolts (B) into parts (1,2,4,5). Insert dowels (AT) into parts (4,5).

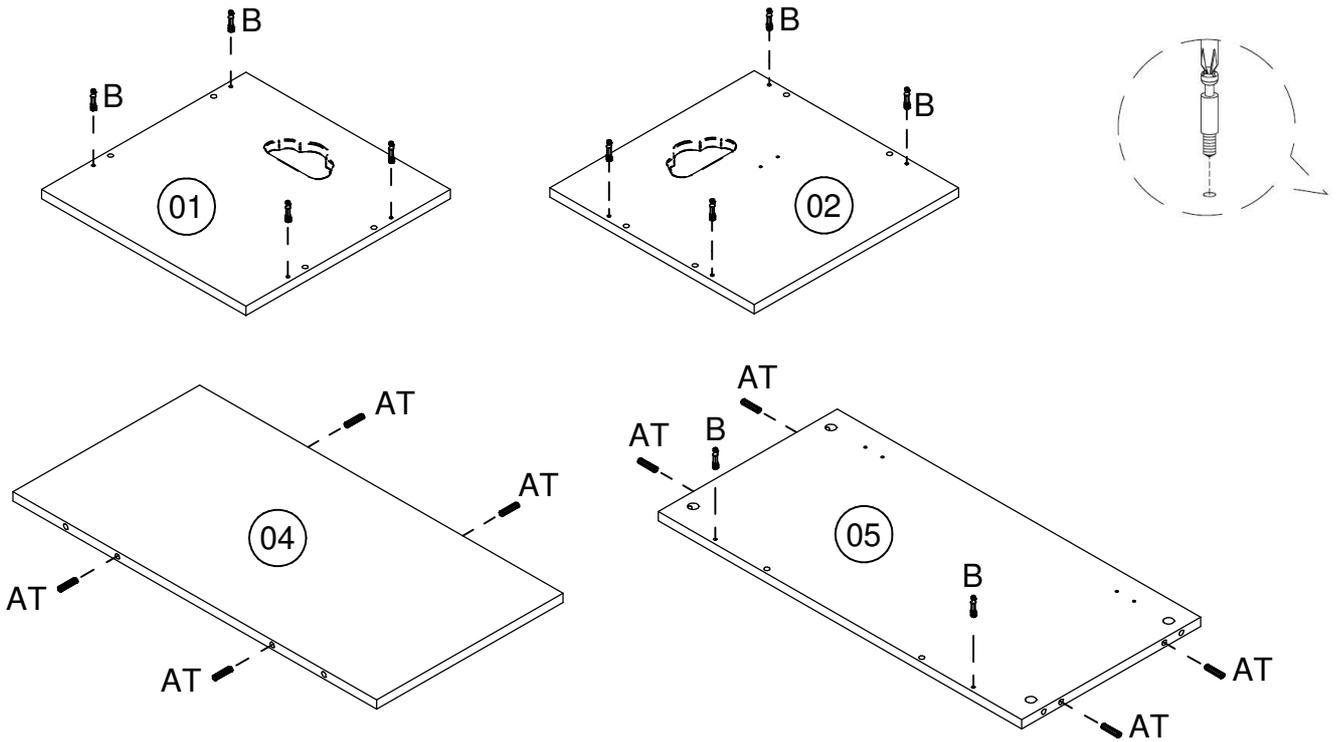




AT		Ø 8x30mm	8
B		Ø 6x35mm	10

STEP 2. Secure feet (X) to parts (1,2) using nail (EN). Secure support (EF³) to part (2) using screw (D).

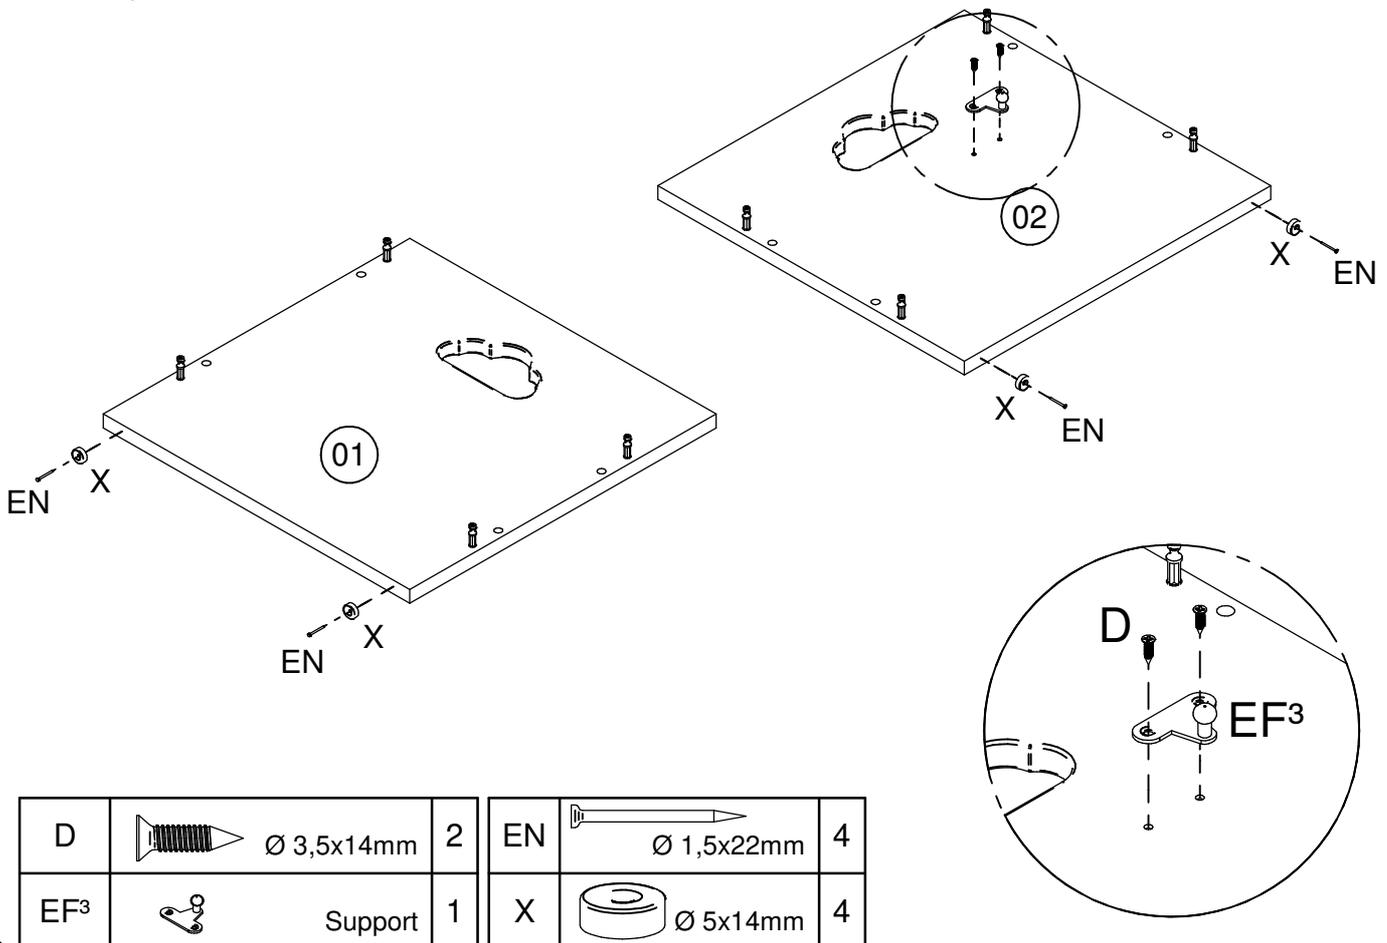



D		Ø 3,5x14mm	2	EN		Ø 1,5x22mm	4
EF ³		Support	1	X		Ø 5x14mm	4

STEP 3. Attach hinge (DB) and support (EF²) to part (3) using screw (D). Secure cam bolts (B) and dowels (AT) into part (6).

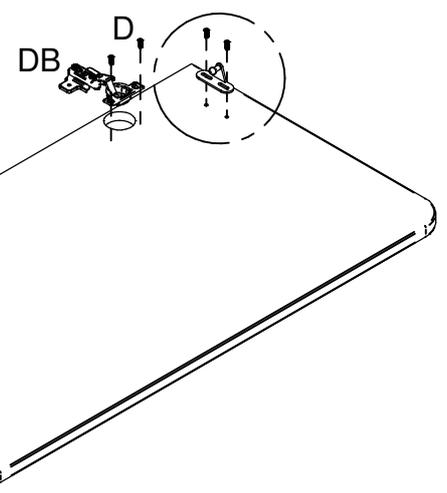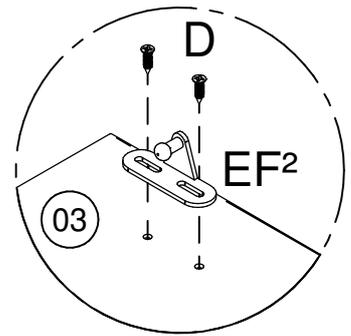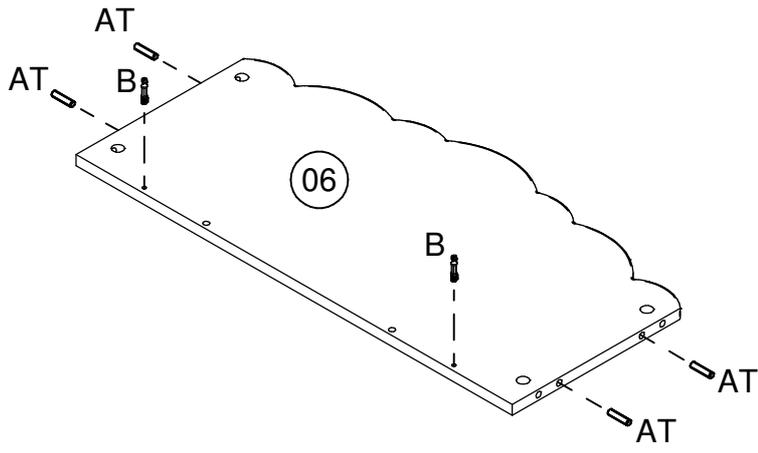


AT		Ø8x30mm	4
B		Ø 6x35mm	2
D		Ø3,5x14mm	6
DB		Ø35mm	2
EF ²		Support	1

STEP 4. Secure part (4) to part (5) and part (6) using cam lock (C).

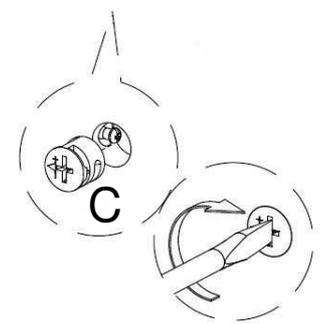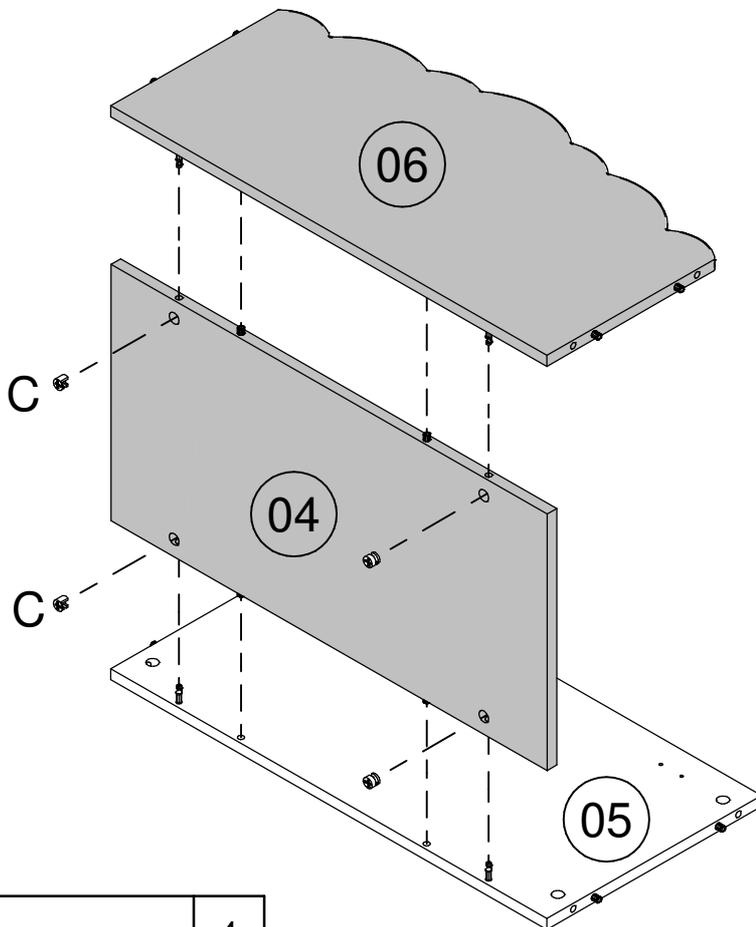



C		Ø15mm	4
---	--	-------	---

STEP 5. Secure the parts (1,2) to part (5) and part (6) using cam lock (C).

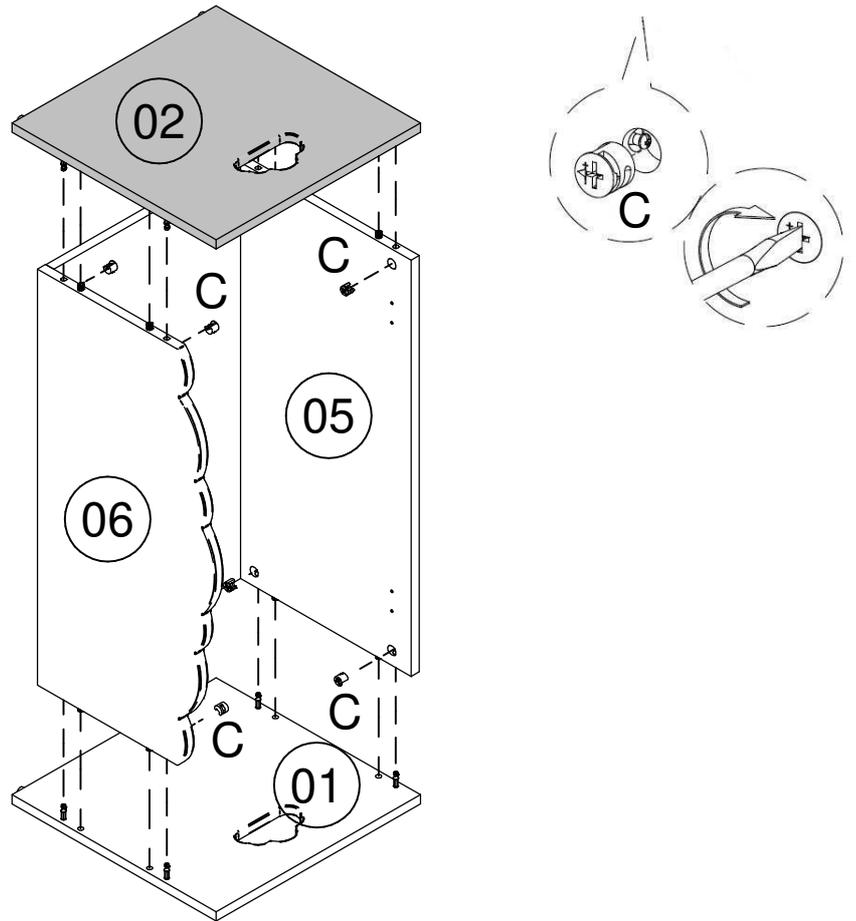


C		Ø15mm	8
---	---	-------	---


STEP 6. Attach top panel (3) to body using screws (D).

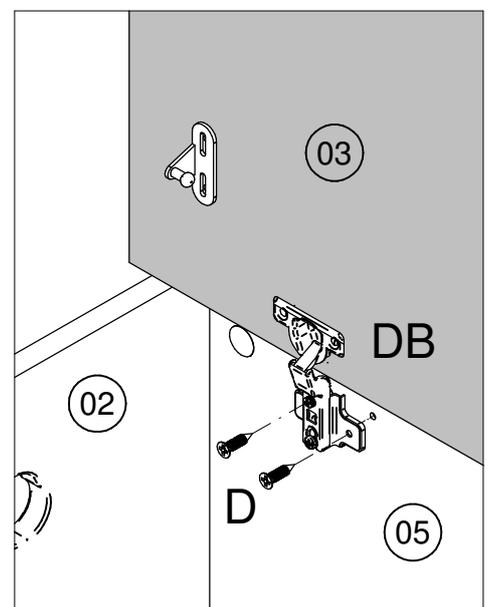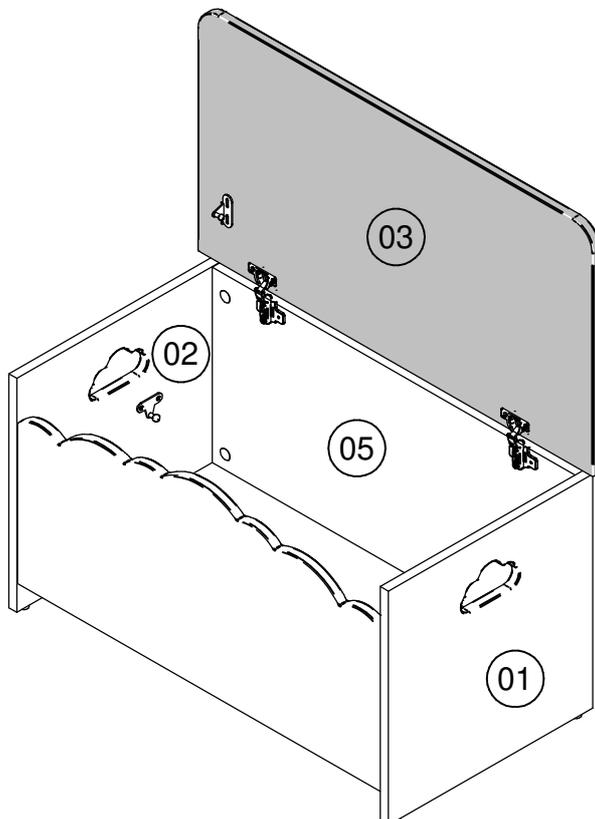


D		Ø3,5x14mm	4
---	---	-----------	---

STEP 7. Attach piston (FE) to the supports (FE²,FE³).

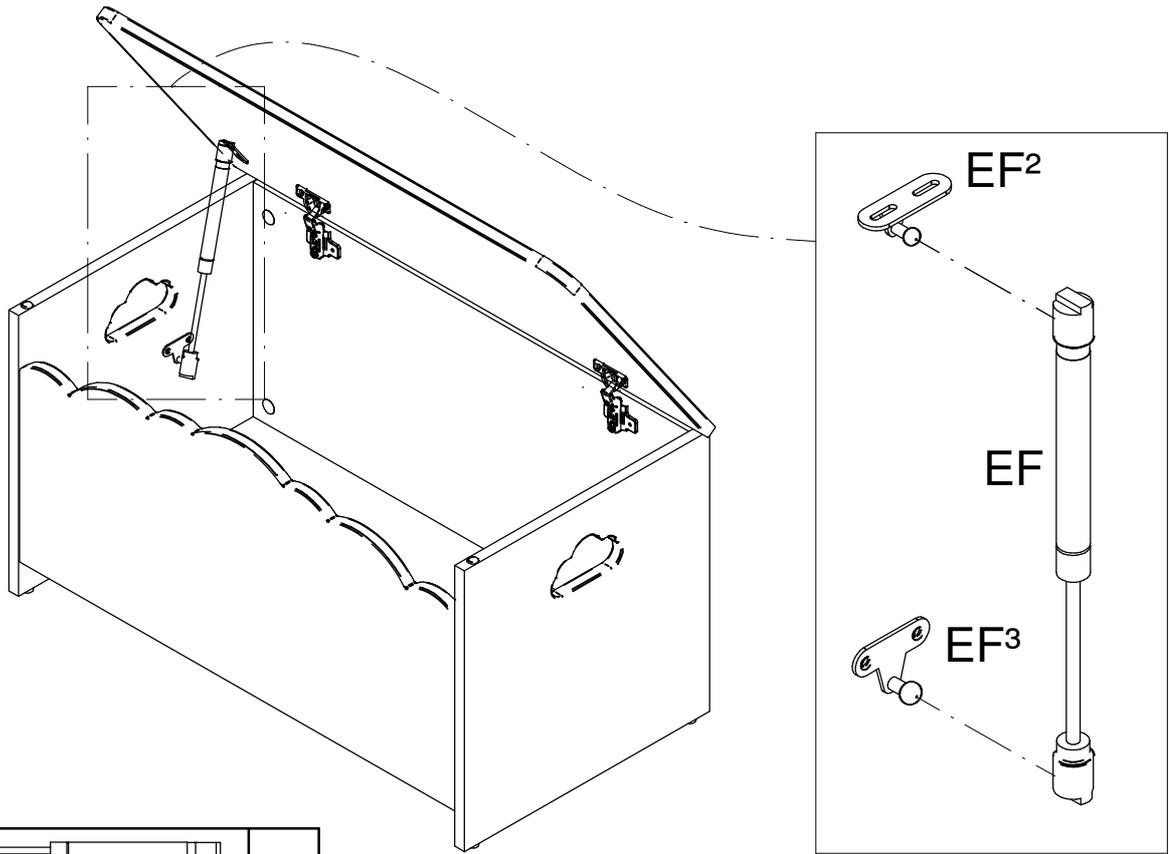

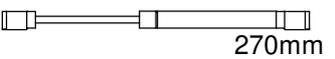EF		270mm	1
----	---	-------	---

STEP 8. Attach stickers (Y) to the cam lock (C).

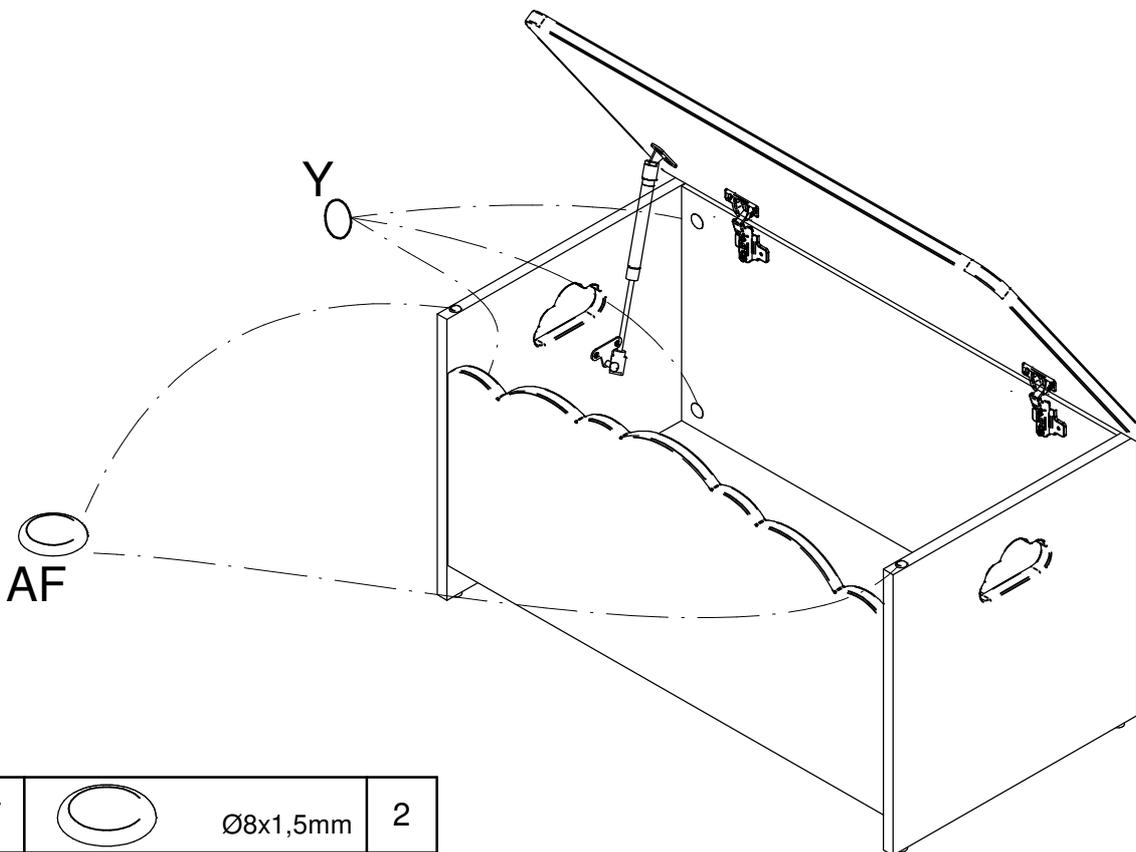

AF		Ø8x1,5mm	2
Y		Ø19mm	8