


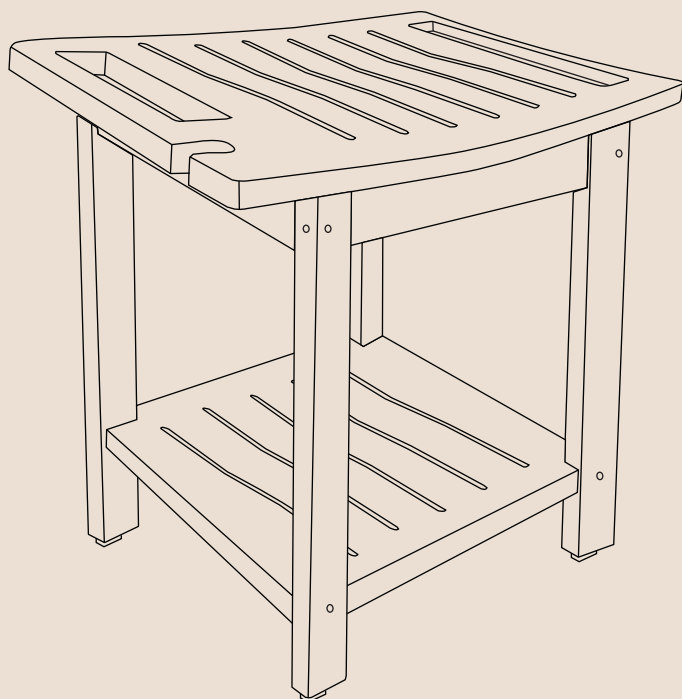

DESIGNED IN CALIFORNIA



---

POLY SHOWER BENCH

---

# THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

---

## JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

***<https://westintrends.com/welcome>***



---

## QUESTIONS OR COMMENTS?

If you have questions reach out to  
[cs@westintrends.com](mailto:cs@westintrends.com)

---

FOLLOW, SHARE, & LEARN



---

## PRODUCT REGISTRATION

***<https://westintrends.com/apps/product-registration>***



ACCESSIBILITY - COMMUNITY - VALUE - SUSTAINABILITY

## ! CARE & MAINTENANCE

**Please keep this instruction for your future reference.**

- Be careful when assembling, avoid damaging the painted surface.
- Clean the bench with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, do not use any part of this item as a step ladder.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Do not overtighten screws. (Insert all screws before tightening screws.)
- Please do not exceed the weight limitations of this item.

## TOOLS REQUIRED



BENCH  
300 LBS  
CAPACITY



## HARDWARE

1

SCREW  
M6 x 60mm



2


SCREW  
M6 x 45mm



## PARTS


A

BENCH TOP

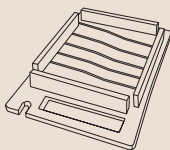


B

STORAGE  
LAYER

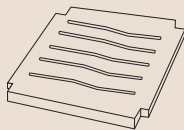


C

LEG I




D

LEG II



## PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this bench and learn the exact position of each part to be assembled.

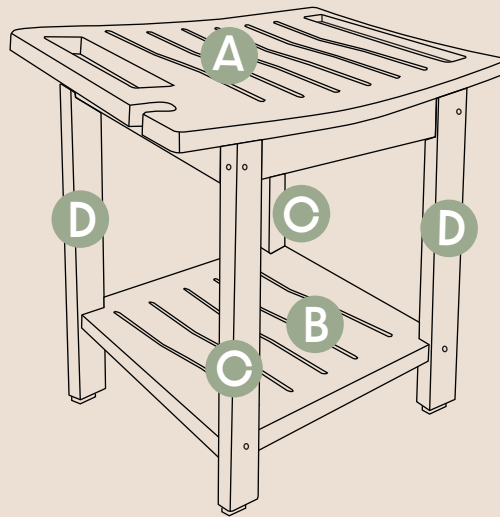


## PRODUCT ASSEMBLY

1

Place **Part A Bench Top** upside down on a flat surface.

Slide **Part D Leg II** down to the tenons of the rails. Attach **Part D Leg II** to the rails with 1 pc of **Hardware #1 Screw** towards the length and 1 pc of **Hardware #2 Screw** towards the depth.


Pay attention not to tighten the screws too much. Only tighten by about 70%.

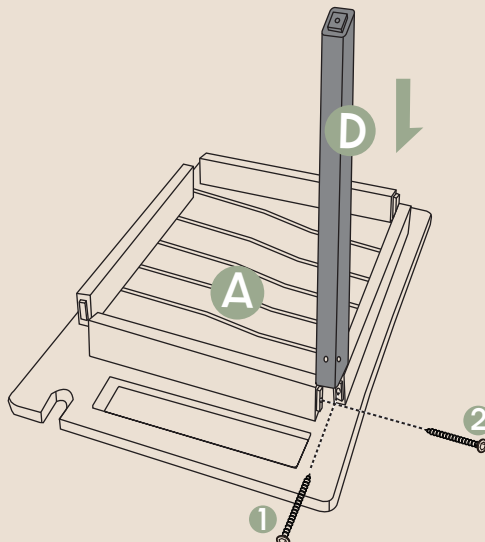

## PRODUCT ASSEMBLY


2

Slide **Part C Leg I** down to the tenons of the rails. Attach **Part C Leg I** to the rails with 1 pc of **Hardware #1 Screw** towards the length and 1 pc of **Hardware #2 Screw** towards the depth.

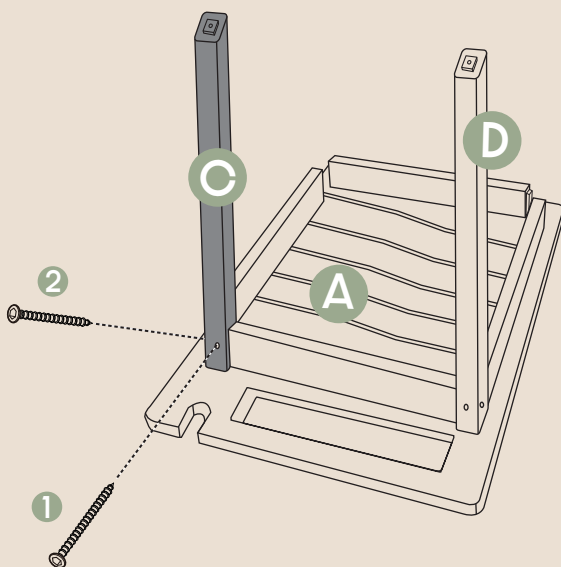

3

Do the same to attach another **Part C Leg I** and **Part D Leg II** to the rails with 2 pcs of **Hardware #1 Screw** towards the length and 2 pcs of **Hardware #2 Screw** towards the depth.

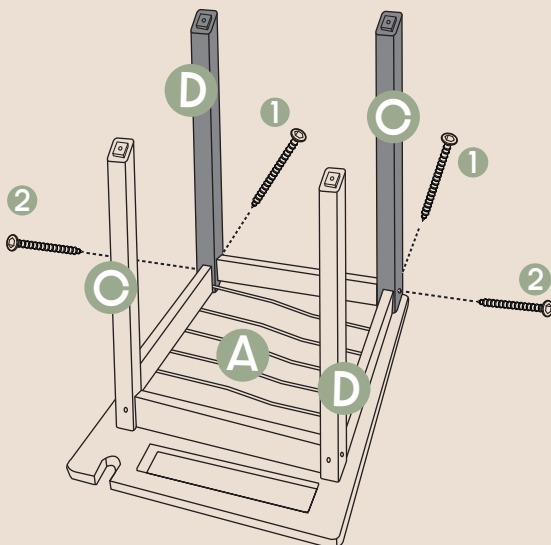


## PRODUCT ASSEMBLY

4

Place **Part B Storage Layer** between **Part C Leg I** and **Part D Leg II** as below.


Attach **Part B Storage Layer** to the legs with 4 pcs of **Hardware #2 Screw**.

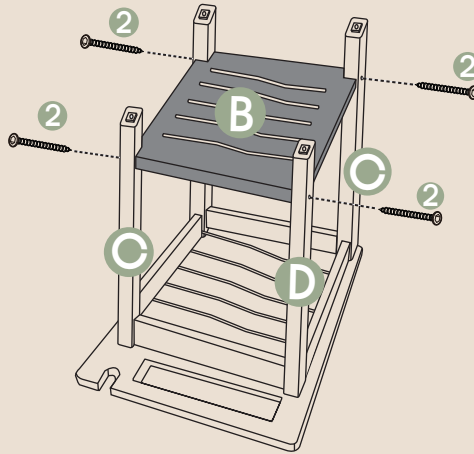

5

Check and tighten all the screws again to ensure the bench is steady enough.

Enjoy the bench now.

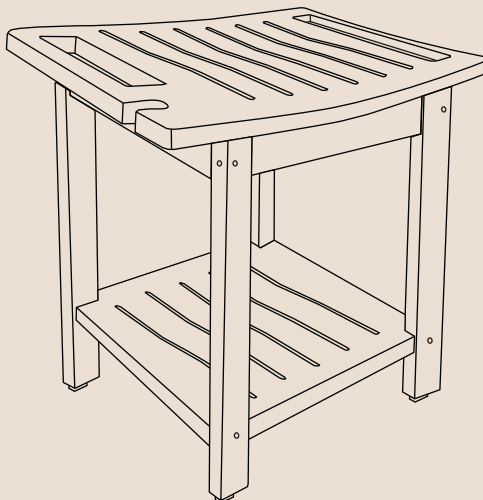

## REGISTRATION & REFUND POLICY

<https://westintrends.com/apps/product-registration>



<https://westintrends.com/policies/refund-policy>



### HAVING TROUBLE

- **Not sure how to assemble or missing pieces?**

Please contact our Customer Service Team for assistance at [cs@westintrends.com](mailto:cs@westintrends.com)

**Have Order #, Part # or SKU ready to speed up customer service!**

### CLEANING TIPS

**REGULAR CLEAN:** Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

**QUICK CLEAN:** You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

*Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.*

Pressure washer can be used for seriously deep-cleaning - **DO NOT exceed 1500 PSI** - this will remove any debris and dirt.