KINCAID®

SOLID WOOD SINCE 1946


www.kincaidfurniture.com
phone :828-728-3261.

ASSEMBLY INSTRUCTION

020-130 Whiteside Dresser

IMPORTANT NOTES

. Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
. Check to be sure that you have all parts and hardware.
. Remove all wrapping materials,including staples and packing straps before you start to assemble.
. Do not tighten all screws and bolts until completely assembled.
. Keep all hardware out of the reach of children

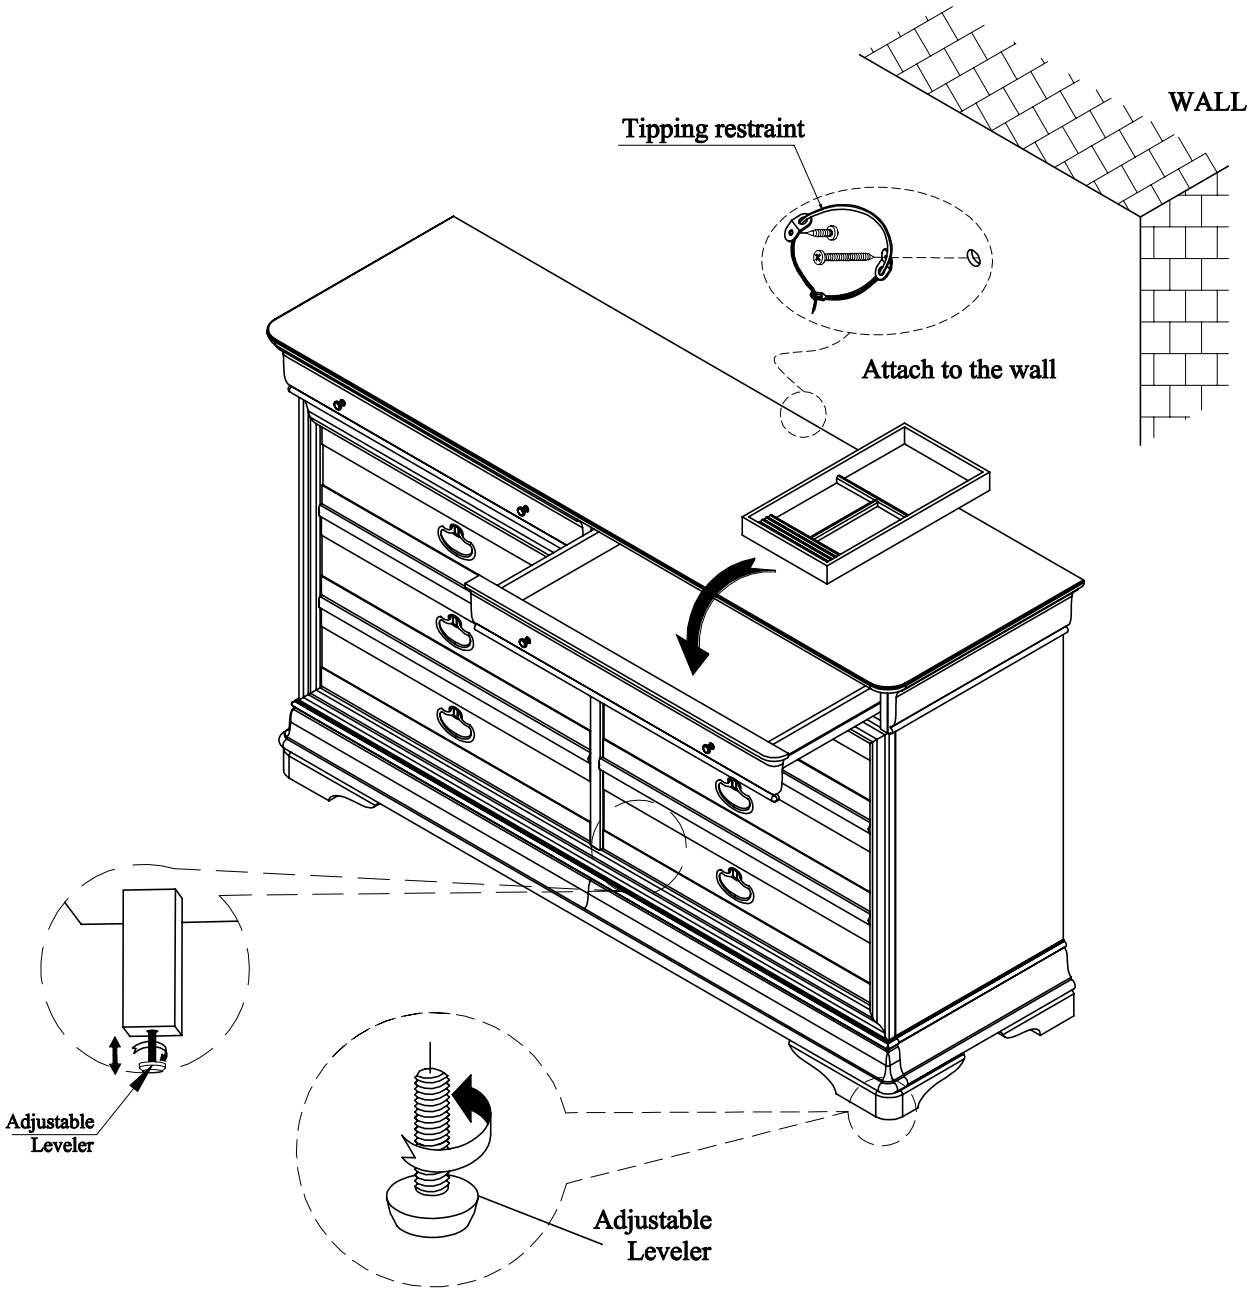

Adjust leveler if needed to level case on uneven floor.

MADE IN VIETNAM