KINCAID
SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

75/76 - 135/136 POSTER BED

www.kincaidfurniture.com
Phone : 828-728-3261.

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.

. Check to be sure that you have all parts and hardware.

. Remove all wrapping materials,including staples and packing straps before you start to assemble.

. Do not tighten all screws and bolts until completely assembled.

. Keep all hardware out of the reach of children.

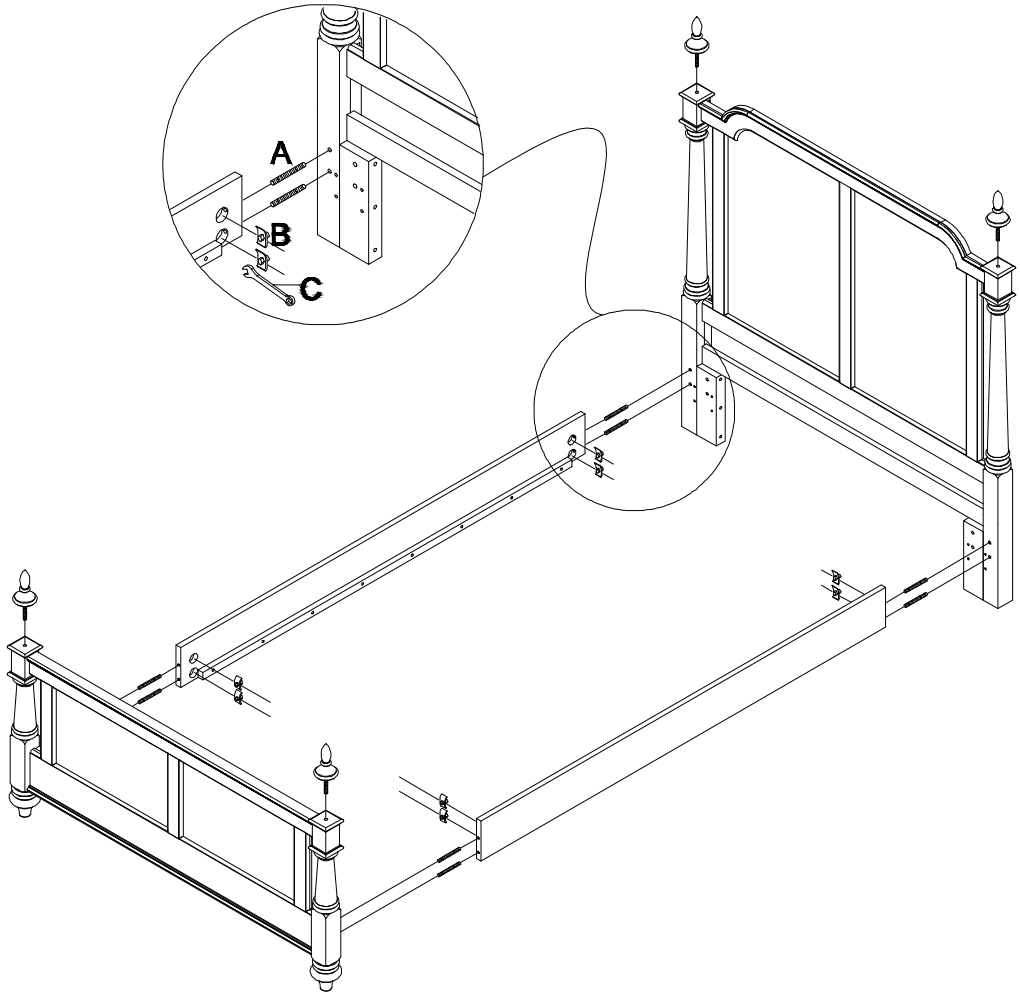

CODE	DESCRIPTION	QTY
A	THREAD ROD 5/16*3-7/16"	8
B	CURVED SLOTTED WASHER 5/16"	8
C	WRENCH	1

MADE IN VIETNAM