
Installation Instructions for Classic Range Dummy Knob

Step 1.


- Fold Template where indicated.
- Position template on door edge at desired height.
- Firmly hold template & mark 3 hole centres (2 off 8mm
- & 1 off 12mm) at required backset.
- Drill Pilot holes suggest 3mm, then enlarge to required size from both sides of door.

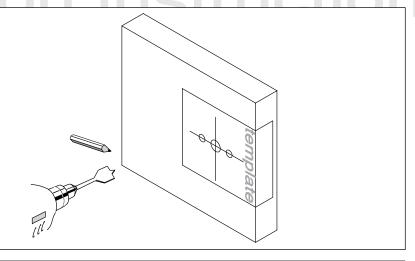

Step 2.

Install knob assembly to door

- Fit posts (7) to dummy plate (4) with screws (6).
 Place dummy plate (4) into position, on back of door.
- Fit fixing disc (3) to front of door & secure in place with screws (2).
- Place dummy knob assembly (1) onto fixing disc (3) and secure by turning the rosette in a clockwise direction until tight.

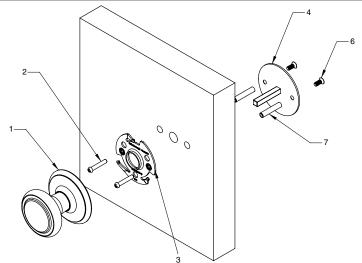


Carefully follow these instructions when installing. Screws to be tightened to a recommended 2.5Nm torque. NOTE:



FOLD HERE

8mm hole

12mm hole

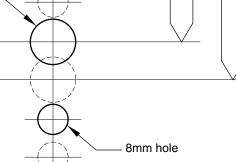

Installation template for dummy applications

Fit here on door edge

BACKSET 70mm

BACKSET 60mm



Gainsborough Allegion Australia Melbourne, Australia. A.B.N. I JÁEÏ Ï Â JÌ ÁFÎ FÁ www.gainsboroughhardware.com.au

CLADOC01YL1 JUN '12