


ASSEMBLY INSTRUCTIONS

Over Toilet Open Shelving Unit

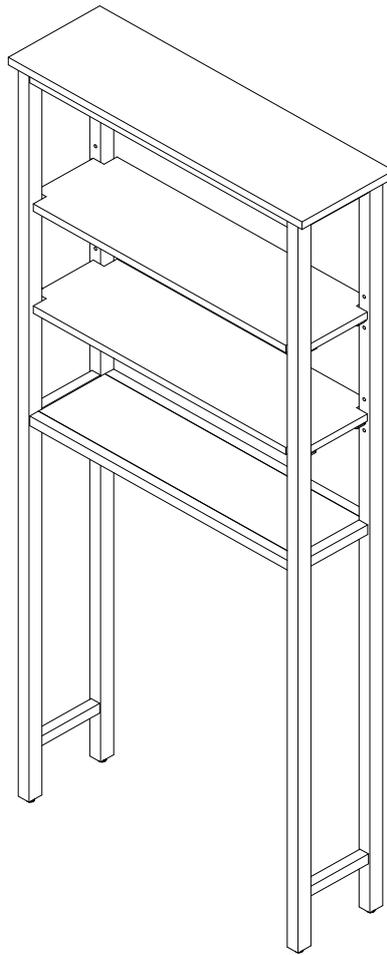



REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.

Order replacement parts and hardware at "boltonfurniture.com"





. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!
. Please assemble on a clean soft surface to avoid damage.

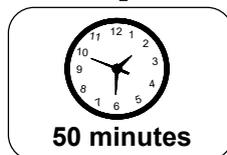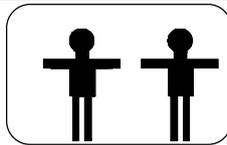

50 minutes


Tool Included

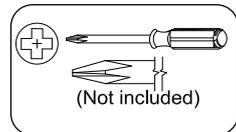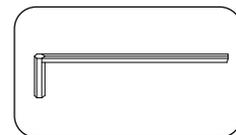




(Not included)

www.boltonfurniture.com

Part List-Over Toilet Open Shelving Unit

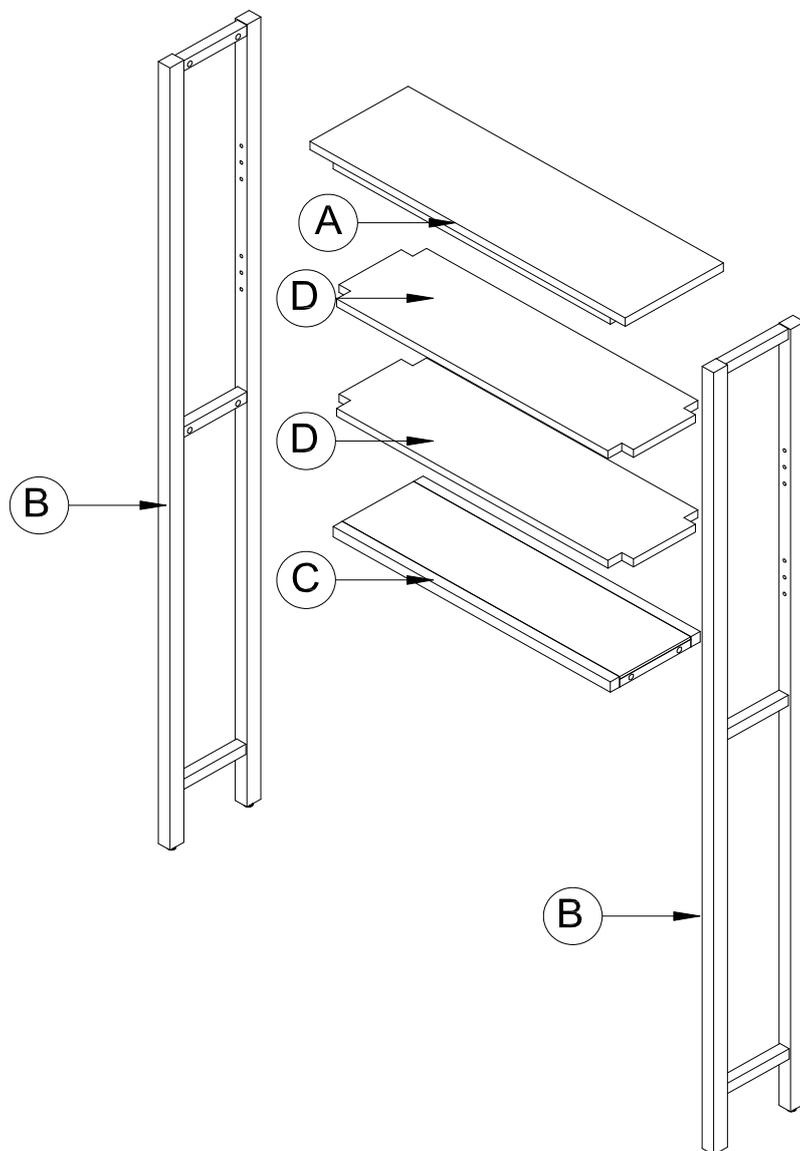

Identifying the hardware-Identify the hardware using the illustrations below.

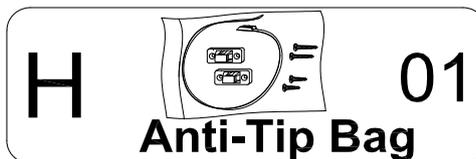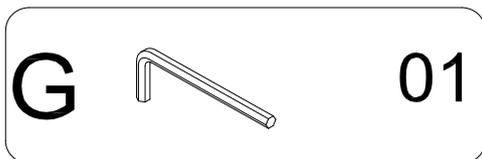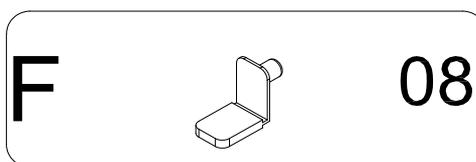


www.boltonfurniture.com

Step 1

E  02
M6X35mm


G  01

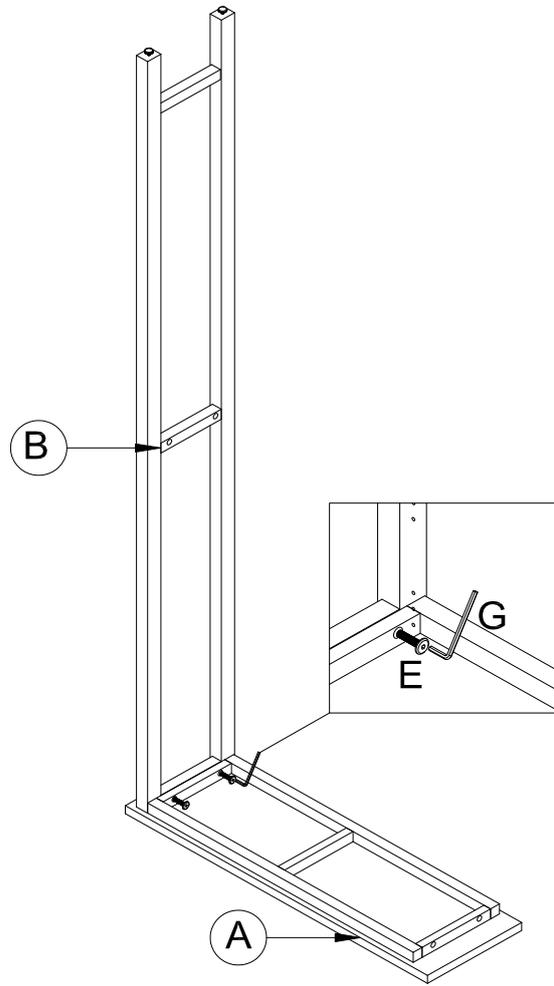

Step 2


E  02
M6X35mm

G  01

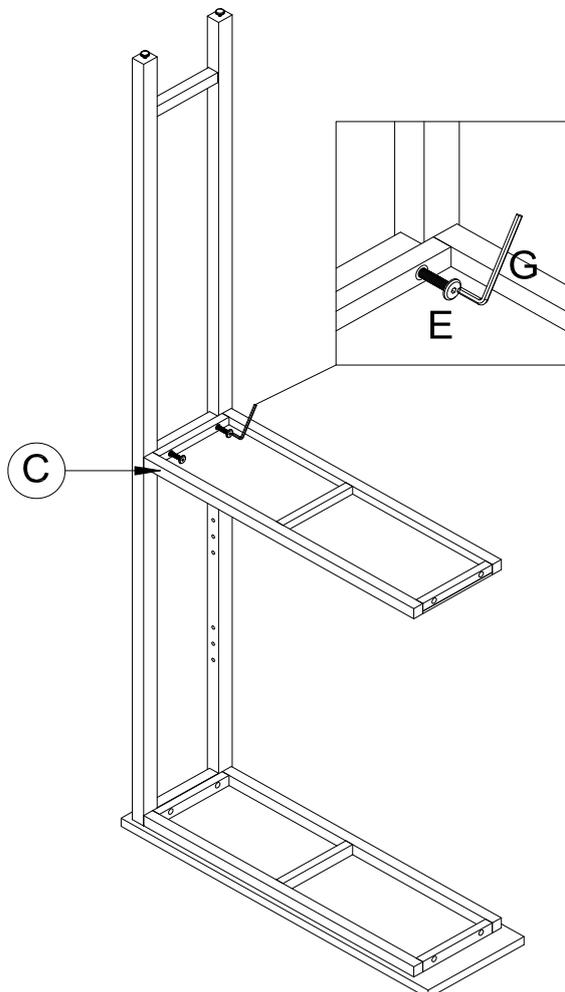



Step 3

E  04 M6X35mm G  01

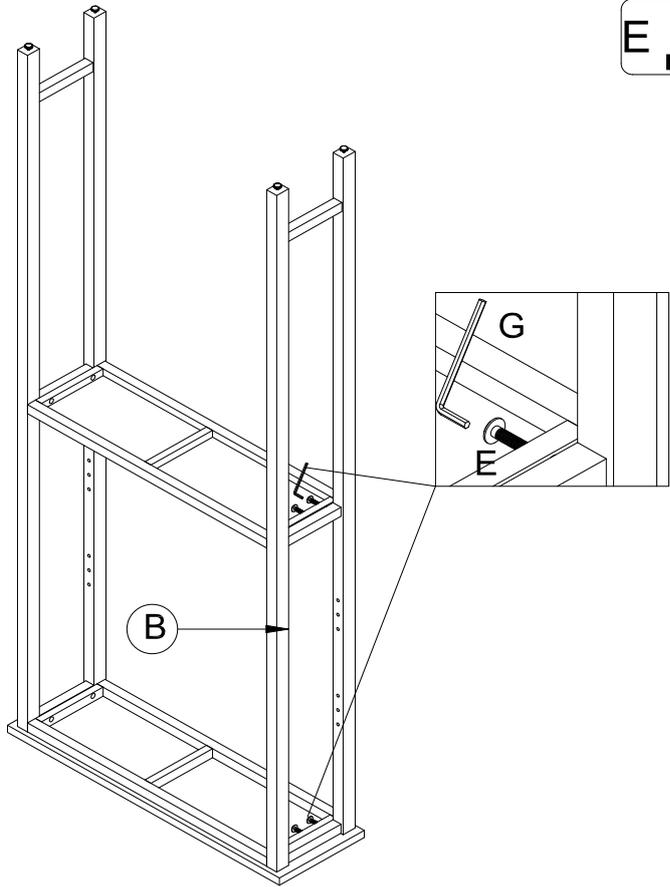



Step 4

F  08



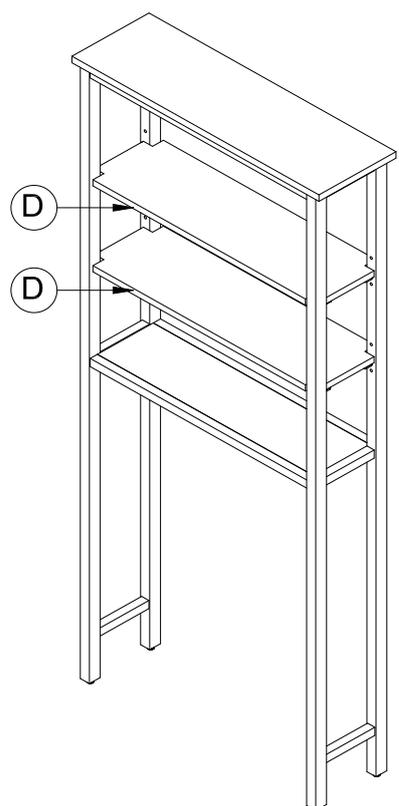
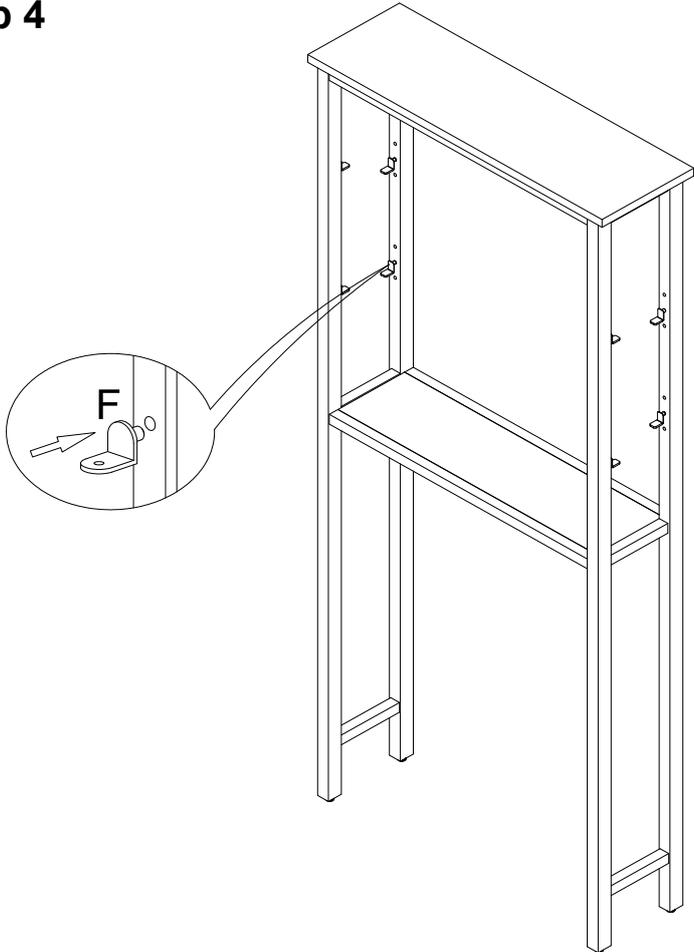


Step 5

"H" Anti-Tip Bag

A	 4x14 Screw	02	C	 Plastic wall bracket	02
B	 4x35 Screw	02	D	 Nylon strap 140mm	01

Secure to Stud behind Wallboard

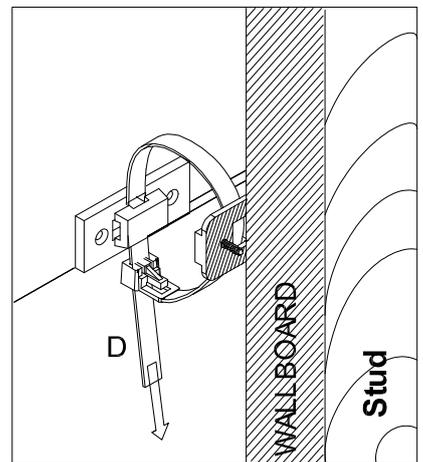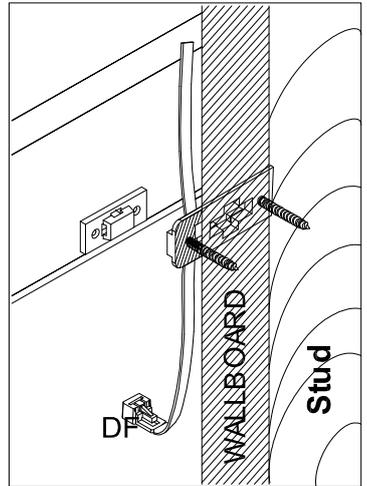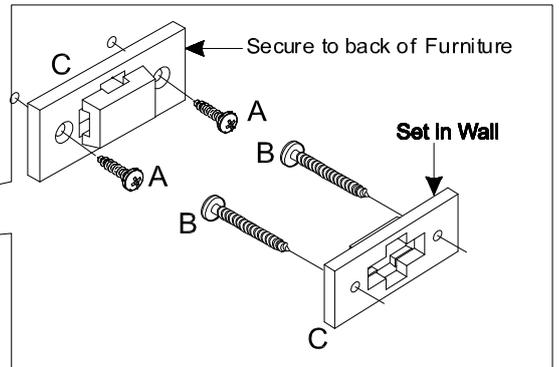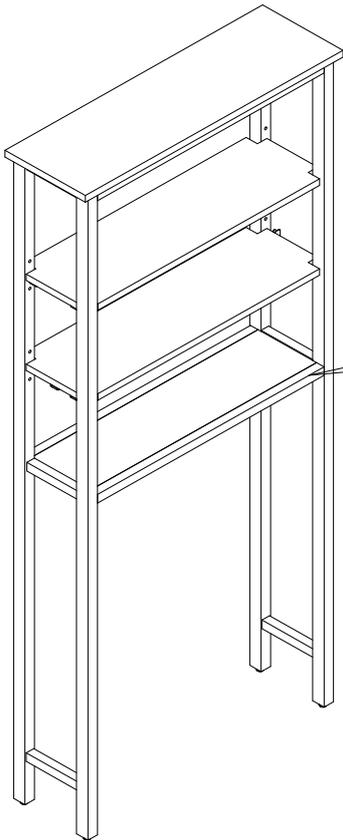

Secure to Stud behind Wallboard!

