



ASSEMBLY INSTRUCTION

BATH SINGLE STOOL


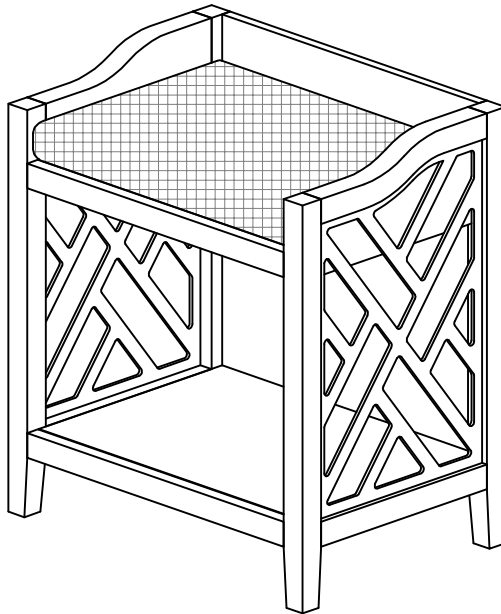


REPLACEMENT PARTS



Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "

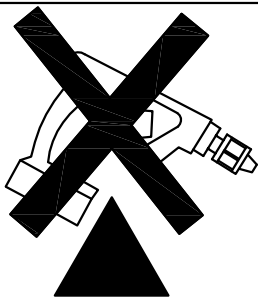

. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

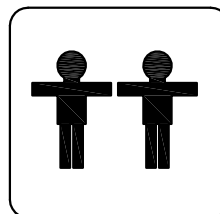


Tools Required

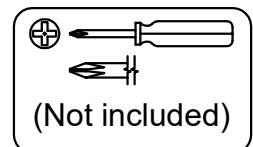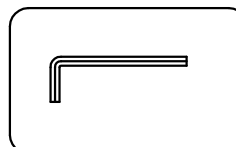

www.boltonfurniture.com


Part list - Bath Single Stool

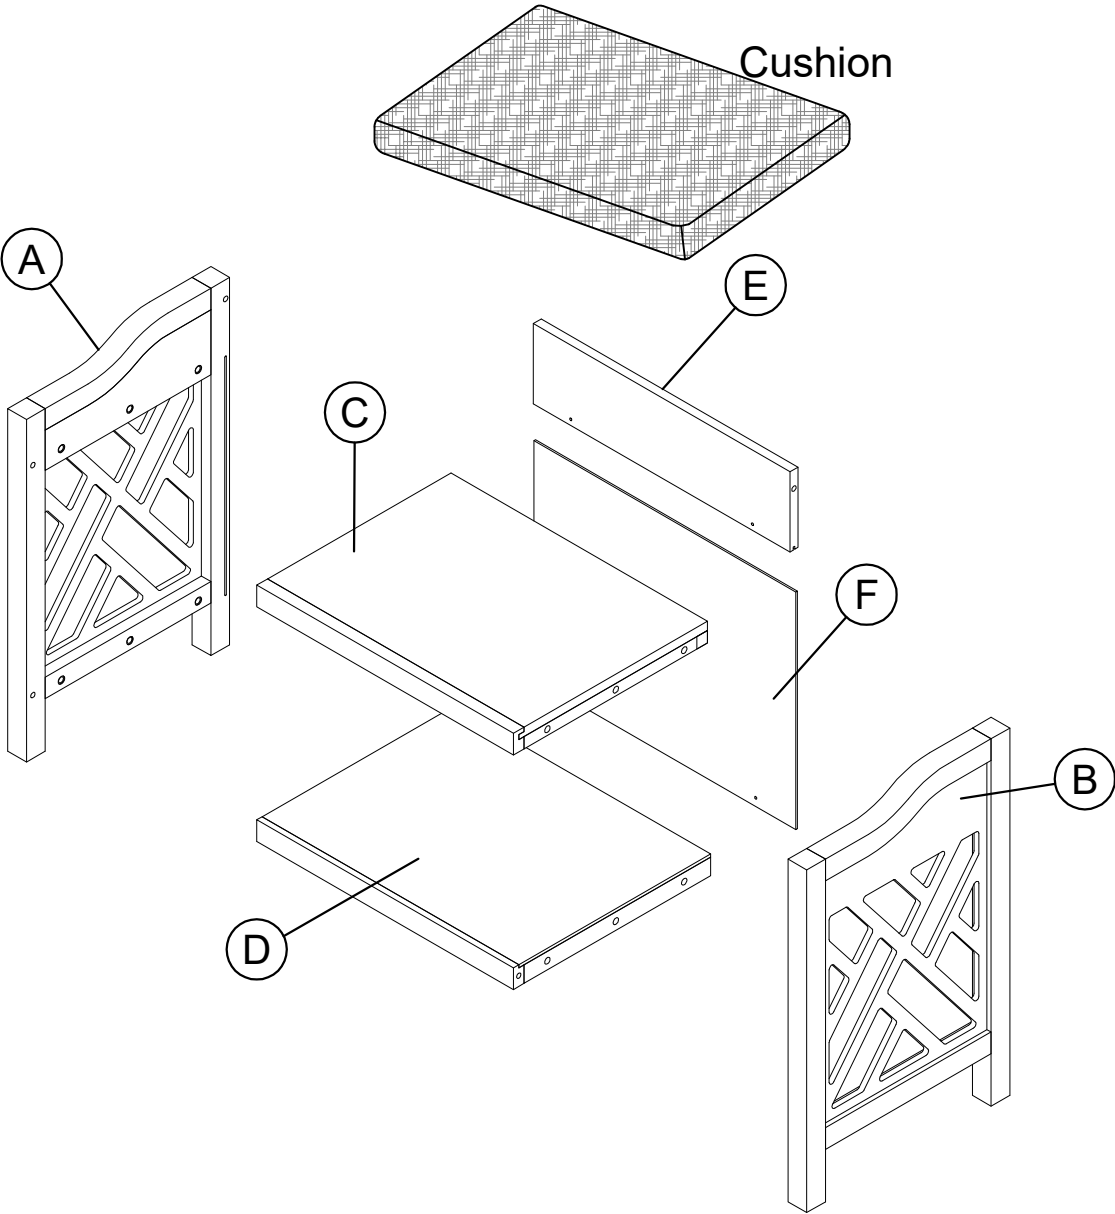

QTY	
A	1
B	1
C	1
D	1
E	1
F	1
CUSHION	1

Identifying the hardware-Identify the hardware using the illustrations below

1



M6 x 35MM BOLT

12


2



Ø8 x 30MM DOWEL

6

3



M4 x 30 SCREW

4

4




ALLEN KEY

1

STEP 1

1



6

2





2

4



1

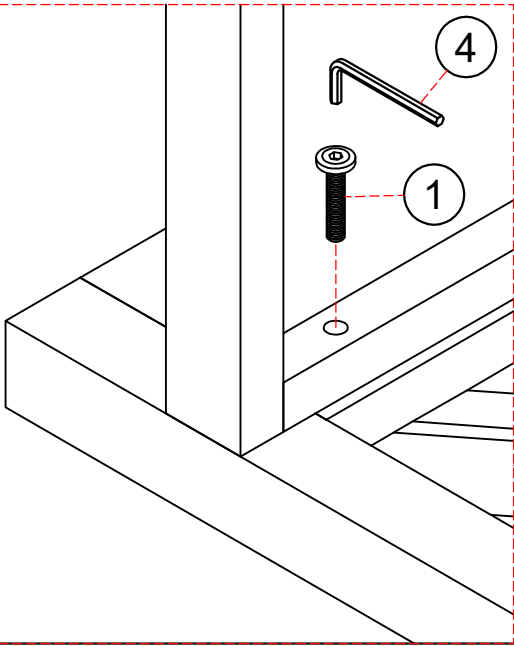

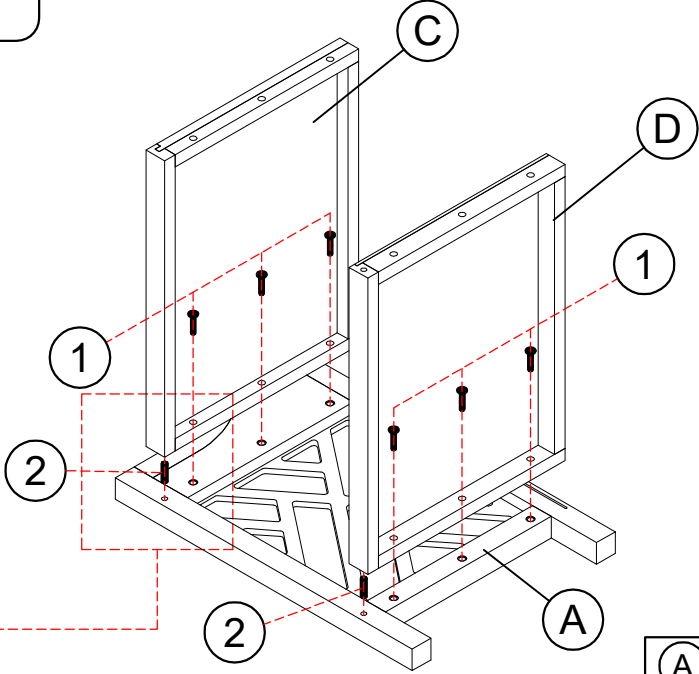


A	1
C	2
D	1

STEP 2

2




2

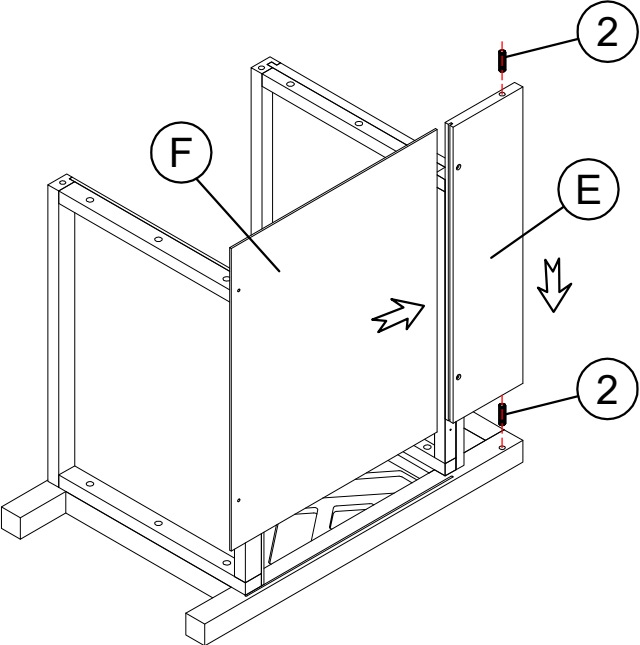

E	1
F	1

STEP 3

1



M6 x 35MM BOLT

6

2



Ø8 x 30MM DOWEL


2

4



ALLEN KEY

1

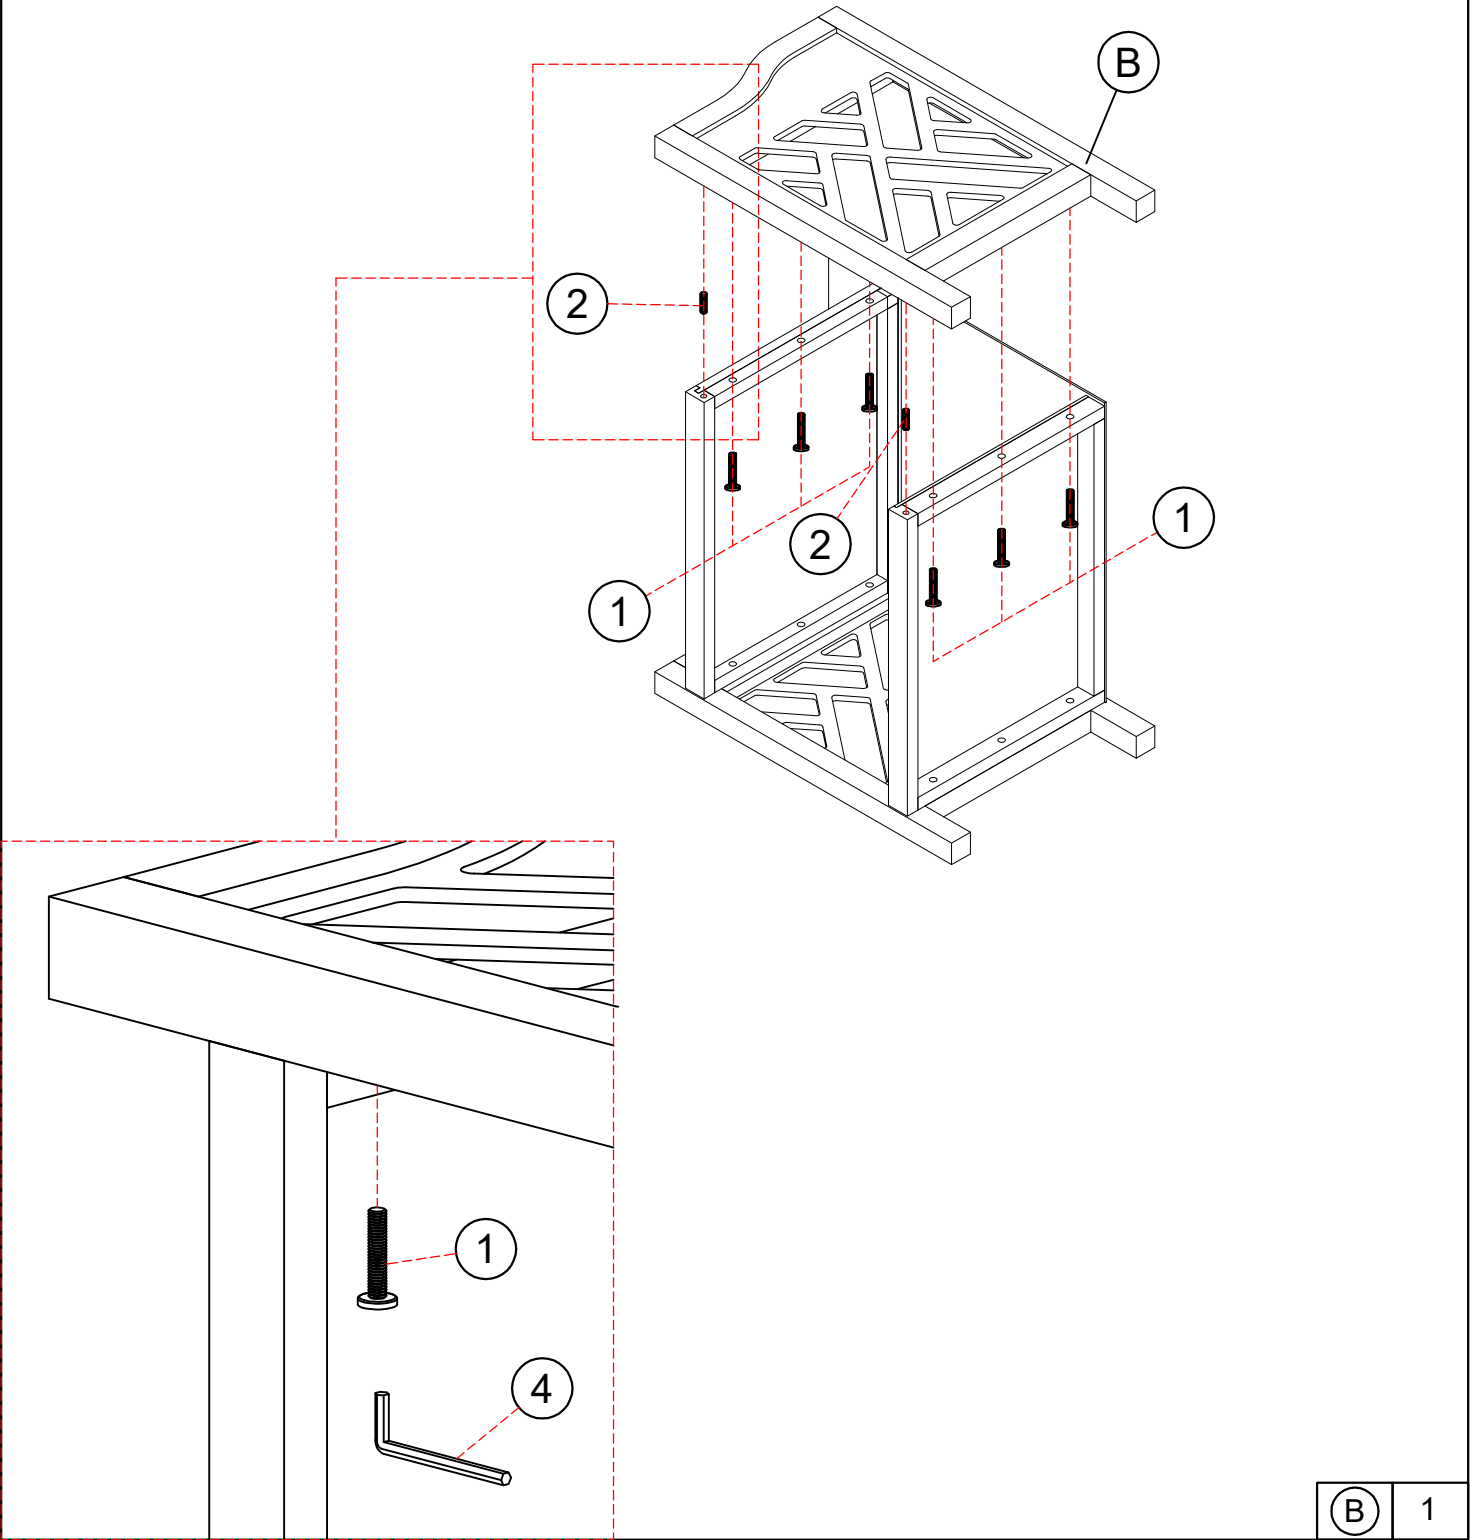


B

1



STEP 4

3




M4 x 30 SCREW


4




(Not included)

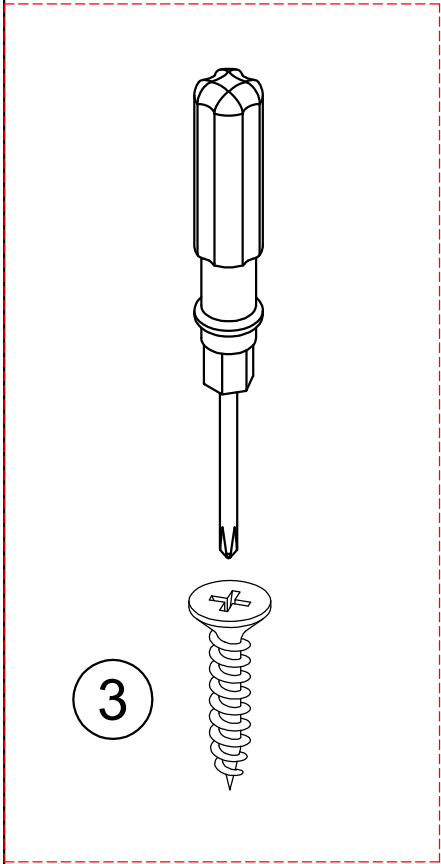


3

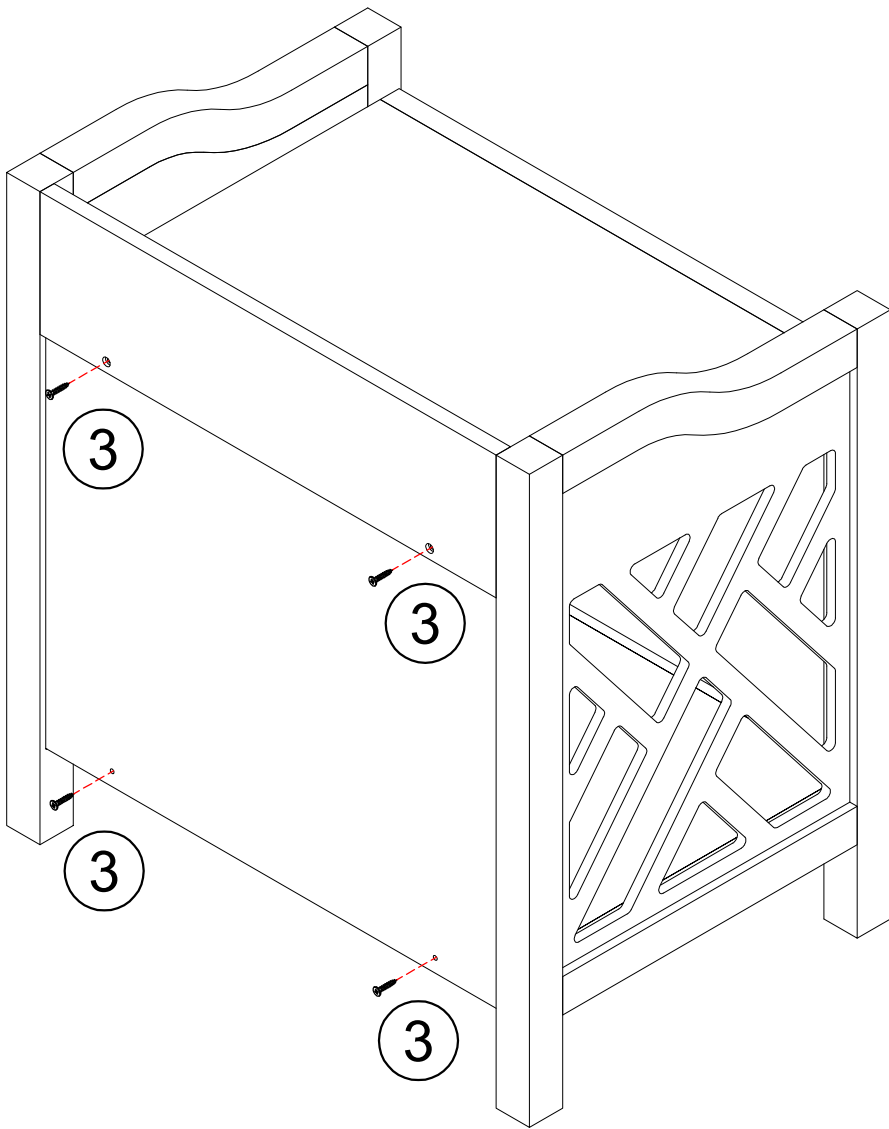

STEP 5

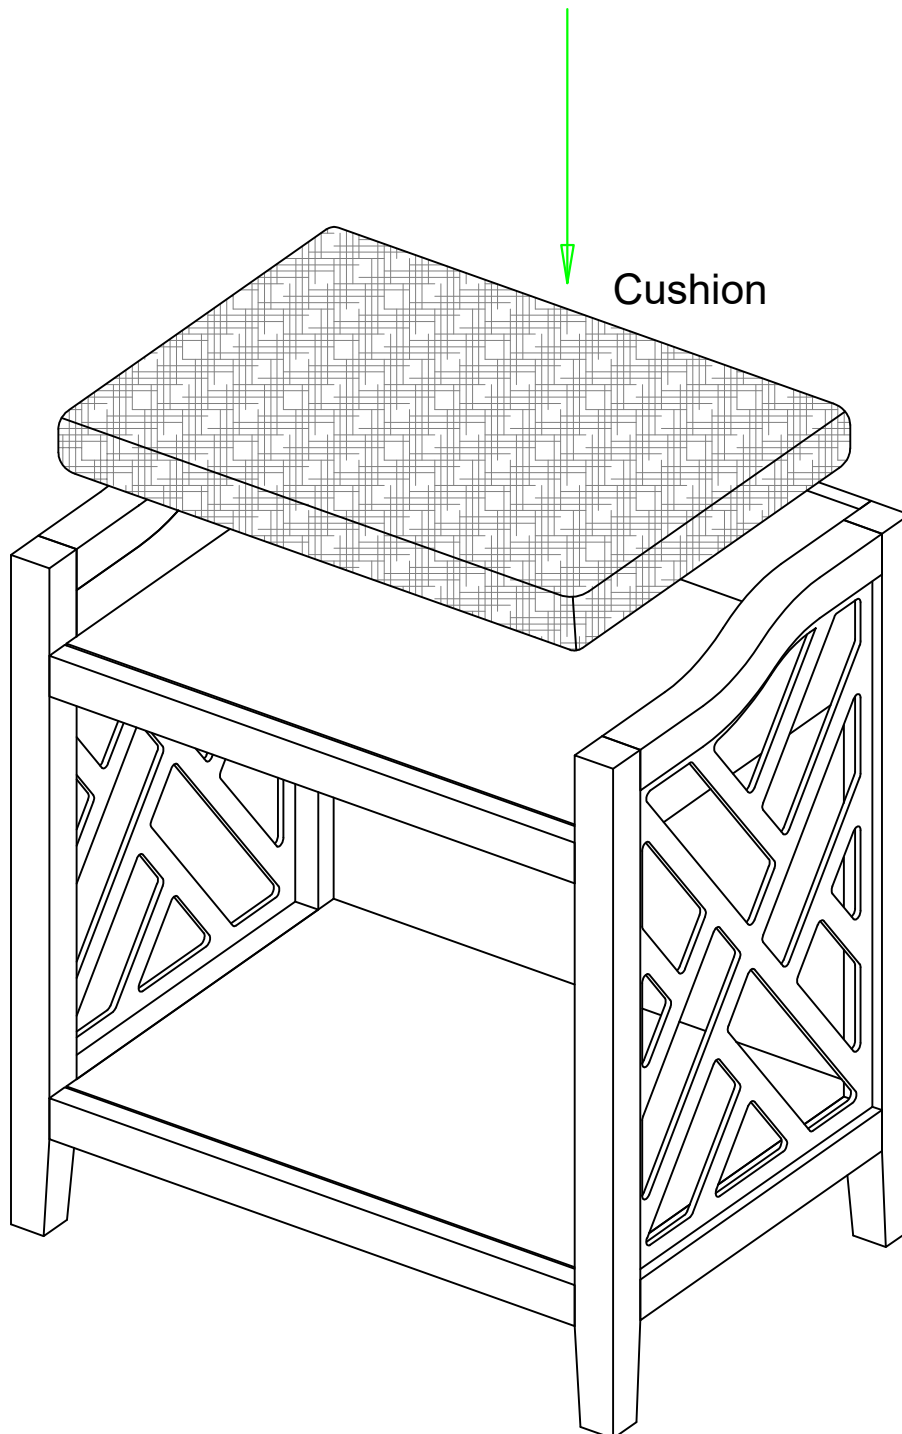

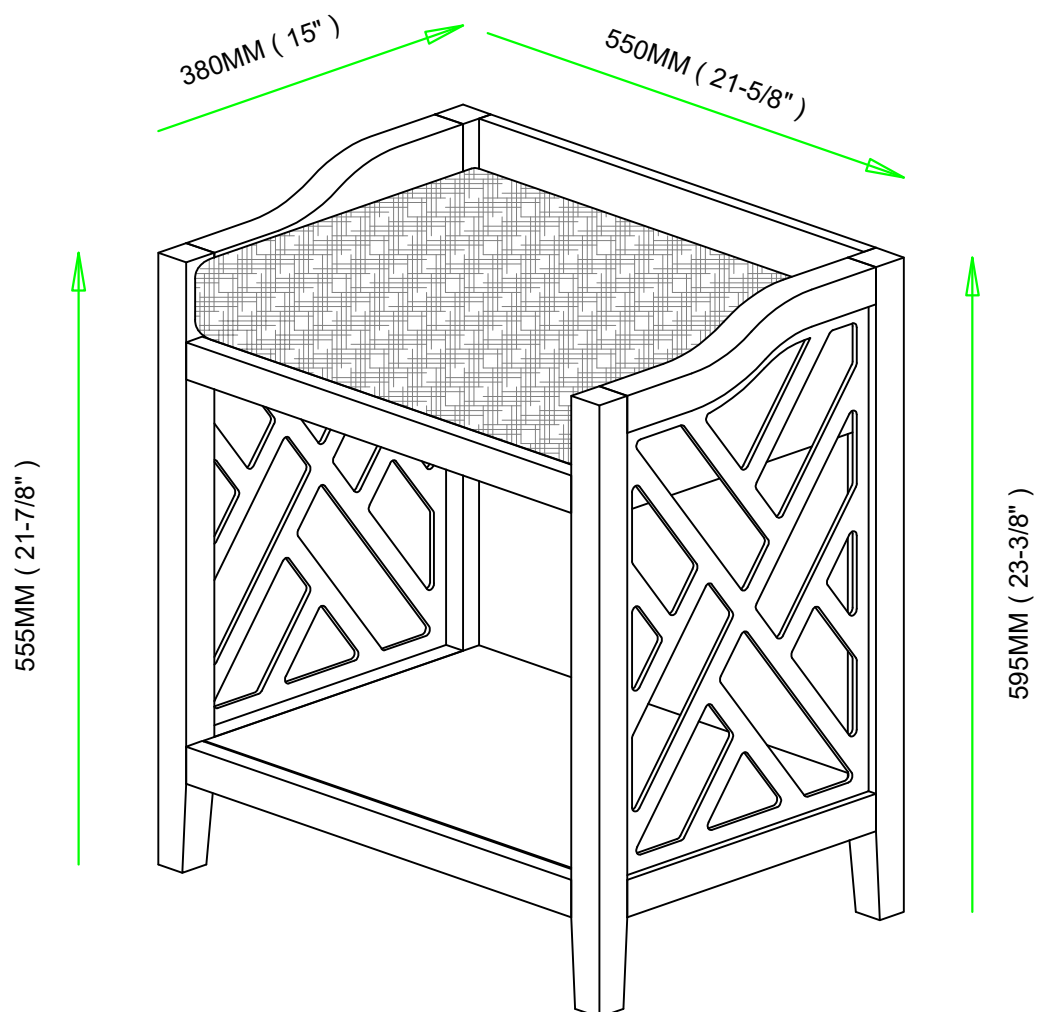

THANK YOU
FOR YOUR
PURCHASE



BOLTON
FURNITURE



Register your product at
www.tmkgl.com/bolton



Additional Savings available for
customers across all brands



Hassle-free customer service
TeamCustomerService.com



Connect on social media with our
lifestyle brands



PURE GARDEN.



LAVISH HOME
COLLECTION

Stalwart

Classic Cuisine.

NORTHWEST.



WAKEMAN
OUTDOORS