

# Ray 8" Sconce + Surface Mount

SCHOOLHOUSE


## NOTES:

- A minimum 2" Depth junction box is required to account for socket and wire clearance. Consult electrician if necessary.
- Install with or without Canopy and Circle Bracket based on your preference and installation needs. Installation without Circle Bracket requires a junction box with 3 9/16" center to center mounting hole placement.

## REQUIRED TOOLS:

- Phillips Head Screwdriver

## INCLUDED HARDWARE:

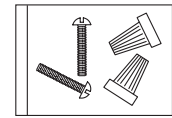


Wiring Kit (x1)



8-32 x 1" Screws (x2)



Pressure Fit Washers (x2)

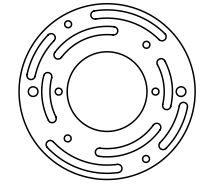

Circle Bracket (x1)

## INSTALLATION INSTRUCTIONS

1. If choosing to install without the Canopy and Circle Bracket, disassemble by pulling Screws out, releasing the Pressure Fit Washers, Canopy and Circle Bracket.
2. Wire fixture to junction box using provided Wiring Kit. Consult electrician if necessary.
3. Mount fixture to junction box.
4. Install included bulb before fixing the Glass Shade over the Shade Holder Tabs.

