



ASSEMBLY INSTRUCTION

Coat Hook w/ Shelf


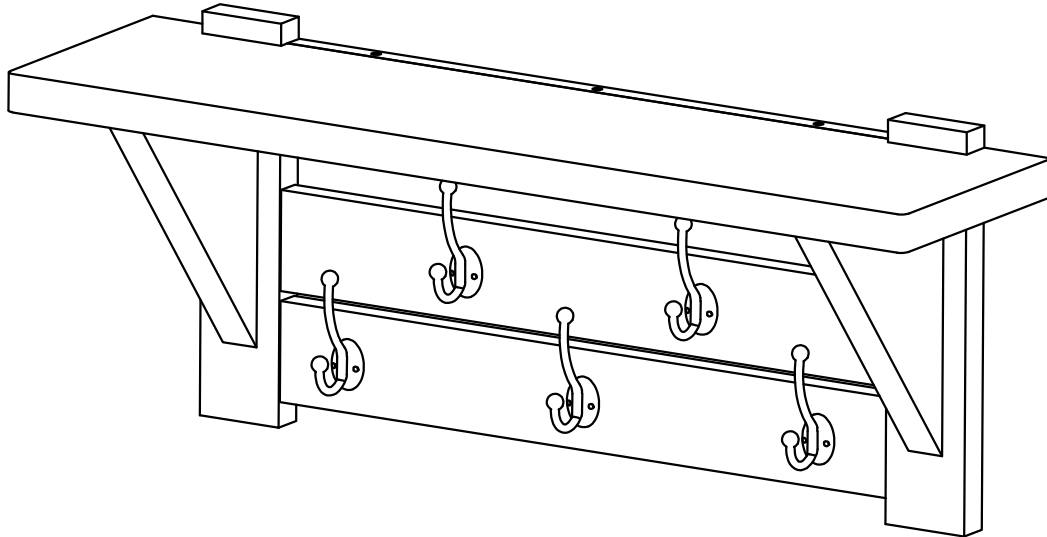


REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "


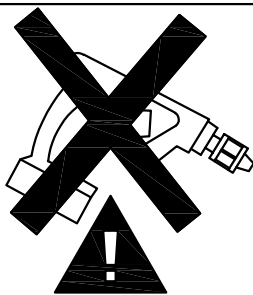


- . Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
- . Please assemble on a clean soft surface to avoid damage.

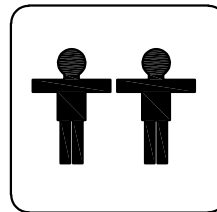


50 minutes

Tools Required

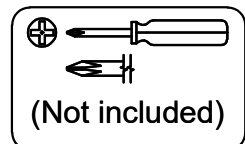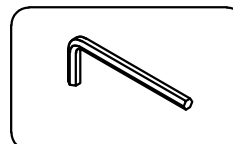

www.boltonfurniture.com

Part list - Coat Hook w/Shelf

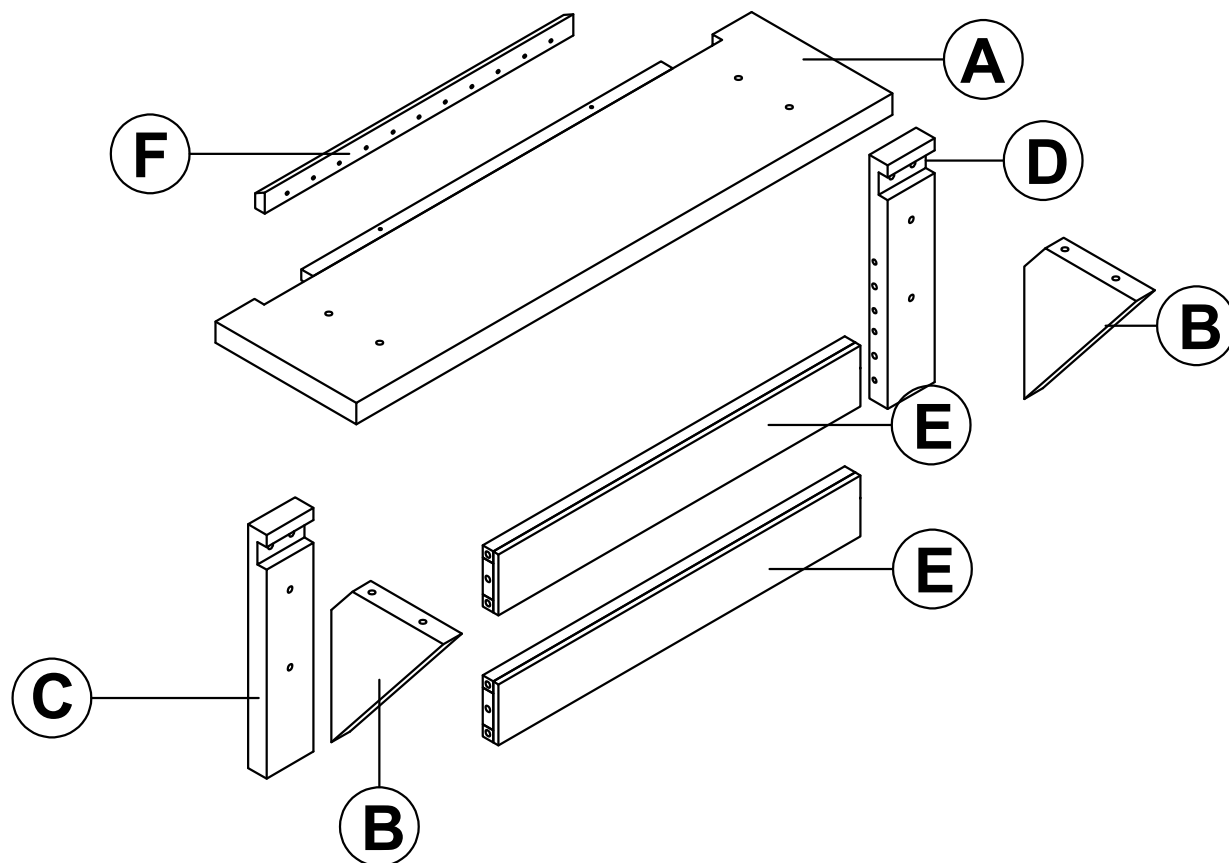

Identifying the hardware-Identify the hardware using the illustrations below


G  **04**
M6x35MM BOLT

H  **12**
M6x50MM BOLT


I  **08**
Ø8*30


J  **05**

K  **10**
M3x15MM SCREW

L  **01**

M  **04**


N  **04**
M4x40MM SCREW

O  **04**
M4x50MM SCREW

Step 01


H  04
M6x50MM BOLT

L  01

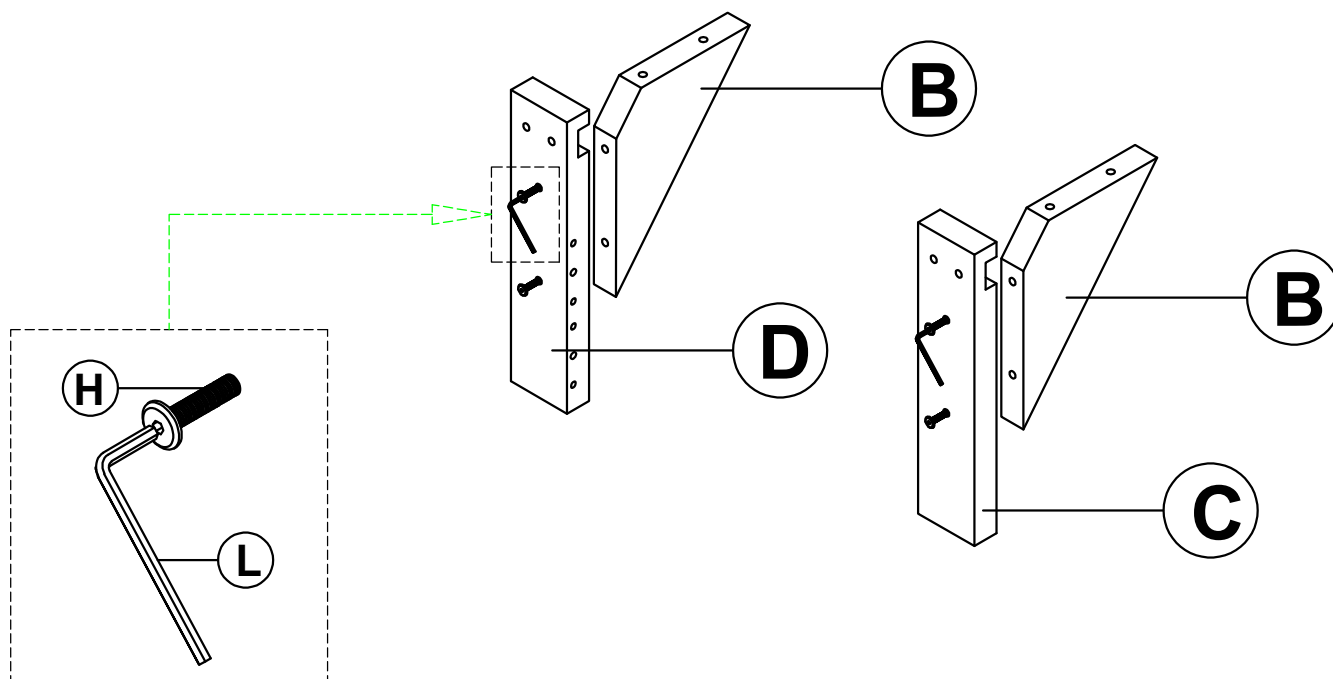


Step 02


Remove the French Cleat (F) from the back of the Coat Hook (A) by unscrewing 2 pre-installed Wood Screws.

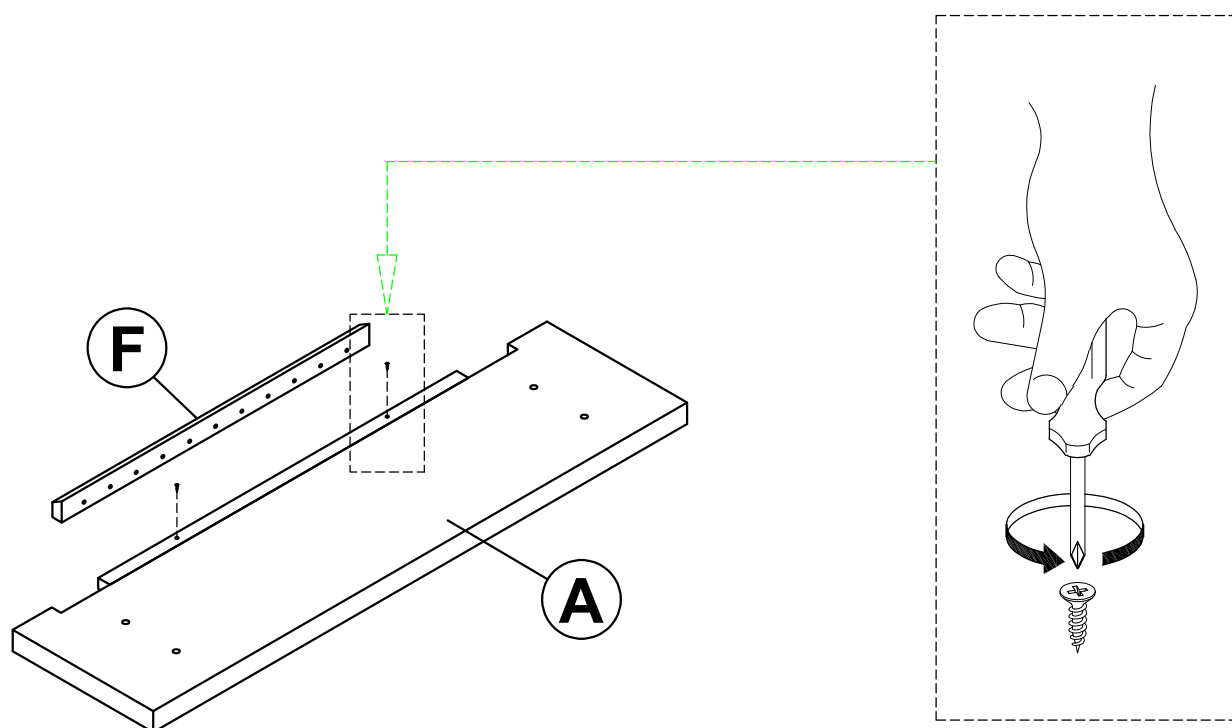

Step 03


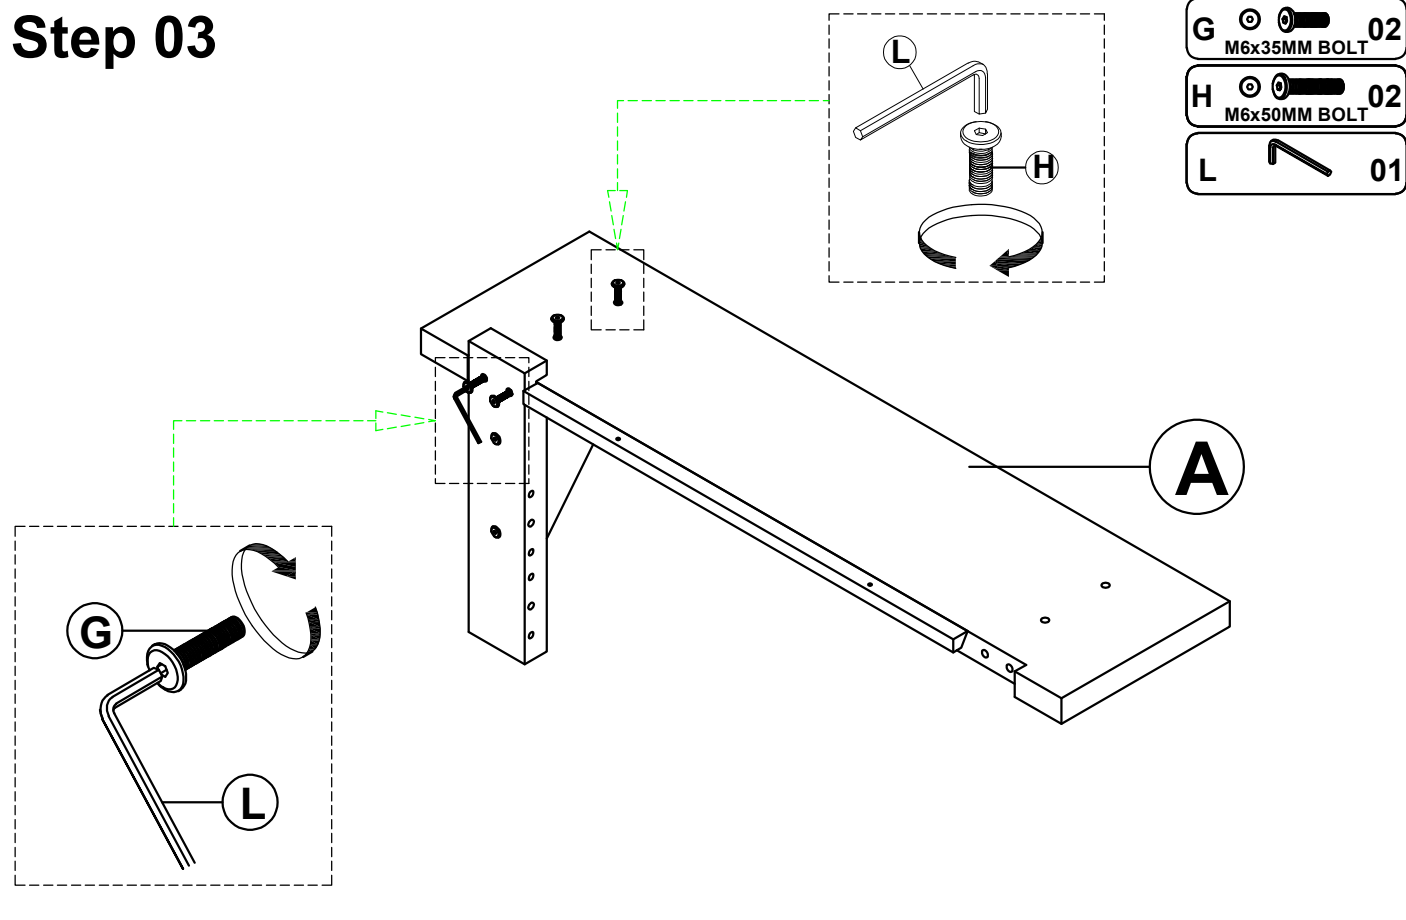



Step 04

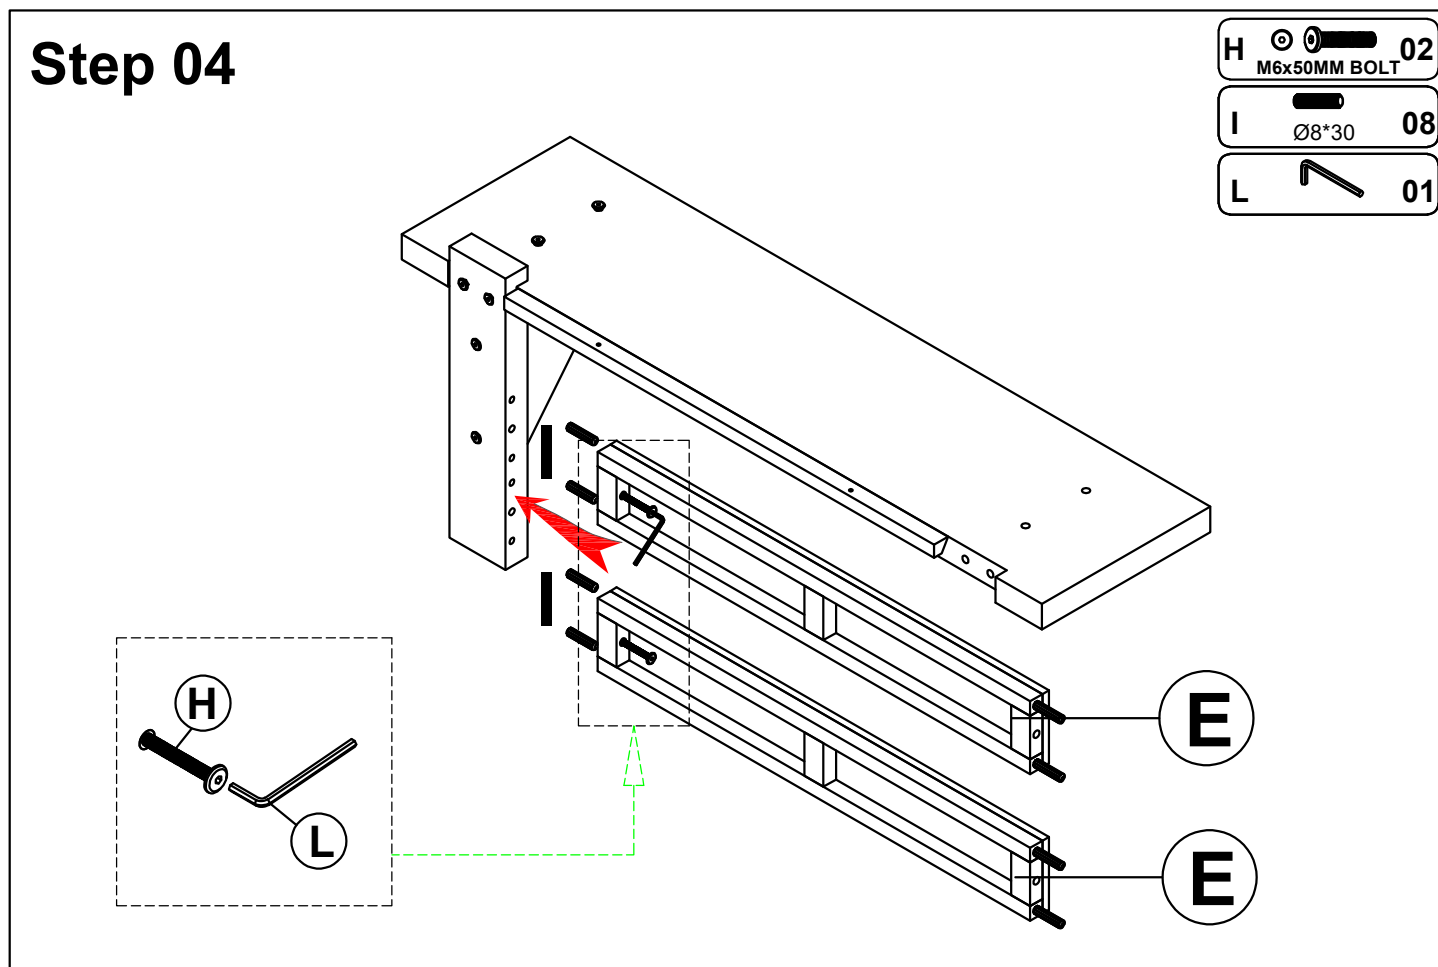


Step 05

G		02
H		04
L		01

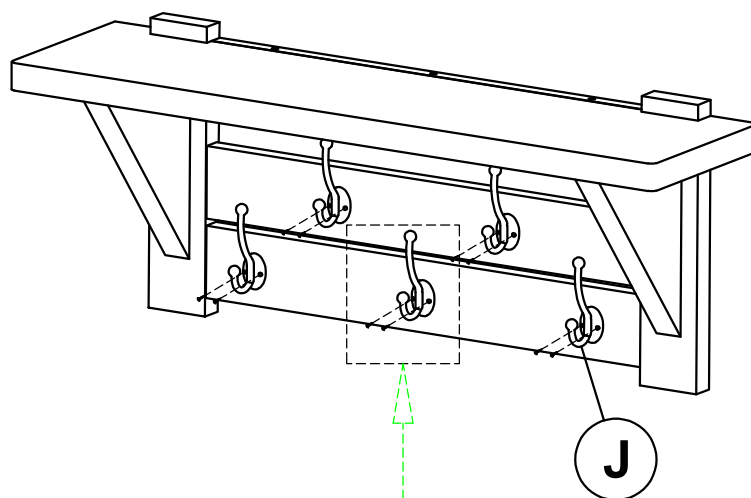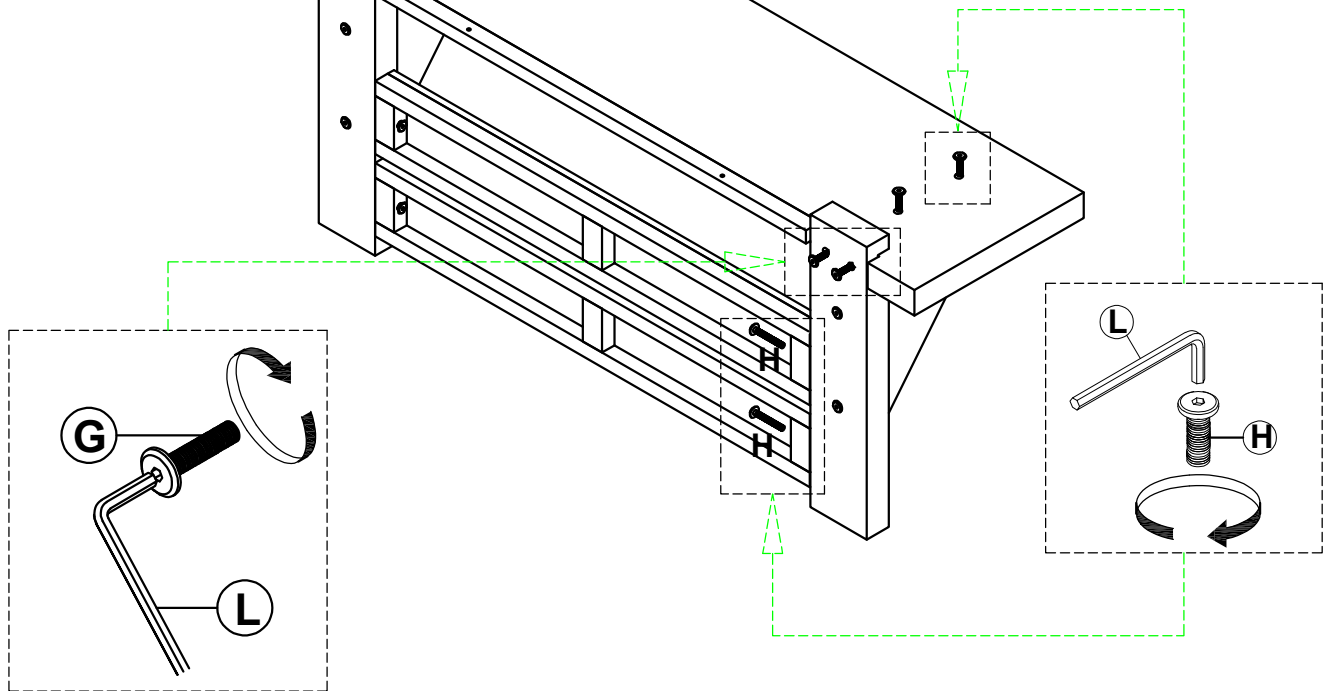


K		10
		01


(Not included)

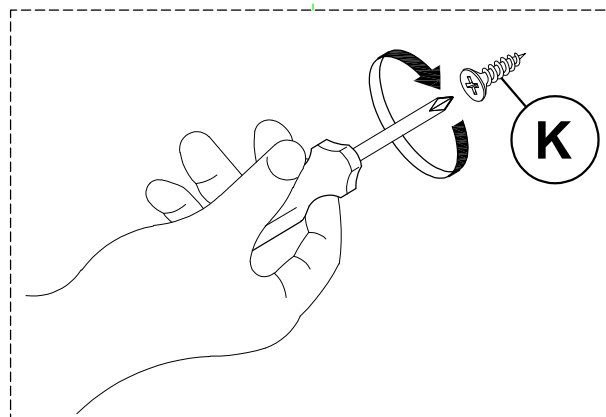

Step 06

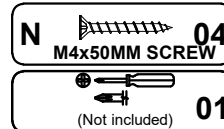


Attach French Cleat (F) to Wall Studs in 4 locations with Wood Screws (O)

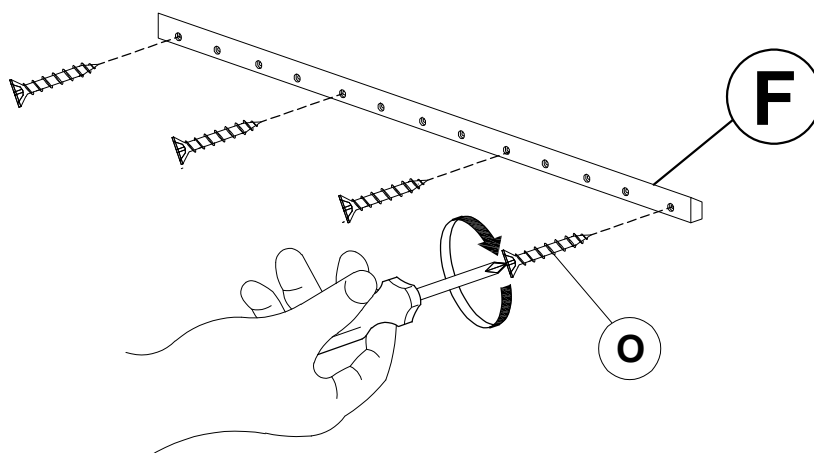


Step 06

If hole locations do not align with stud in wall, install the EZ Anchor(M) in to drywall by tapping it in to the predrilled pilot holes up to the thread, and then screwing the EZ Anchor in to the drywall. Attach Cleat (F) using 4 wood screw (N) to EZ Anchors. NOTE: Cleat could be secured using combination of Studs and EZ Anchors.

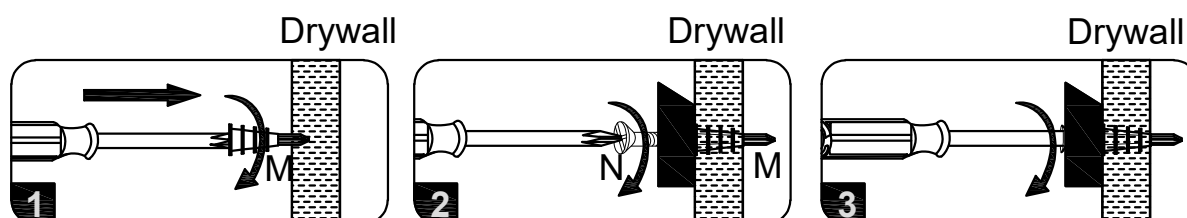

Step 07

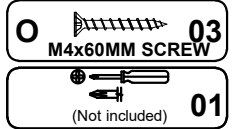

Set Coat Hook w/Shelf on French Cleat (F). Secure Coat Hooks w/Shelf to French Cleat (F) by installing 2 pre-installed Wood Screws (Step 02).

