


DO NOT fully tighten any of the bolts until the product is completely assembled, then put on a a flat surface to make sure the product is level and then fully tighten all the bolts.



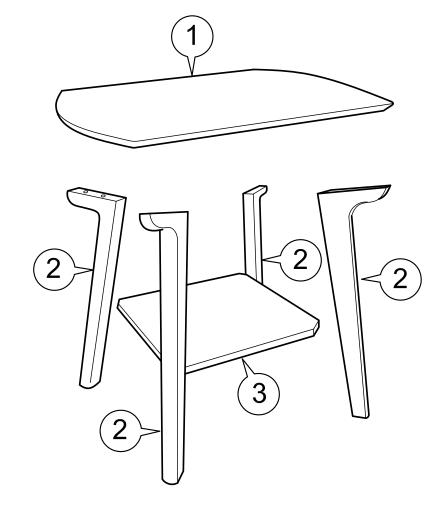

	HARDWARE LIST :			
A	M6 x 35mm = 4	C 5/16" = 4	M8 x 30mm = 4	G M8 = 4
В	M6 x 60mm = 4	D M6 x 13mm = 4	F M4 x 100mm = 1	H = 4

