


ASSEMBLY INSTRUCTION


Hook Shelf

36"Lx4.5"Wx5.5"H


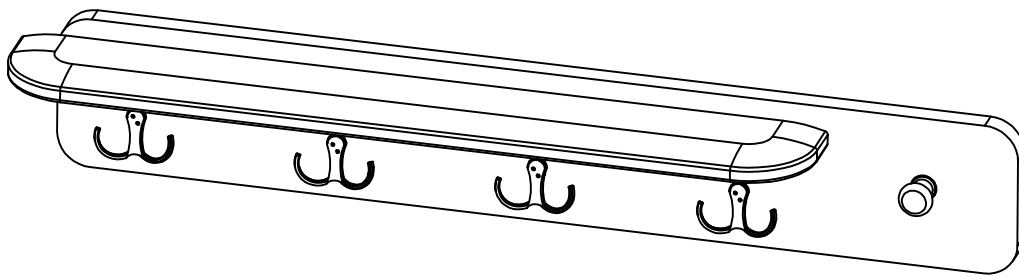


REPLACEMENT PARTS



Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "

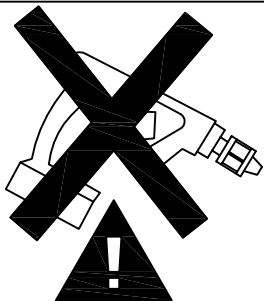

. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

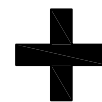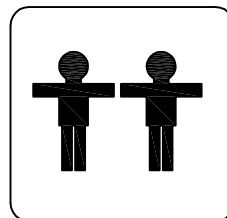


Tools Required

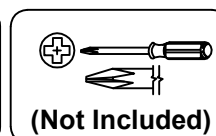
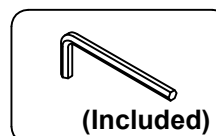


www.boltonfurniture.com

Part list - Hook Shelf

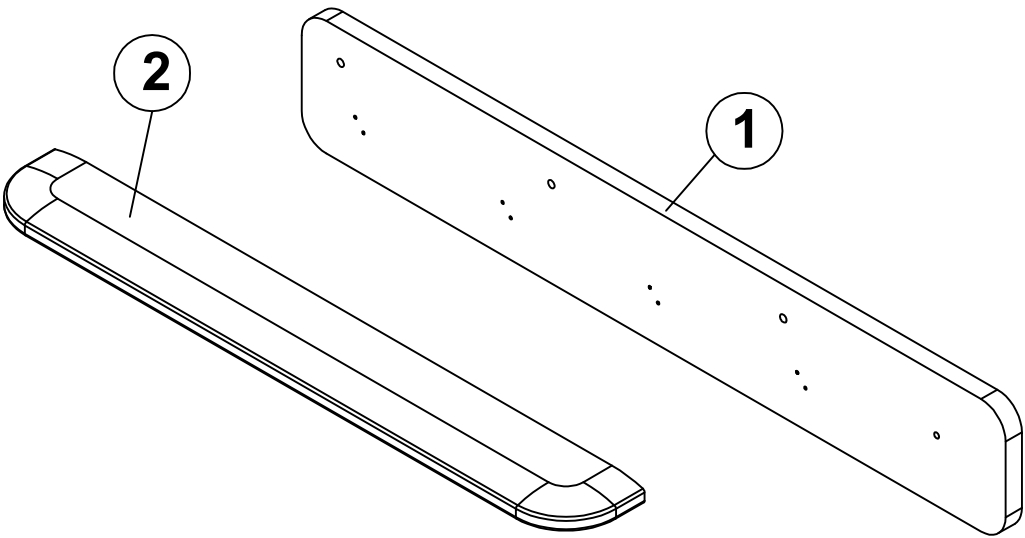


Identifying the hardware-Identify the hardware using the illustrations below

A  M6*35mm Bolt 03	B  Hook 04	C  4x15mm Screw 08
D  Wood Knob 01	E  M4*25mm Bolt 01	F  Allen Key 01
G  4*50mm Screw 02	H  EZ Anchor 02	


Step 01

B	 Hook	04
C	 4x15mm Screw	08
	 	01

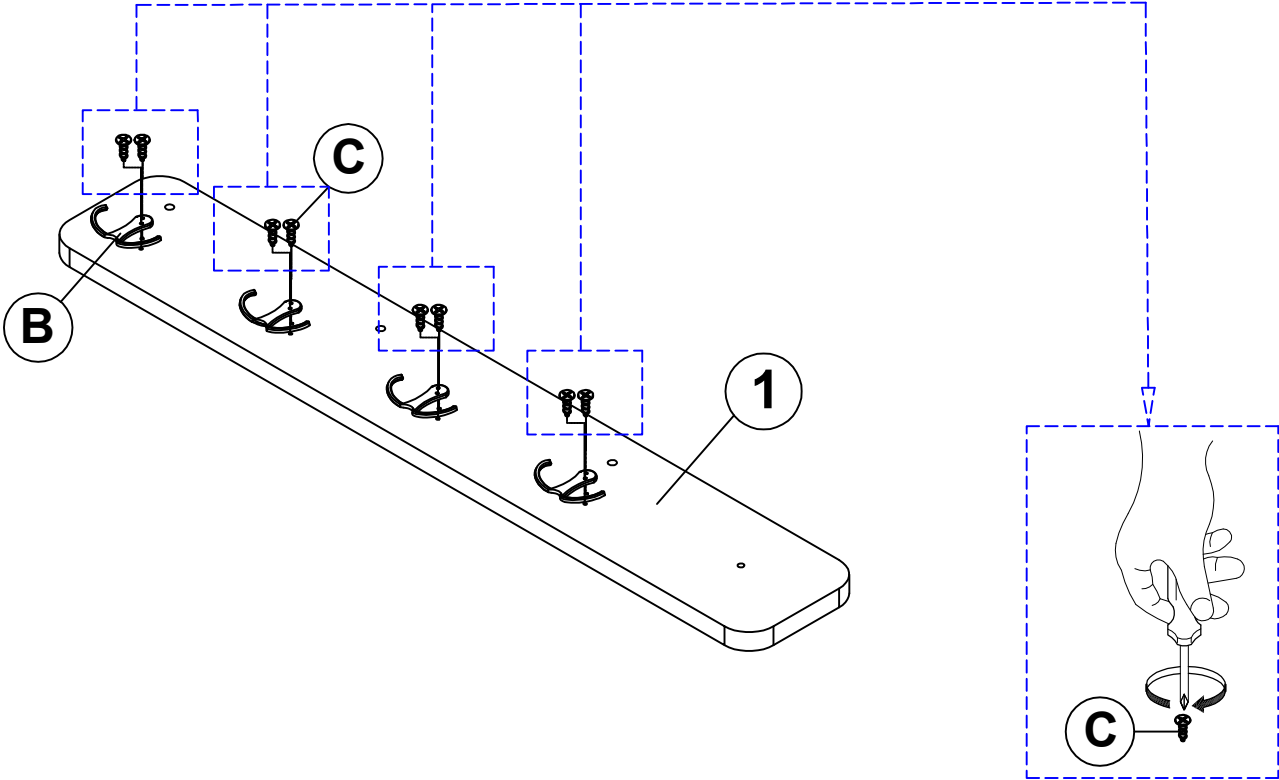

Step 02

D	 Wood Knob	01
E	 M4*25mm Bolt	01
	 	01

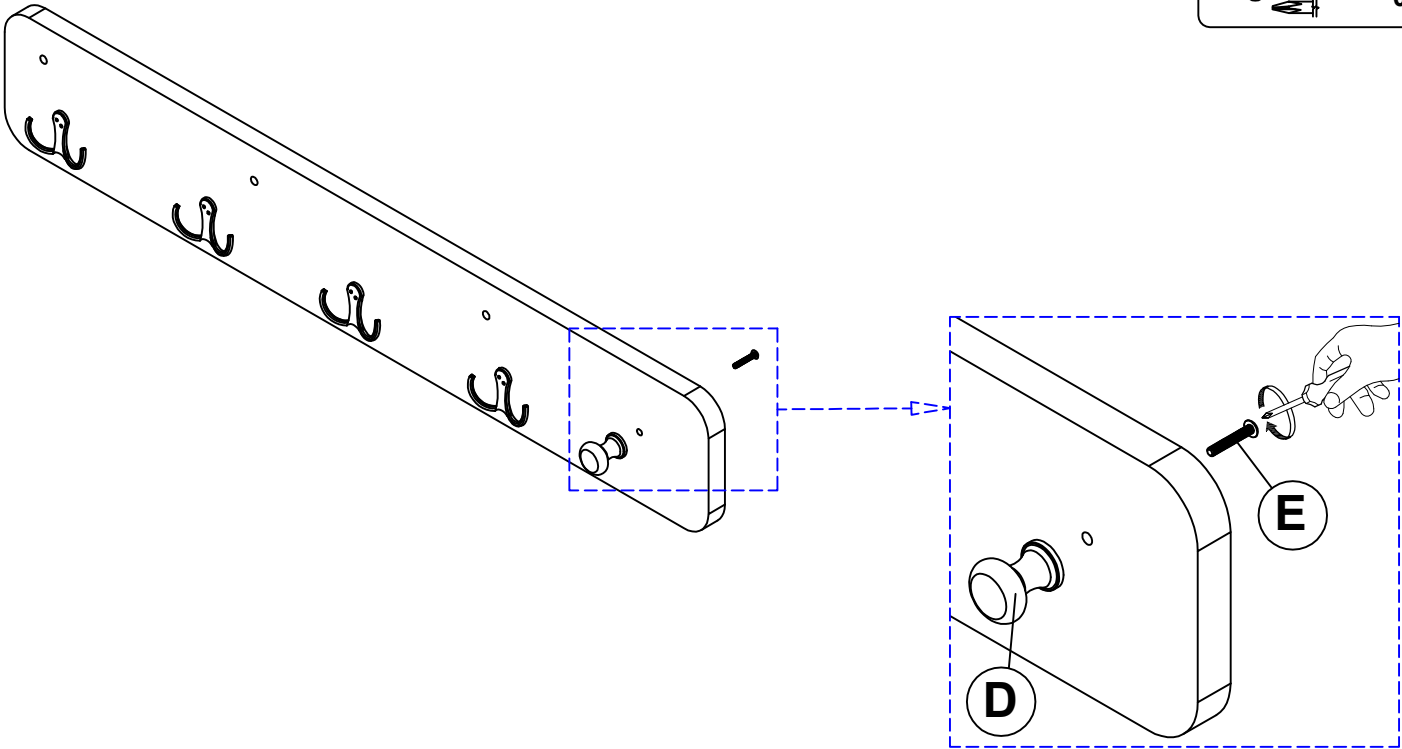

Step 03

A


 M6*35mm Bolt

03

F

 Allen Key


01

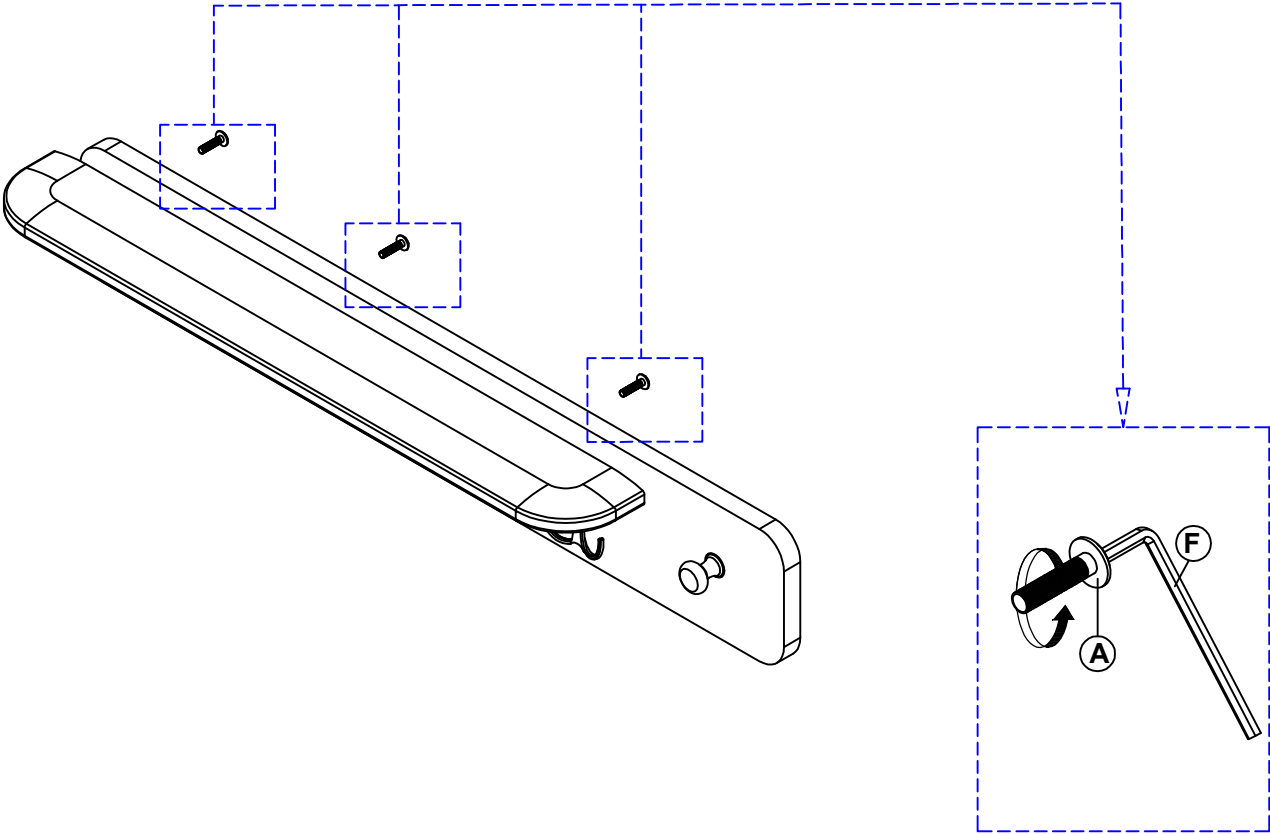

Step 04

Measure the distance between the two holes of the key hole center.


Mark the desired location on the wall there you want to hang the Hook Shelf.

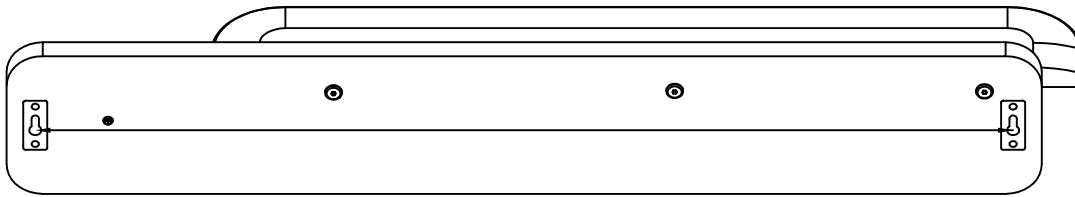

Step 05


Drill 1/8" pilot hole 2" deep. This marks location for screws to hang the Hook Shelf.

If hole location is aligned with stud in the wall, secure the screws(G) directly into the stud. Do not drive screws all the way in, have head of screws out about 3/8".

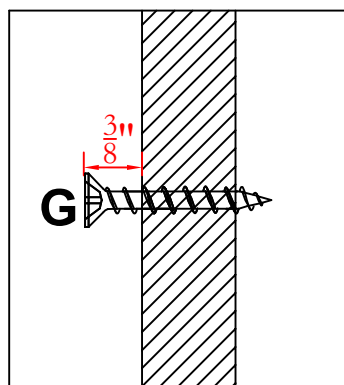


If hole locations do not align with the stud, install the EZ anchors(H).



Secure screws(G) into EZ anchors(H). Do not drive screws all the way in, have head of screws out about 3/8".

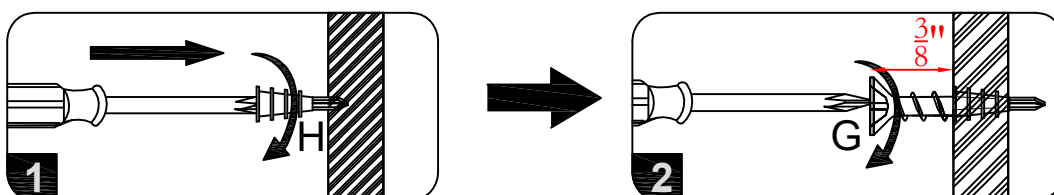

Step 06

Hang the Coat Hook.

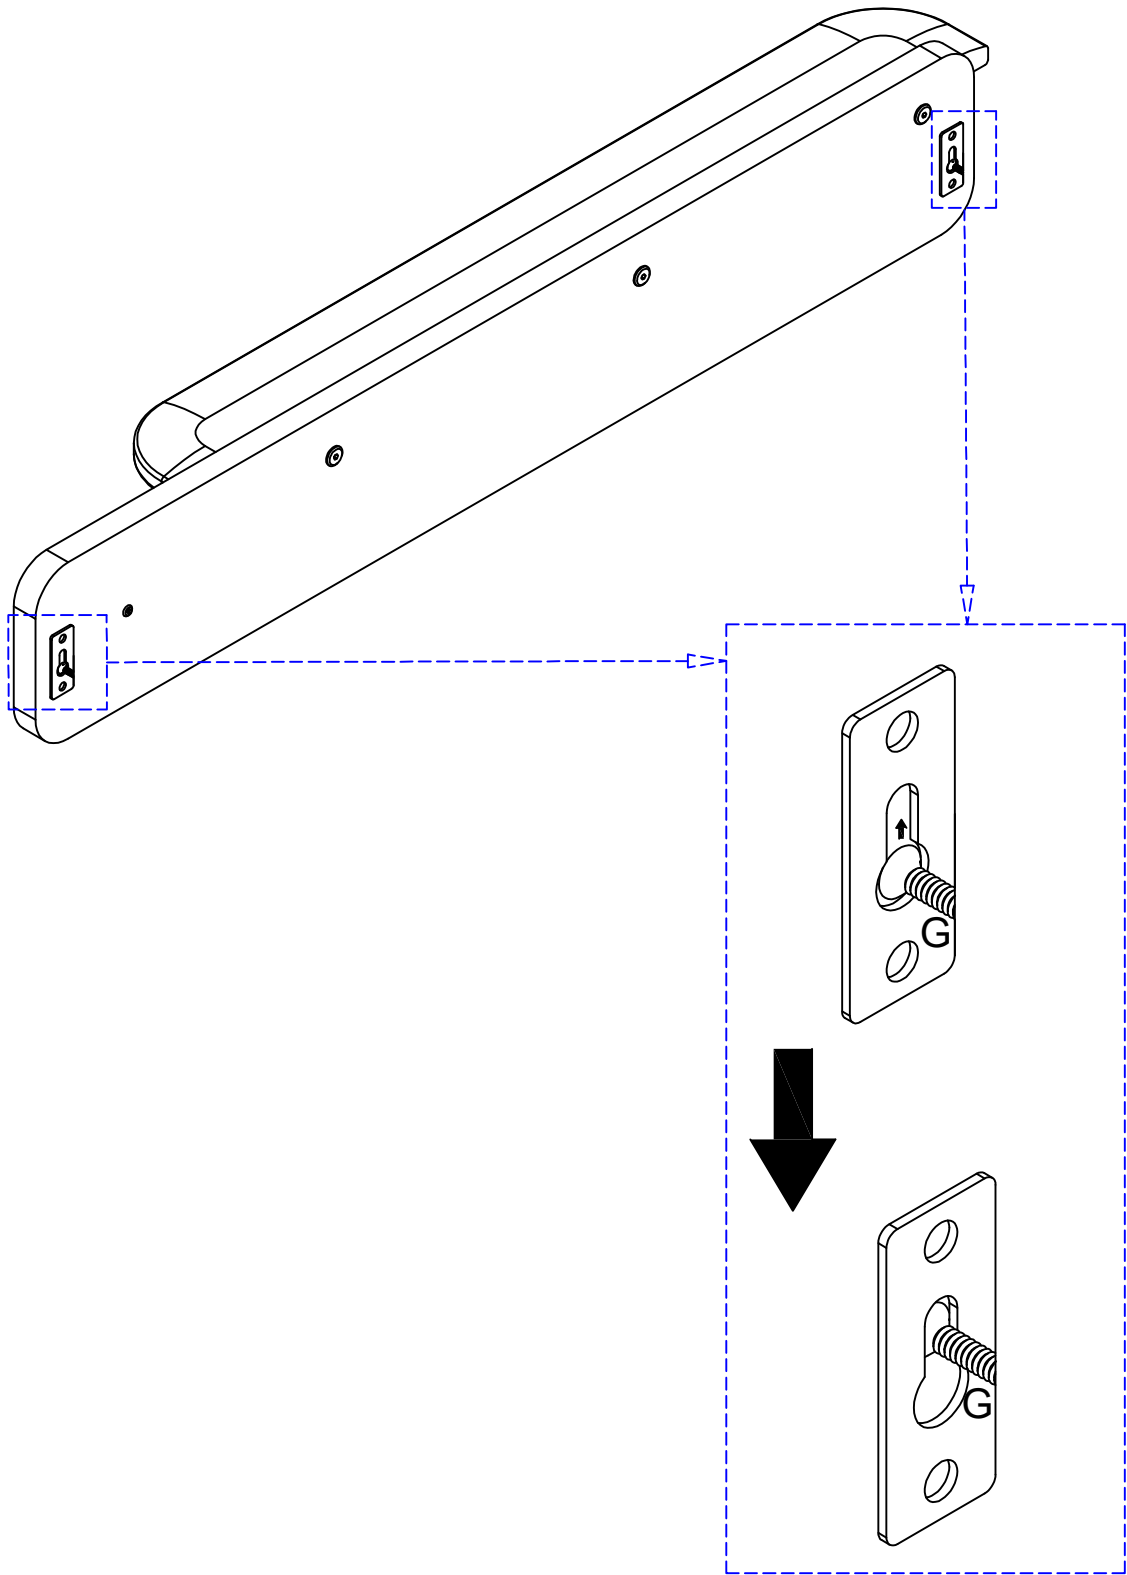

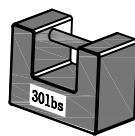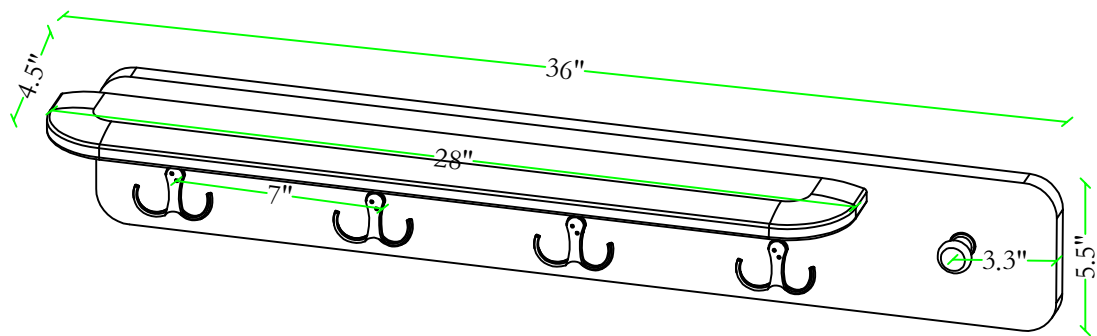

Maximum Weight Capacity:
30lbs

