


## NOTES:

- For Factory 4 and 6 do not remove set screw holding canopy to arm. Set screw is installed by the manufacturer and seal as part of construction.
- Instructions apply to Factory sconces and Factory 2 Surface Mount.

## REQUIRED TOOLS:

- Flat Head Screwdriver
- Phillips Head Screwdriver

## INCLUDED HARDWARE + TOOLS:



Wiring Kit (x1)




#8 Plastic Washers (2x)




Offset Screwdriver (x1)



8-32 x 0.75" Screws (x2)

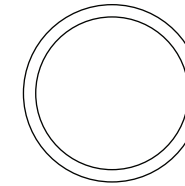

Canopy Gasket (x1)

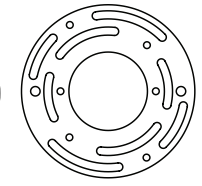

Circle Bracket (x1)

## INSTALLATION INSTRUCTIONS

1. Detach Circle Bracket from fixture by removing 8-32 x 0.75" Screws and #8 Plastic Washers. Reserve screws and washers for final step of installation.
2. If installing indoors, skip to step 3. If installing outdoors or in a wet location, attach included Canopy Gasket by removing the film on the gasket to reveal adhesive backing. Carefully position the gasket ring so that it aligns with the lip on the back of the fixture Canopy. Press firmly to adhere the Canopy Gasket to the fixture Canopy.
3. Attach Circle Bracket to junction box using included Wiring Kit Screws.
4. Wire the fixture to the junction box. Consult electrician, if necessary.
5. Attach fixture to Circle Bracket by lining up canopy mounting holes with threaded holes using 8-32 x 0.75" Screws. If installing the Factory 2 Surface Mount, use the included Offset Screwdriver to install Screws with #8 Plastic Washers as shown. Tighten until the Canopy Gasket is compressed against Canopy and mounting surface.

