
american drew
• inspired design •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

750-701/B01

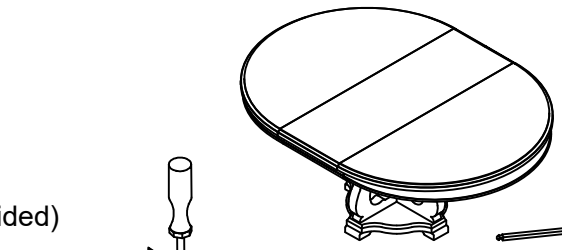

TOOLS REQUIRED:

Allen wrench (supplied, part # F)
Phillips Head Screwdriver (Not Provided)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

Figure 1


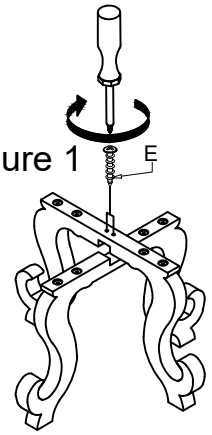


Figure 2

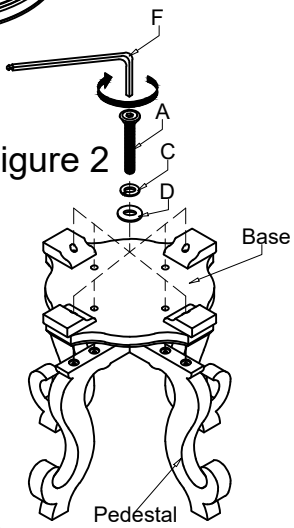

INSTRUCTIONS:

1. Connect the Pedestal with Round head screw (E) and Phillips head screwdriver (Not Provided). (See Figure 1)

2. Attach the base to the Pedestal, using Bolt (A), Lock washers (C) and Flat washers (D). Tighten with Wrench (F). (See Figure 2)

3. Lay the top on a clean and padded surface to prevent scratches, unfasten the mounting plate from the bottom of the table top. Notice: Do not throw away the Bolts , Lock Washers, and Flat Washers which are provided to attach the base to the top. (Figure 3)

4. Turn the Pedestal upright and fasten to the mounting plate with the Flat Washers (D), Lock Washers (C) and Bolt (B). Tighten with Allen wrench (F). (Figure 4)

5. Turn the assembled Pedestal with mounting plate upside down to attach the Pedestal to the table top. Align the holes of the mounting plate with the inserts located on the table slides. Using the hardware removed in Step 3 and attach with Flat Washers , Lock Washers and Bolts. Tighten the bolts to secure the base to the top with Allen wrench (F). (Figure 5)

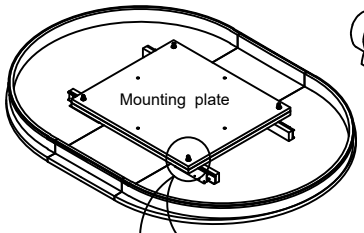


Figure 3

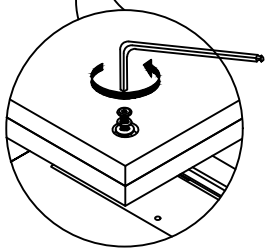


Figure 4



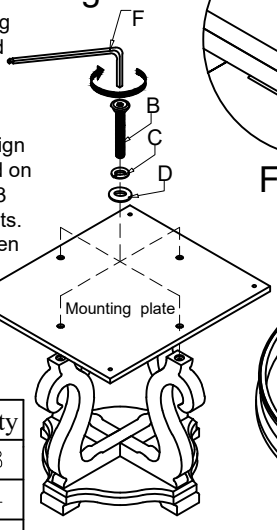


Figure 5

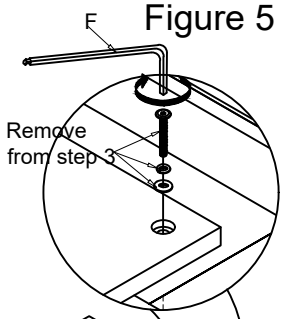

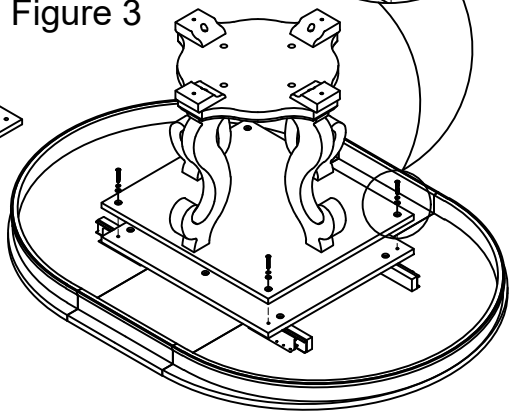

No.	Hardware List		Q'ty
A		Bolt Ø5/16"x2-1/2"	8
B		Bolt Ø5/16"x1-1/2"	4
C		Lock Washer Ø5/16"	12
D		Flat Washer Ø5/16"	12
E		Round head screw Ø8x1-1/2"	2
F		Allen Wrench 5mm	1

Thank you for purchasing furniture from american drew!