


ANZZI®

ITEM: AZ3060SH\*-16  
ALCOVE BATHTUB

INSTALLATION & OPERATION MANUAL

V1.1  
11/01/2023

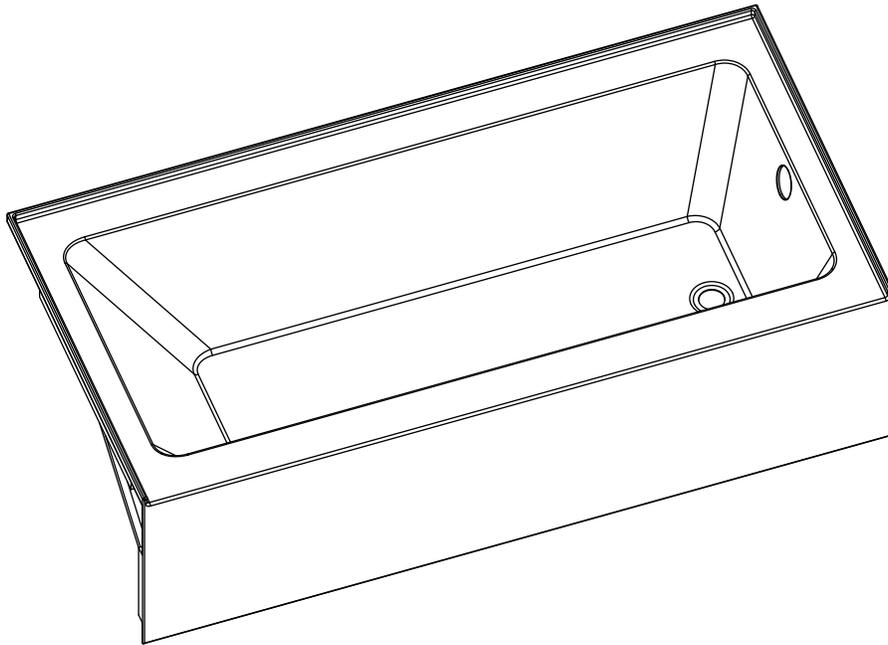

**DON'T WAIT!  
REGISTER NOW!**

Register your product within 90 days to ensure your product is recognized as an official purchase and is eligible for warranty coverage.

Mail in the completed registry card (Pg. 2) or register online at <https://register.anzzihome.com/register/>.




# PRODUCT REGISTRATION\*

**IMPORTANT:** Warranty will not be recognized unless product is registered.

**We offer two options to register your product.**

- 1. Register online at <https://register.anzzihome.com/register/>** or Scan the QR code below. Registering online is fast, secure, and ensures we receive your information.

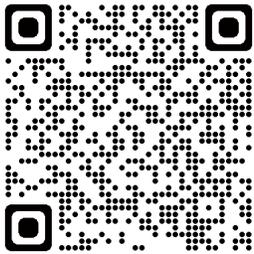

- 2. Complete, cut out, and mail the registration card below.** Returning this registration card will ensure your product's warranty and allow us to process any warranty claims.

**Mail the card to: 5701 NW 35 Avenue, Miami, FL 33142**



Product Registration Card

Name..... Address .....

City..... State..... Zip.....

Phone..... Email.....

Date of Purchase ..... Order or Purchase # ..... SKU or Model # .....

Installer's Name ..... Phone .....

I have read the Owner's Manual carefully and understand and agree that any installation, operation or maintenance of the product must be done strictly in accordance with instructions and guidelines contained in the owner's manual and installation guide.


Signature..... Date.....

**Need help? For technical support call 305-614-4070 or visit us at [www.ANZZI.com](http://www.ANZZI.com)**

# ANZZI®



## ALCOVE BATHTUB

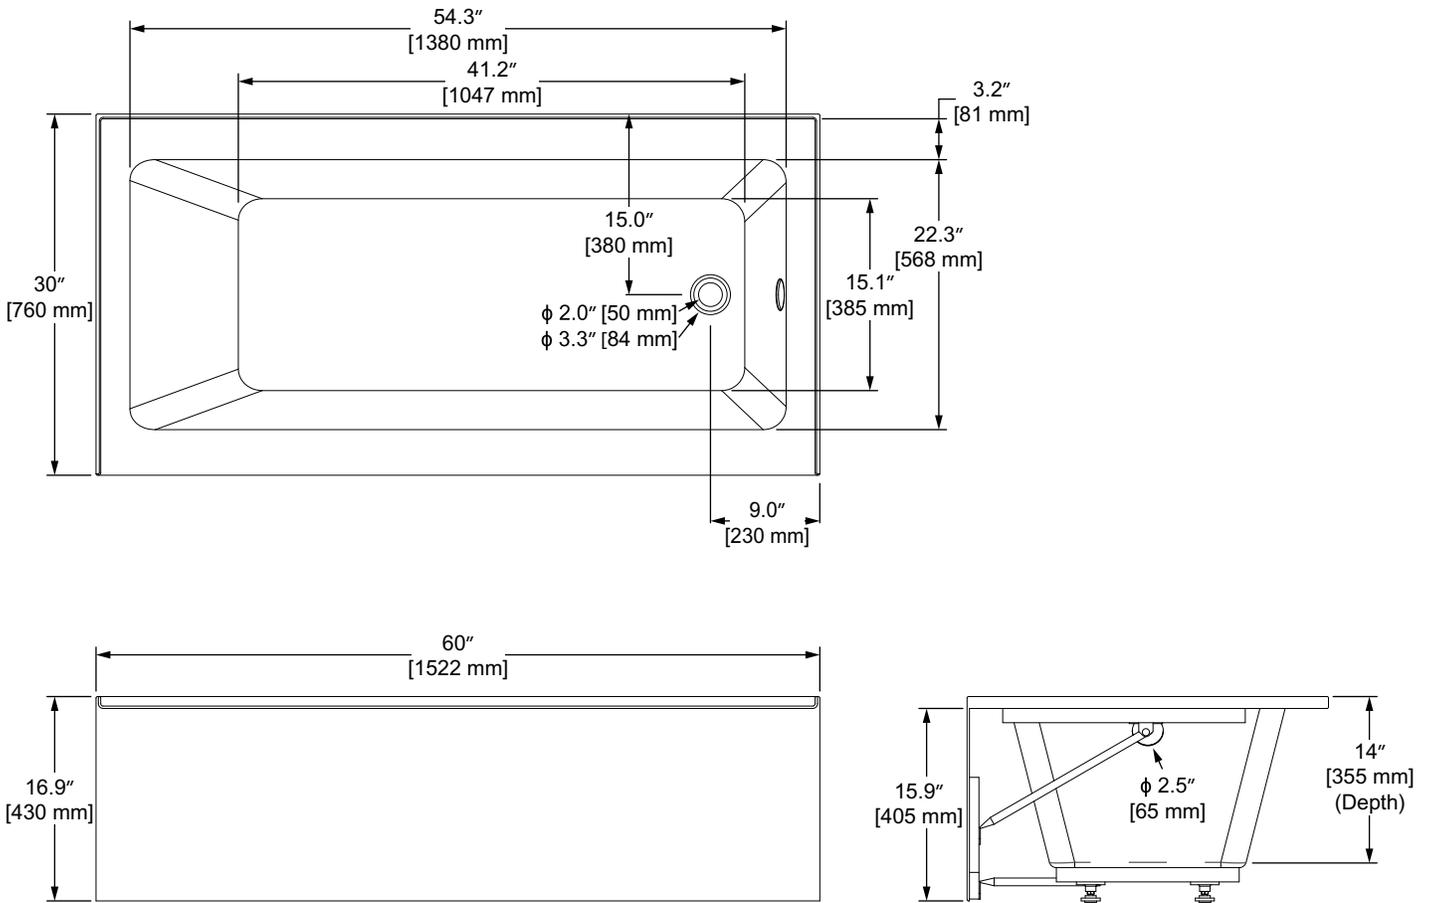



## **SAVE THIS MANUAL!**

READ THESE INSTRUCTIONS COMPLETELY BEFORE INSTALLING THE PRODUCT. FAILURE TO DO SO COULD RESULT IN AN IMPROPER INSTALLATION AND COULD VOID THE WARRANTY.

### **RESPONSIBILITY OF THE INSTALLER!**

THE INSTALLER MUST INSPECT AND WATER TEST THE PRODUCT PRIOR TO INSTALLATION TO ENSURE THE UNIT IS FREE OF DEFECT OR DAMAGE. IN THE EVENT OF A PROBLEM, THE UNIT MUST NOT BE INSTALLED. IF THE CRATE OR THE PRODUCT HAS BEEN DAMAGED DURING SHIPPING, PLEASE CALL US IMMEDIATELY.

### **THIS PRODUCT MUST BE INSTALLED BY A LICENSED/CERTIFIED CONTRACTOR!**

LICENSED PLUMBERS SHOULD BE EMPLOYED TO INSURE PROPER INSTALLATION. INSTALLERS ASSUME ALL LIABILITY FOR THE CORRECT INSTALLATION PROCEDURES. ONLY ACCESSORIES AUTHORIZED BY THE MANUFACTURER SHOULD BE USED WITH THIS PRODUCT.

**REPORT DAMAGE RIGHT AWAY!** REPORT ANY DAMAGE TO THE BATHTUB WITHIN 5 BUSINESS DAYS. ANY DAMAGE REPORTED AFTER 5 BUSINESS DAYS WILL BE ASSUMED TO HAVE HAPPENED DURING OR AFTER THE INSTALLATION.

**TEST THE TUB BEFORE INSTALLATION!** BEFORE PERMANENTLY INSTALLING THE BATHTUB, YOUR INSTALLER MUST TEST THE TUB. FILL TUB AND INSPECT FOR ANY LEAKING. YOU SHOULD ONLY PROCEED TO PERMANENTLY INSTALL THE UNIT IF THERE ARE NO SIGNS OF MALFUNCTION OR LEAKAGE.

**LEVEL THE TUB TO AVOID LEAKAGE!** CHECK THE AREA PRIOR TO INSTALLATION. USE THE TUB'S LEVELING FEET TO ENSURE THE BATHTUB IS PERFECTLY LEVEL. IT IS ESSENTIAL THAT ALL THE FEET ARE TOUCHING THE FLOOR/SURFACE. AN UNLEVELED TUB WILL RESULT IN LEAKAGE.

## **SAFETY INSTRUCTIONS**

READ THESE INSTRUCTIONS COMPLETELY BEFORE INSTALLING THE PRODUCT. FAILURE TO DO SO COULD RESULT IN AN IMPROPER INSTALLATION AND COULD VOID THE WARRANTY.

IMPORTANT SAFETY INSTRUCTIONS. INSTRUCTIONS IMPORTANTES RELATIVES A LA SECURITE.

READ AND FOLLOW ALL INSTRUCTIONS. LIRE ET SUIVRE TOUTES LES INSTRUCTIONS.

SAVE THESE INSTRUCTIONS. CONSERVER CES INSTRUCTIONS.



## IMPORTANT

- A) An alcove bathtub is not designed to support weight on its rim. Therefore, do not sit or stand on the bathtub's rim.
- B) Please retain this manual after installation for future reference and maintenance.
- C) Installation of tub is a two-person job.

## DELIVERY OF YOUR TUB

### Unpack and check for damage.

Unpack the bathtub and inspect for damage or missing parts right away. Do not wait to do this. Damage reported after installation will not be covered by warranty. Repack the tub and keep it safely stored until installation begins.

### Protect your tub.

Before commencing installation, ensure the tub is wholly protected and leave the covering in place until the bathroom is complete. The warranty does not cover scratches and damage incurred during installation.


## TESTING THE TUB

1. Place the tub on a completely flat surface where the water can drain after testing.
2. Close the drain and fill the tub about halfway.
3. Allow the water to stand for 30 minutes. Then inspect the drain and plumbing for any leaks.

**TEST THE BATHTUB WHILE YOU HAVE ACCESS TO THE BOTTOM AND BEFORE PERMANENT INSTALLATION.**

# ANZZI®

## TOOLS AND MATERIALS




Screwdriver



Tape Measure




Level

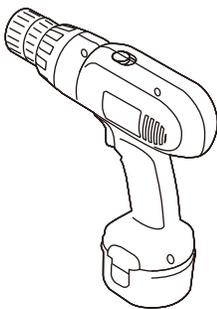


Drill



Drill Bit 3/16" (5 mm)

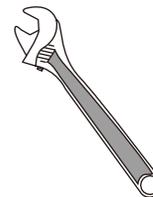

Adjustable Wrench

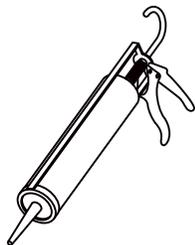

Caulk




Marker Pen



#6 or #8 1-1/4"  
stainless or zinc  
plated truss head  
screws


## INSTALLATION

1

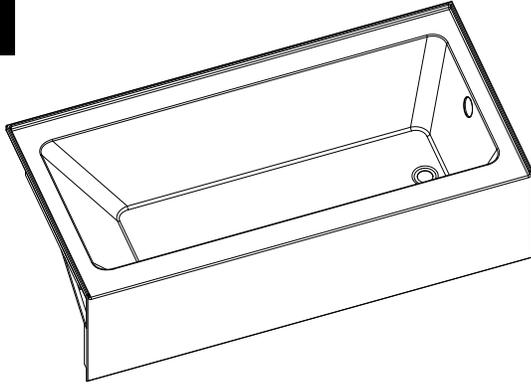


- a. Inspect bathtub for any potential damage that may have occurred during transport.
- b. Do not install if any damage is visible.

2

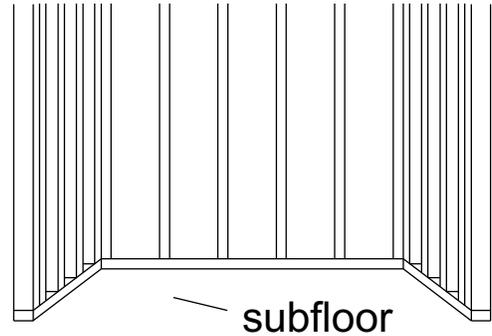


- a. Construct a frame area for the tub. Make sure the subfloor is level.
- b. Install the rough plumbing.

3

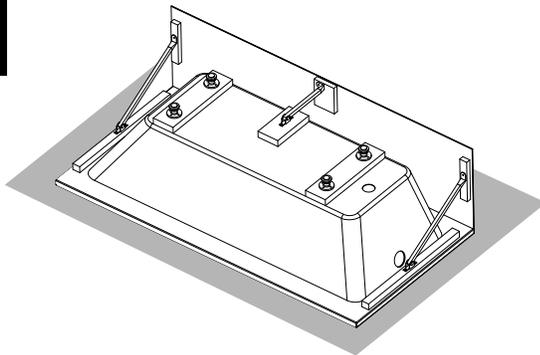

- a. Place cardboard / blanket on the floor.
- b. Turn bathtub over.

4

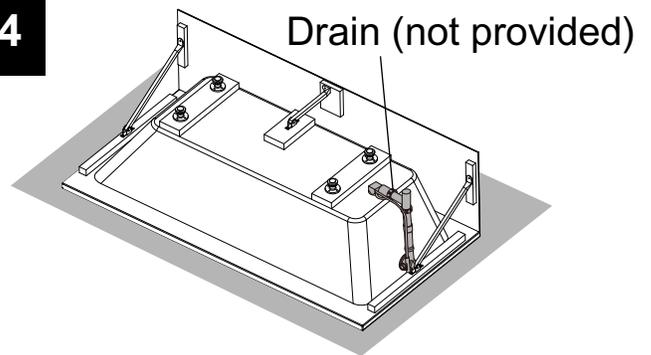


- Install the drain to the tub.  
Note: Do not use plumber's putty to seal the drain flange of drain, as it will deteriorate acrylic surfaces, causing cracks and, potentially, property damage. For best results, use sealant if needed.

# ANZZI®


## INSTALLATION

5

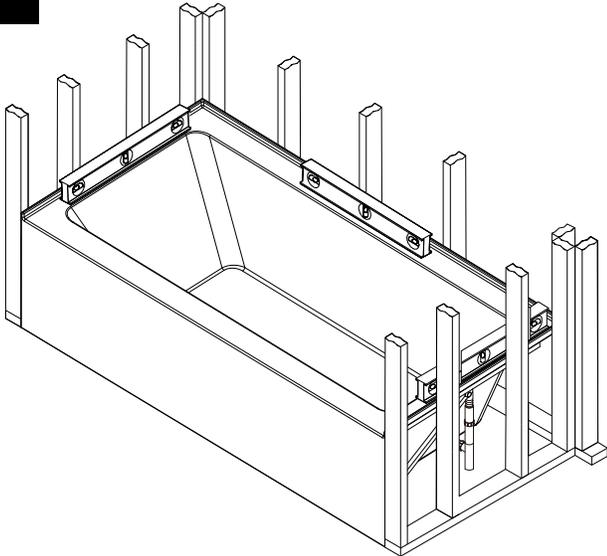

Set bathtub into designated frame area.

6

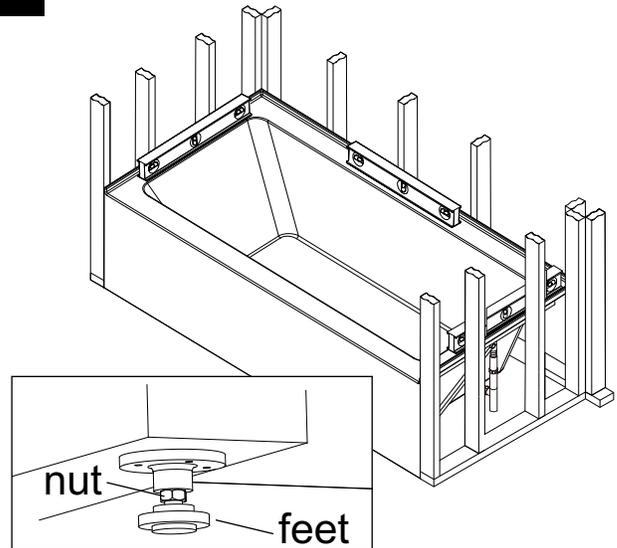


- Make sure the bathtub is level.
- Adjust feet if necessary. (Loosen the nut to adjust the foot. Tighten the nut after adjustment.)

# ANZZI®

## INSTALLATION

7

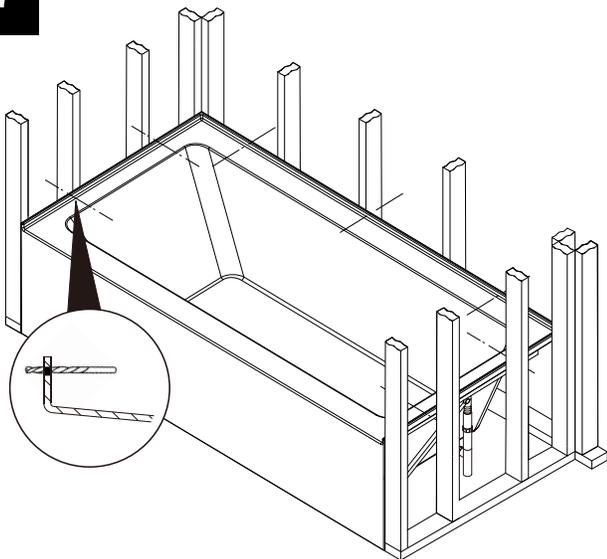


Drill 3/16" clearance holes in flat area of top flanges, and centered on each stud. Evenly space holes on front vertical flanges.

**NOTE:**

**Do not drill holes directly into studs.**

**Drill chuck can cause damage to product. Use a bit holder extension to reduce risk of drill chuck hitting panels.**

8

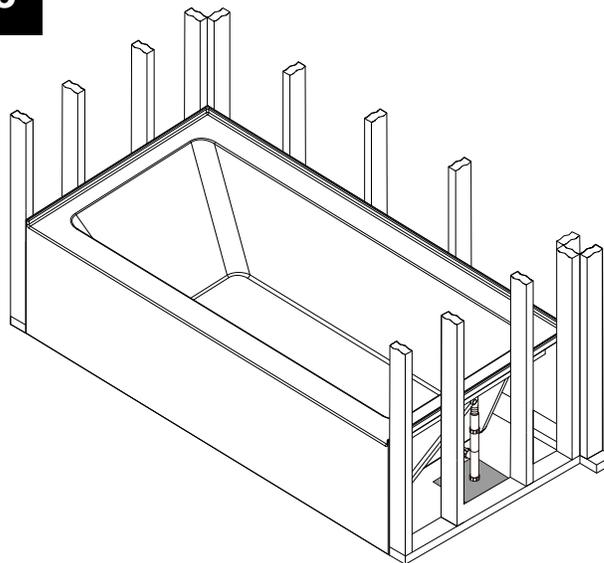

Connect the drain to the drain pipe.

# ANZZI®

## INSTALLATION

**9**

Less than 1/8" gap.

- Place drop cloth in bathtub and stand inside bathtub to press tub to floor when securing to wall studs.
- Secure the front vertical flanges with 1-1/4" truss head screws. Insert shims to fill any gaps.
- Fill the bathtub with water.
- Inspect for potential leaks.

**NOTE: Drill chuck can damage tub surface. Use a bit holder extension to reduce the risk of the chuck hitting the tub surface. Gaps between flanges and studs must be less than 1/8" after shimming.**

**10**

Finished Wall

Drywall Bathtub

- Finish wall and tiles.
- Apply silicone recommended for acrylic bathtubs only to all outer edges, and where base and finished wall meet.
- Fill the bathtub with water.
- Let it sit for 24 hours before draining.


**NOTE: Follow manufacturer's instructions for sealant curing time before use.**



# ANZZI®

## CLEANING AND MAINTENANCE

1. To preserve the polished surface, after using your tub clean with soft cloth and warm soapy water to wash away any body oils or soap residue that forms a ring mark.
2. Do not use powders, pastes, cream cleaners, thinners, window cleaning sprays or dry cleaning liquid, etc., to clean the tub.
3. To clean the overflow plate and pop-up drain, DO NOT use any household cleaners. Strong chemical cleaners can damage the finish and affect the function of this product. The product should only be cleaned with soapy water and rinsed with clean water and dried with a soft cloth.
4. When colored essentials oils are used, first test that the color won't stain your tub. Always add oils into a tub full of water. Never pour them directly into an empty tub.

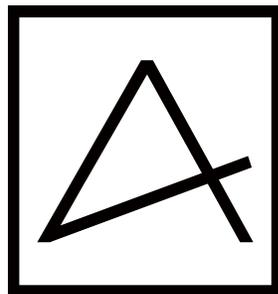

# ANZZI®