


# ASSEMBLY INSTRUCTIONS

## WESTBROOK CONSOLE TEXTURED


### WD/BLK MTL

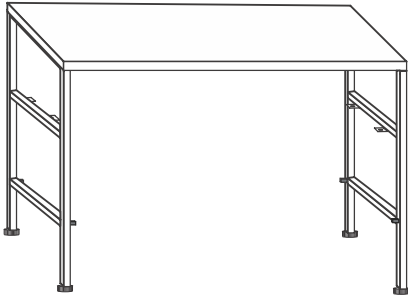

1 PC METAL FRAME WITH WOOD SHELF PRE- ATTACHED.  
PACKED AS FOLDED. UNFOLD THE FRAME FOR ASSEMBLY



1 PC METAL SHELF




2 PCS METAL SUPPORT BAR

8+1 EXTRA




SCREWS

x1

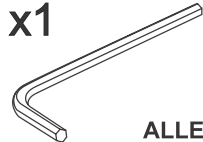


ALLEN KEY

#### STEP-1

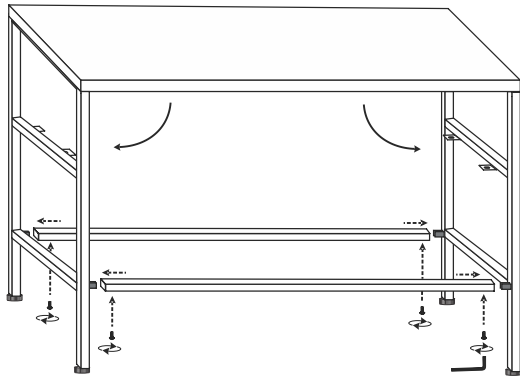


FIX THE METAL BARS WITH THE HELP OF ALLEN SCREWS

#### STEP-2

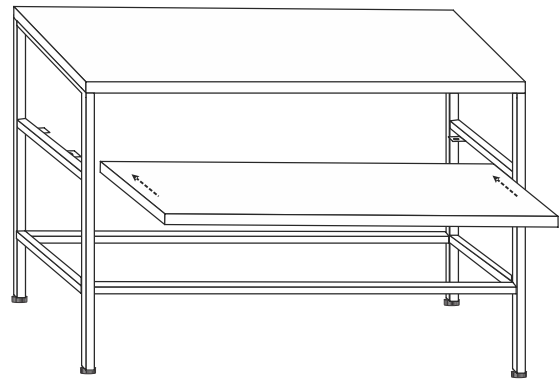


PLACE THE METAL SHELF.

#### STEP-3

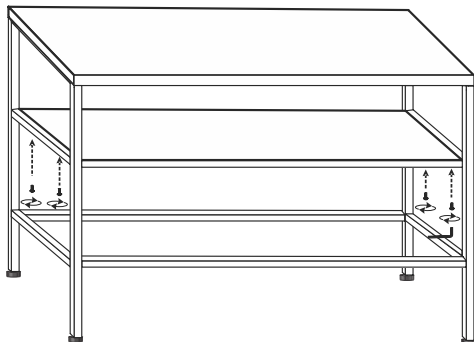


SECURE THE METAL SHELF WITH THE HELP OF ALLEN SCREWS.

#### READY TO USE

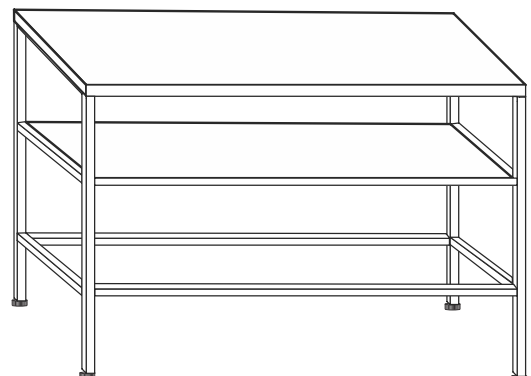

#### STEP-4

#### ASSEMBLED

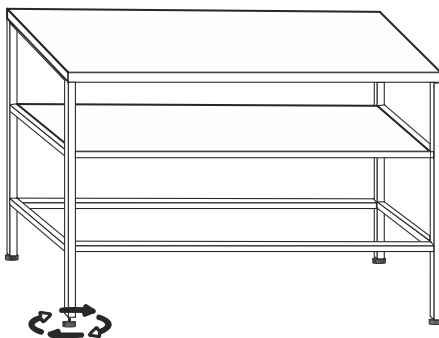

ADJUST THE LEVELLERS FOR PROPER BALANCE OF THE CONSOLE TABLE ON FLOOR.