


TOWNSEND LOW PROFILE E-KING/C-KING BED

ASSEMBLY INSTRUCTIONS




BOX #1

- A. HEADBOARD 1PC
B. FOOTBOARD 1PC

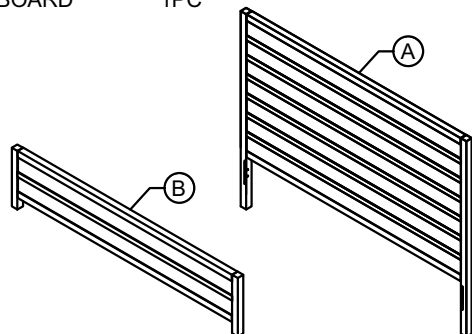


BOX #2

- C. SIDE RAIL 2 PCS
D. BED SLAT 3 PCS
E. LEG SUPPORT 6 PCS
BED HARDWARE BOX*

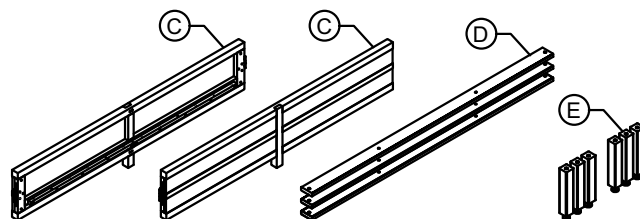

TOWNSEND LOW PROFILE BED ASSEMBLED


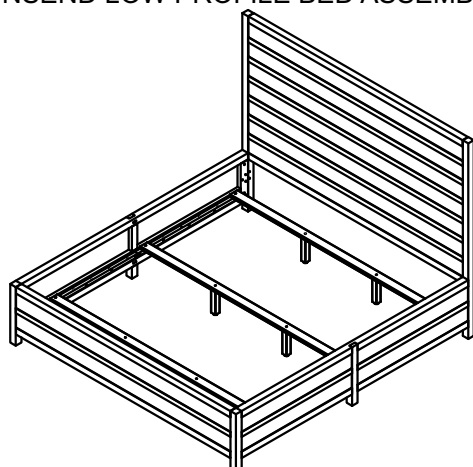


BED HARDWARE PACKED IN BOX #2


1	ALLEN BOLT (6X40mm)		7 PCS
2	WOOD SCREW (8X30mm)		7 PCS
3	ALLEN KEY		1 PC

TOOL REQUIRED : PHILLIPS HEAD
SCREWDRIVER (NOT PROVIDED)

**YOUR BOX
MAY CONTAIN
EXTRA HARDWARE**

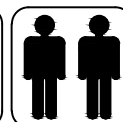


STEP 1 :

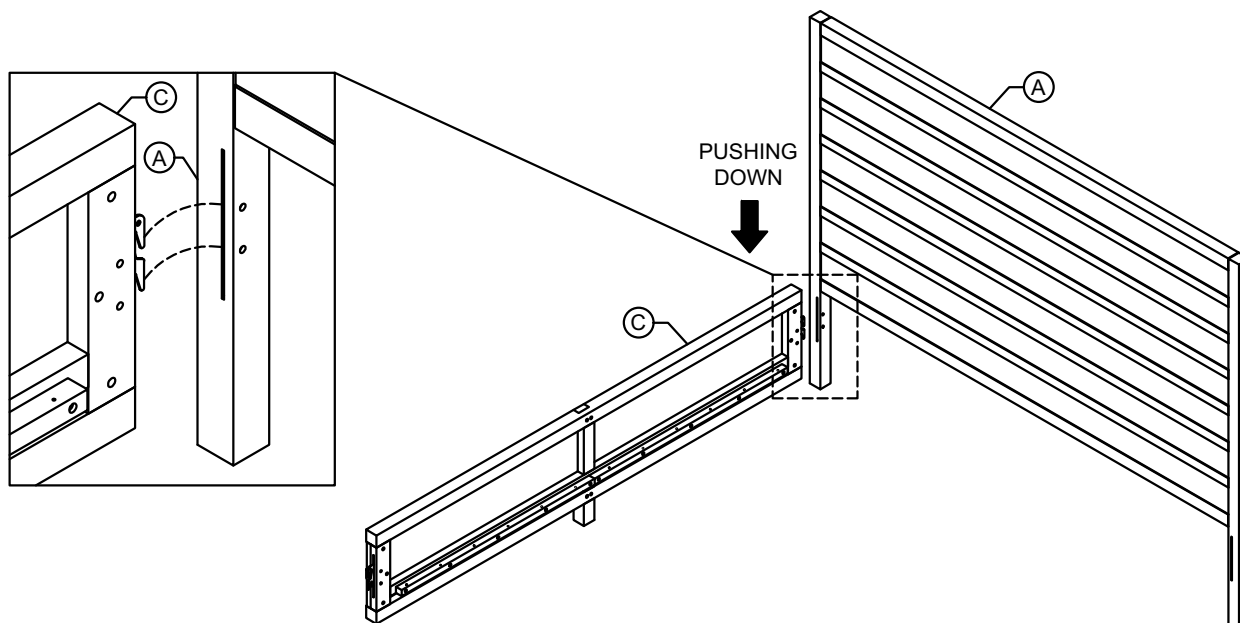

MODUS
FURNITURE

3:

Diagram 3 illustrates the assembly of the headboard and side rails. The main view shows the headboard (A) being attached to the side rails (B) using brackets (C). A detailed inset on the right shows the bracket (C) being secured to the side rail (B) with screws.




TOWNSEND LOW PROFILE E-KING/C-KING BED

ASSEMBLY INSTRUCTIONS



STEP 5 :

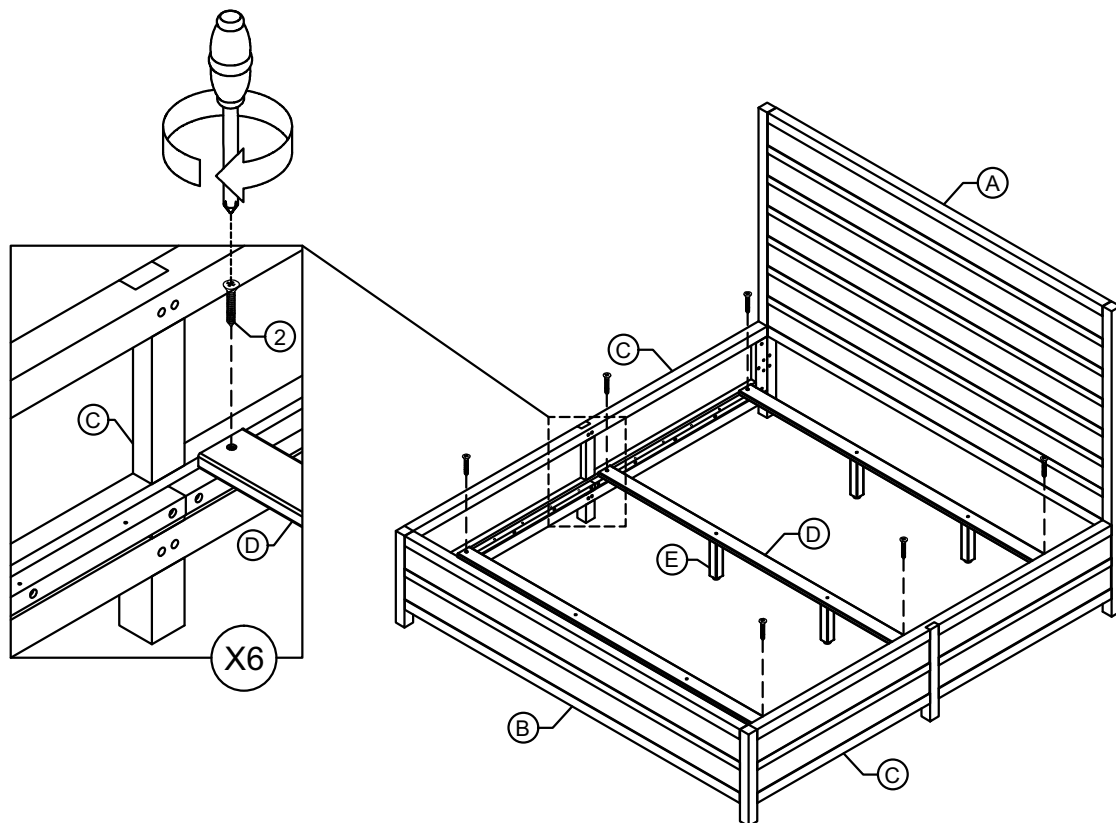


INSTRUCTIONS FOR ADJUSTING LEVELER :

Position the bed in your space and locate the leveler under each leg support (E).

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each slat support is applying equal, upward pressure on the bed slat support .

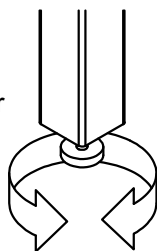

MAINTENANCE INSTRUCTION :

- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it. Dragging can damage the leg support.
- Readjust levelers after moving your bed.

TOWNSEND LOW PROFILE E-KING/C-KING BED

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. BED SLAT 3 PCS
E. LEG SUPPORT 6 PCS

1. ALLEN BOLT (6X40mm) 7 PCS
2. WOOD SCREW (8X30mm) 7 PCS

STEP 1:

USE ALLEN KEY (3) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

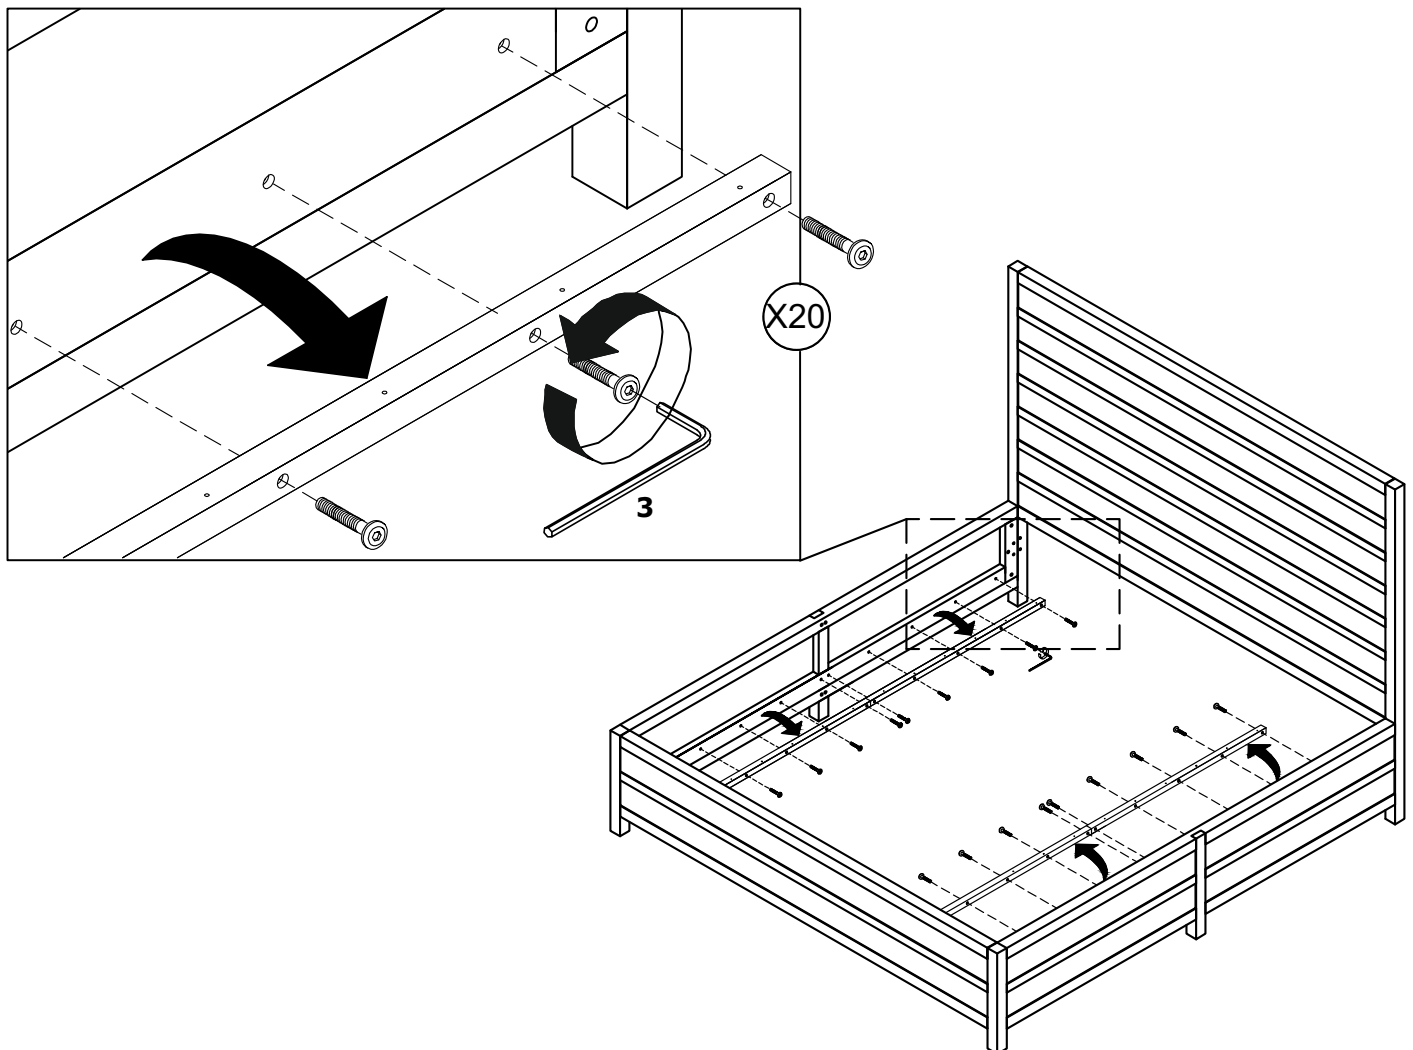

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.