


STEP 5

Use a bead of silicone around the perimeter of the sink. Check the alignment of the sink to the cutout in the countertop. Place countertop over sink and press firmly. Remove any excess sealant.

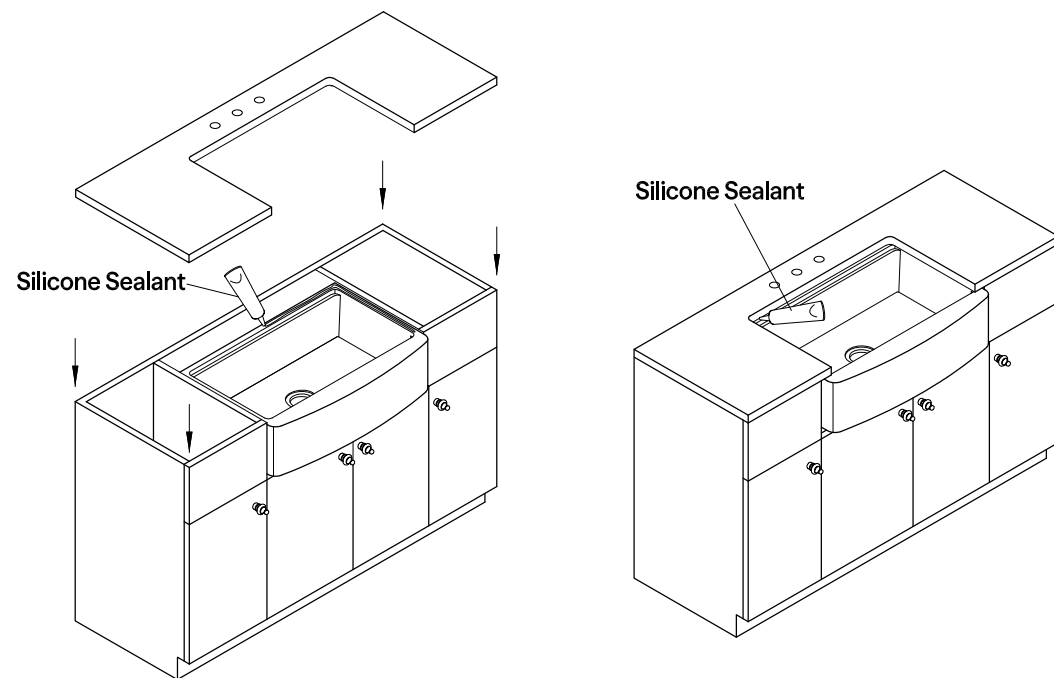


STEP 6

Install drain, trap, water supply and faucet according to manufacturer's instruction. Run water into sink and check for leaks



KINGSTON

GOURMETIER

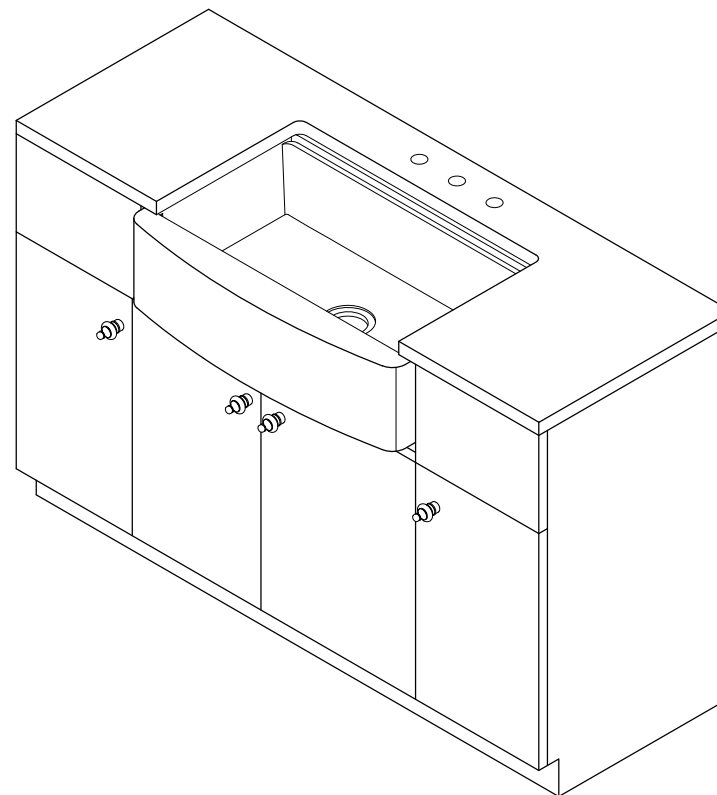

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: service@kingstonbrass.com

12775 Reservoir Street, Chino, CA 91710

NOTICE

Failure to follow all directions may cause leaks
which may result in water damage



WARNING

Lifting hazard.

Single person lift could
cause injury.
Use assistance when
moving or lifting.


GOURMETIER

Farmhouse Undermount Sink Installation Instructions


Before installation, make sure to have the paper template available as a guide, and using the actual sink will help achieve a more accurate cutout.

Note :

- It is recommended that all sink installations be performed by a qualified professional.
- Inspect sink prior to installation.
- Follow all plumbing and building codes.
- The warranty will be voided if all instructions are not followed.

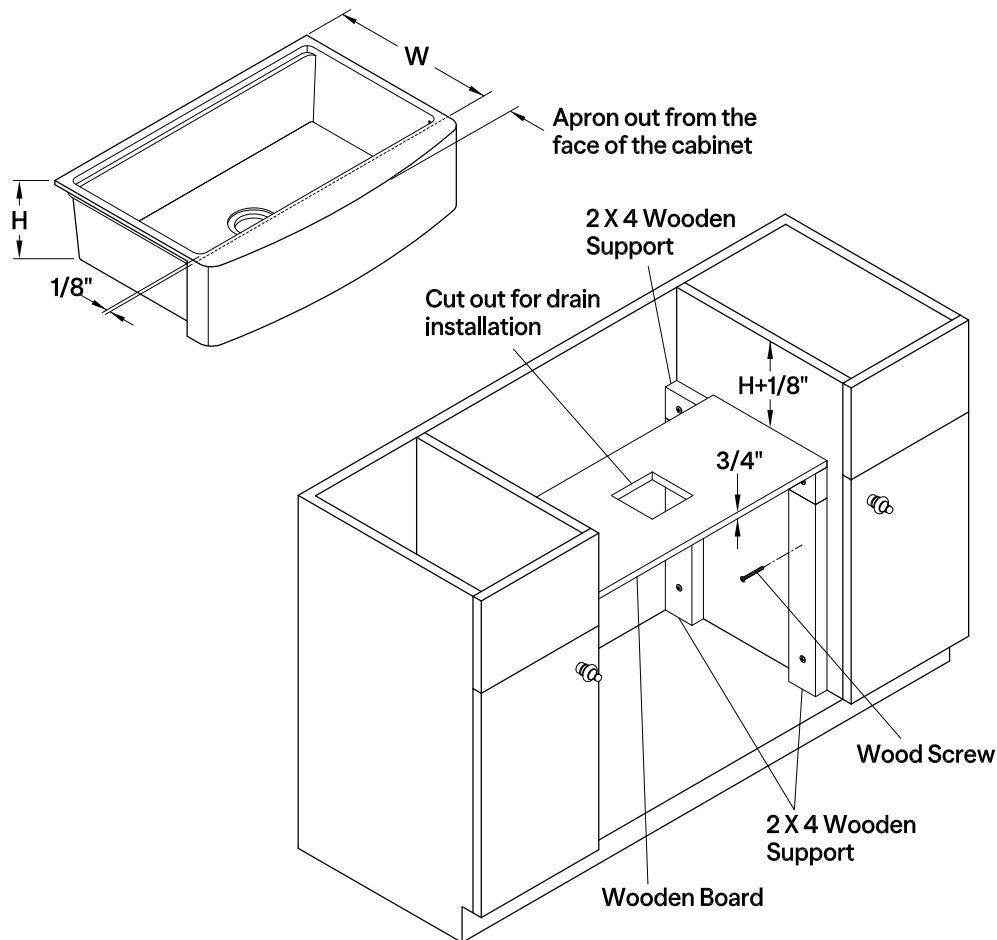

Tools Required

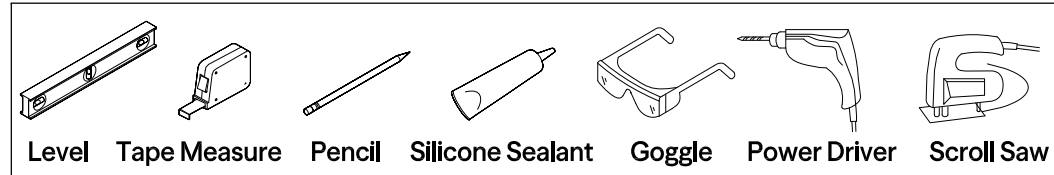

STEP 1

Prepare the sink base cabinet.

Farmhouse sinks require a special sink base cabinet with a front cutout and a platform built in place to support the sink.

STEP 2

Measure the actual height "H" of sink.

Measure the installation depth "W" of sink.

The farmhouse-style undermount sinks are designed to have the apron fully extend beyond the face of the cabinet. (illustration A)

STEP 3

Build 2 X 4 wooden supports on inside of cabinet based on sink measurements (H & W). (illustration B)

Be sure to allow sufficient space behind the sink for faucet installation and space under the sink for water supply line & drain installation.

STEP 4

Install the sink in the opening, check that the sink is level from side to side and front to back, add wood shims if necessary, once sink has been leveled, fill the gap using silicone caulking.

