


















# ASSEMBLY INSTRUCTION






ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard  
 6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard  
 6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard  
 6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard  
 6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy  
 6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy  
 6950-90463-80 6/0 Pole Rattan Rails and Canopy  
 6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK OF RAILS				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Threaded Rod	Ø3/8"*100mm	8 PCS
B		Curved Washer	Ø3/8"	8 PCS
C		Nut	Ø3/8"	16 PCS
D		Open Wrench	Ø3/8"	1 PC
E		Flat Washer	Ø3/8"	8 PCS
F		Threaded Rod	Ø3/8"*90mm	8 PCS
G		Screw	1 1/4"	8 PCS
H		Lock Washer	Ø3/8"	8 PCS

PART LIST			
NO.	DRAWING	DESCRIPTION	Q'TY
1		Headboard	1 PC
2		Rail	2 PCS
3		Footboard	1 PC
4		Footboard Post	2 PCS
5		Support Leg	5 PCS
6		Slat	5 PCS
7		Short Canopy Rail	2 PCS
8		Long Canopy Rail	2 PCS
9		Wood Cap	8 PCS


HARDWARE PACK OF FOOTBOARD				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Threaded Rod	Ø3/8"*100mm	4 PCS
B		Curved Washer	Ø3/8"	4 PCS
C		Nut	Ø3/8"	4 PCS
D		Open Wrench	Ø3/8"	1 PC
G		Screw	1 1/4"	20 PCS

# ASSEMBLY INSTRUCTION

ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard  
6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard  
6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard  
6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard  
6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy  
6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy  
6950-90463-80 6/0 Pole Rattan Rails and Canopy  
6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

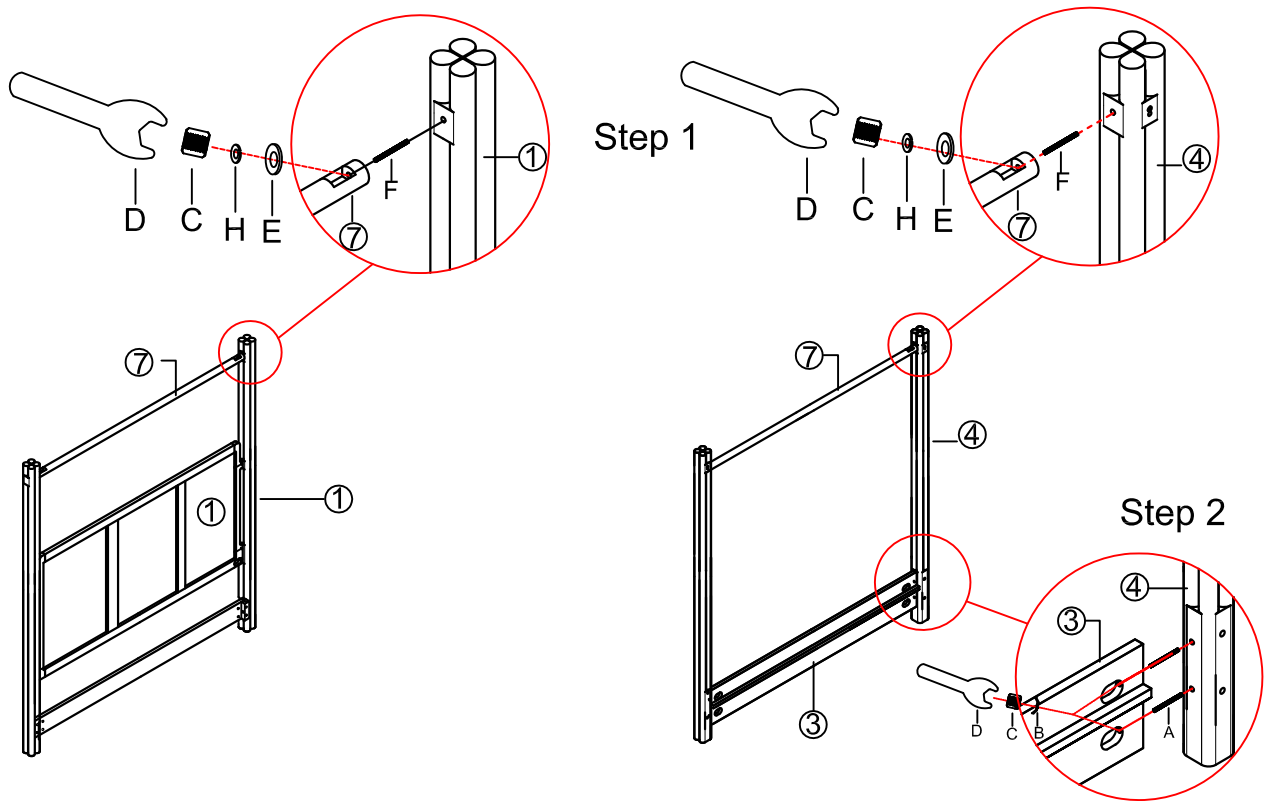

**Step 1:** Attach Short Canopy Rails (7) to Headboard post (1) and Footboard post (4) by using Threaded Rods (F), Flat Washers (E), Lock Washers (H) and Nuts (C), tighten them with Open Wrench (D) .


**Step 2:** Attach Footboard (3) to Footboard Posts (4) by using Threaded Rods (A), Curved Washers (B) and Nuts (C), tighten all with Open Wrench (D).

## ASSEMBLY INSTRUCTION

ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard  
 6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard  
 6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard  
 6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard  
 6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy  
 6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy  
 6950-90463-80 6/0 Pole Rattan Rails and Canopy  
 6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

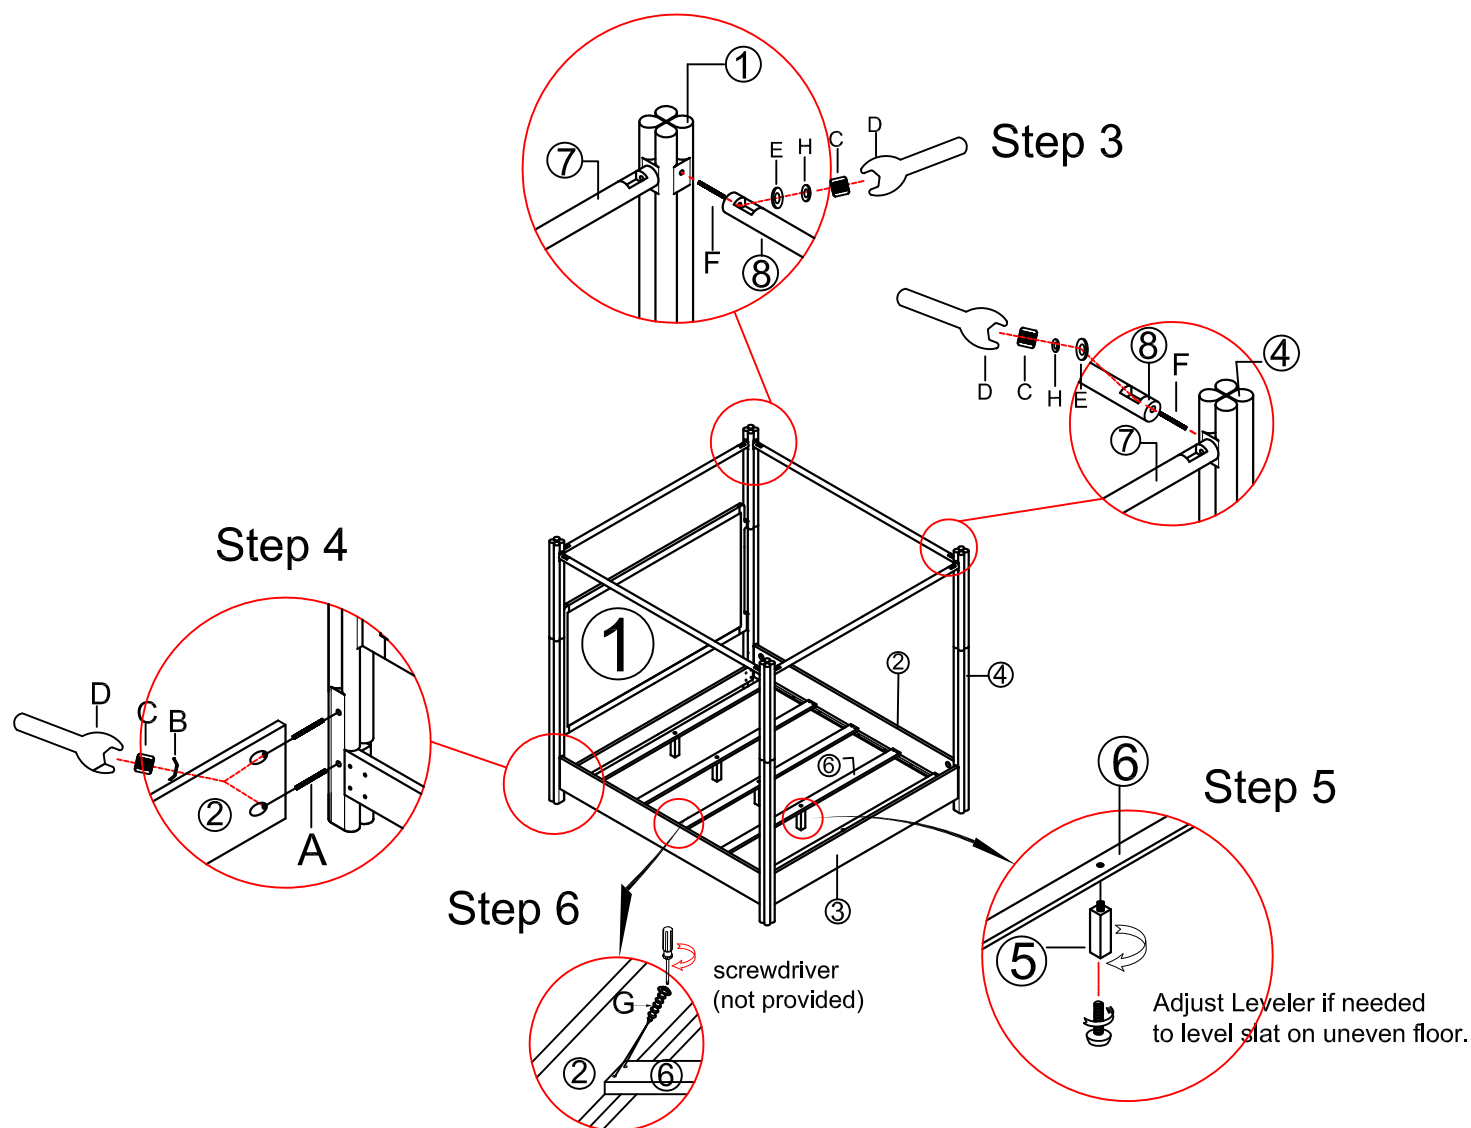

**Step 3:** Attach Long Canopy Rails (8) to Headboard post (1) and Footboard post (4) by using Threaded Rods (F), Flat Washers (E), Lock Washers (H) and Nuts (C), tighten them with Open Wrench (D) .

**Step 4:** Attach Rails (2) to Headboard (1) and Footboard (3) by using Threaded Rods (A), Curved Washers (B) and Nuts (C), tighten them with Open Wrench (D) .

**Step 5:** Attach Support Legs (5) to Slats (6).


**Step 6:** Attach Slats (6) to the Rails (2) and tighten them by using Phillips head screwdriver.

# ASSEMBLY INSTRUCTION

ITEM: 6950-90467-80 6/0-6/6 Pole Rattan Uph Poster Headboard  
6950-90467-99 6/0-6/6 Pole Rattan Uph Poster Headboard  
6950-90468-80 6/0-6/6 Pole Rattan Poster Footboard  
6950-90468-99 6/0-6/6 Pole Rattan Poster Footboard  
6950-90453-80 6/6 Pole Rattan Poster Rails and Canopy  
6950-90453-99 6/6 Pole Rattan Poster Rails and Canopy  
6950-90463-80 6/0 Pole Rattan Rails and Canopy  
6950-90463-99 6/0 Pole Rattan Rails and Canopy

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

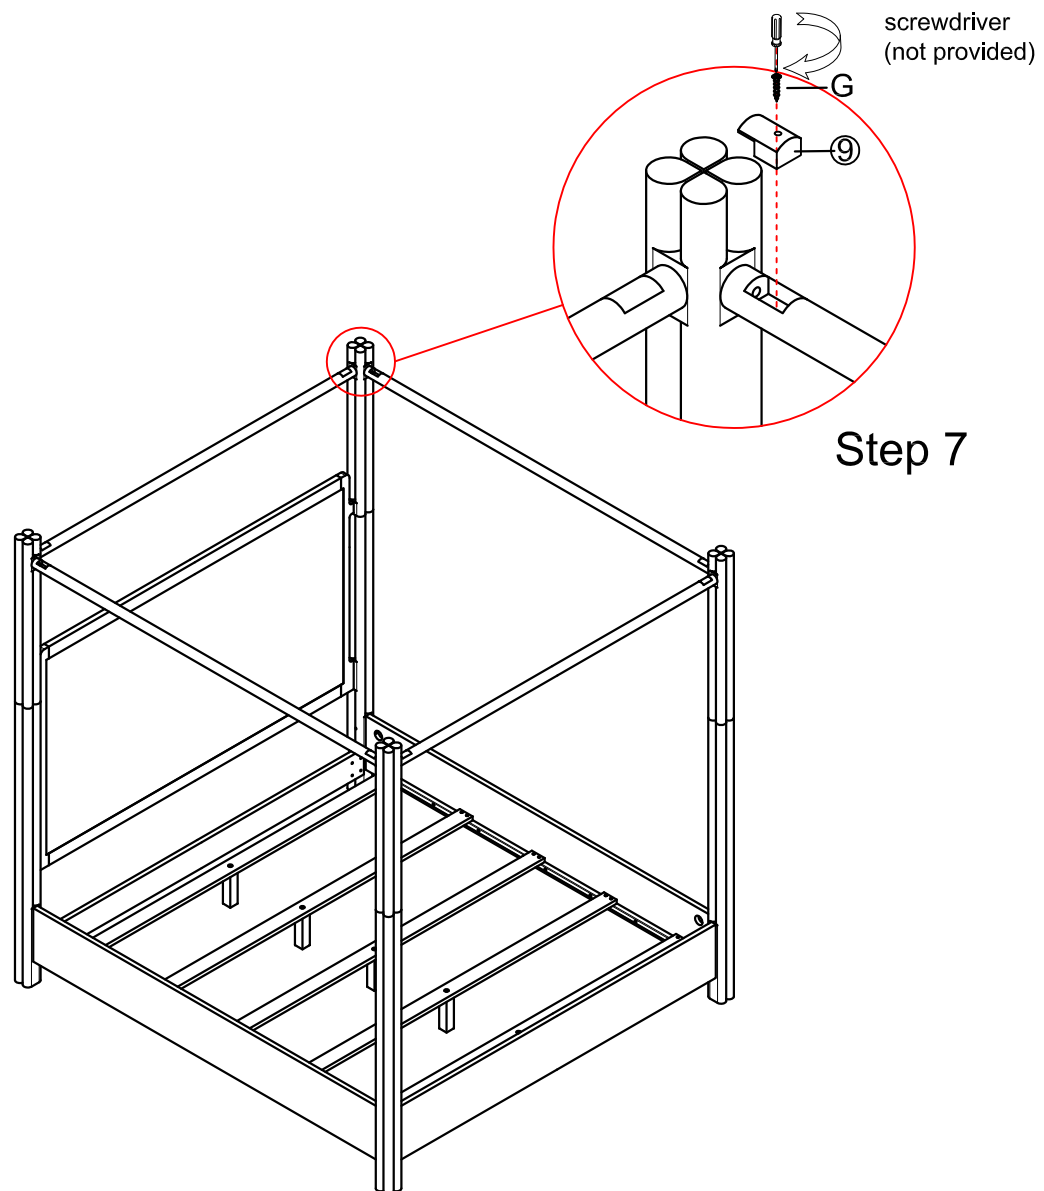

Step 6: Attach Wood Caps (9) to Canopy Rails (7&8) by using Screws (G), tighten them by using Phillips head screwdriver.