




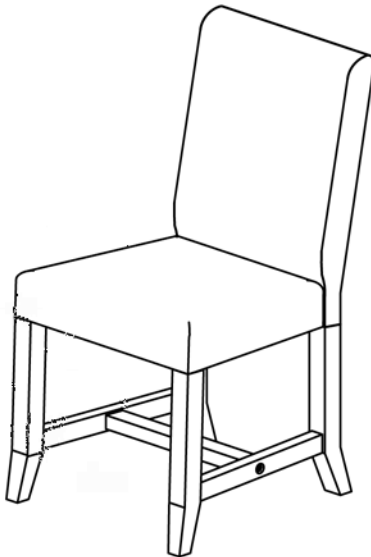


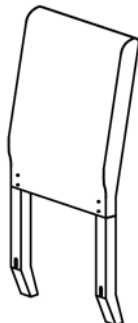











YOSEMITE CHAIR UPHOLSTERED  
ASSEMBLY INSTRUCTIONS




A. BACK FRAME 1 PC		F. LEFT STRETCHER 1 PC	G. RIGHT STRETCHER 1 PC
			
B. CHAIR FRAME 1 PC		YOSEMITE <u>CHAIR UPHOLSTERED</u> ASSEMBLED	
			
C. MIDDLE STRETCHER 1 PC			
			
D. LEFT LEG 1 PC	E. RIGHT LEG 1 PC		
			

HARDWARE ARE PACKED IN BOX

1	THREAD BOLT M8 x 50 MM	02 PCS	2	ALLEN BOLT M6 x 50 MM	04 PCS	3	ALLEN BOLT M6 x 70 MM	04 PCS	4	SPRING WASHER M9	08 PCS	5	WASHER M6	08 PCS
														
6	ALLEN KEY (4MM)	01 PC	7	SCREW M4 x 40 MM	04 PCS	8	HEXAGON NUTS M8	02 PCS	9	WASHER M8	02 PCS	10	M8	01 PC
														


TOOL REQUIRED

PHILLS HEAD SCREW  
DRIVER NOT PROVIDED

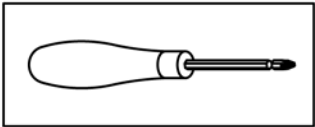


### STEP 1:

Attach frame (B) to back frame (A) by bolts (2), spring washers (4) and washers (5).

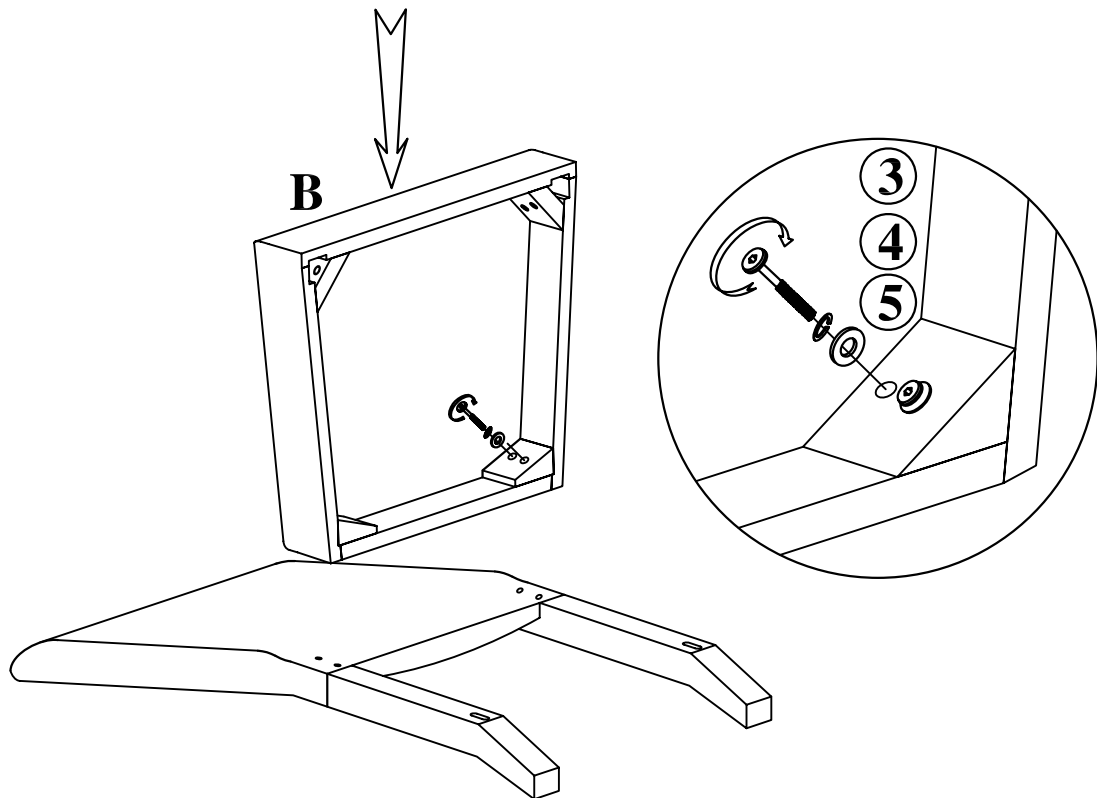


### STEP 2:

Attach 2 thread bolts (1) to middle stretcher (C).

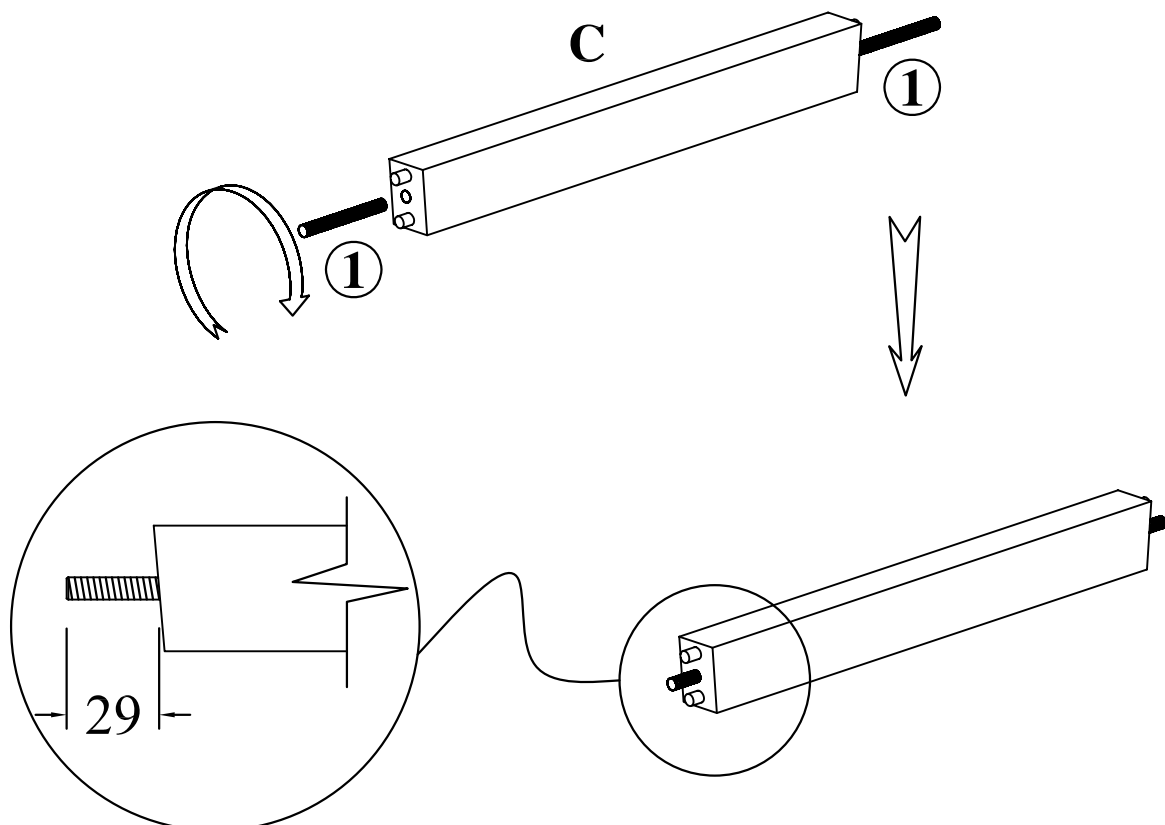


**STEP 3:**

Fix 2 stretchers (F,G) to middle stretcher (C) by hexagon nuts (8) and washer (9)

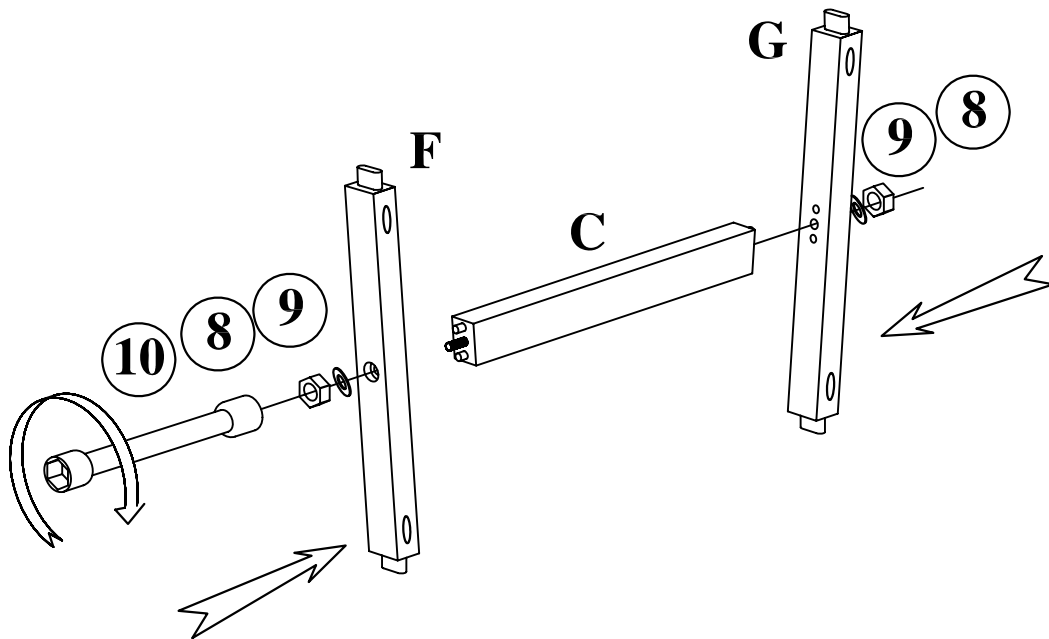


**STEP 4:**

Connect middle stretchers to back frame .

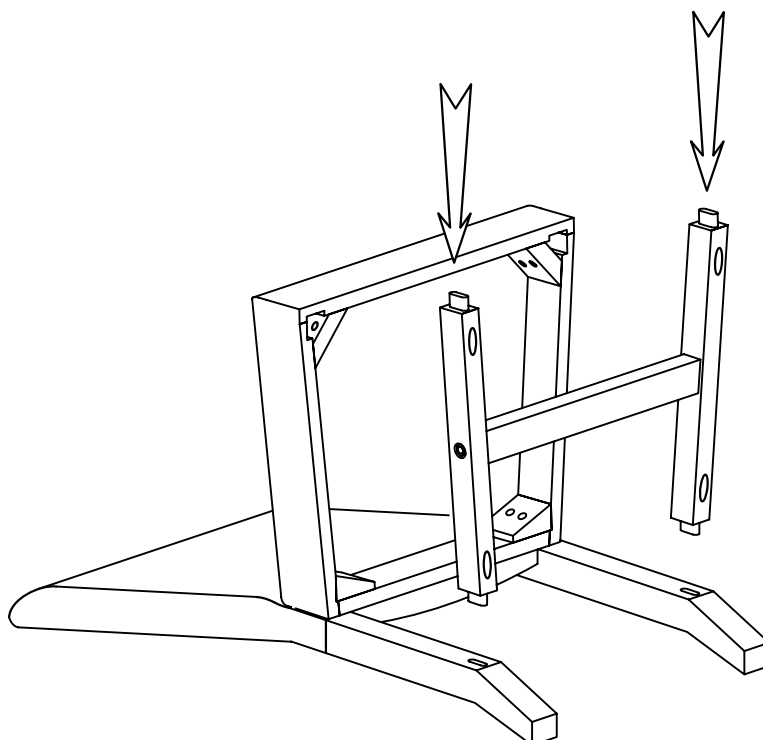

**STEP 5:**

Insert 2 legs (D,E). They are fixed by bolt (2) washer (4) and spring washer (5)

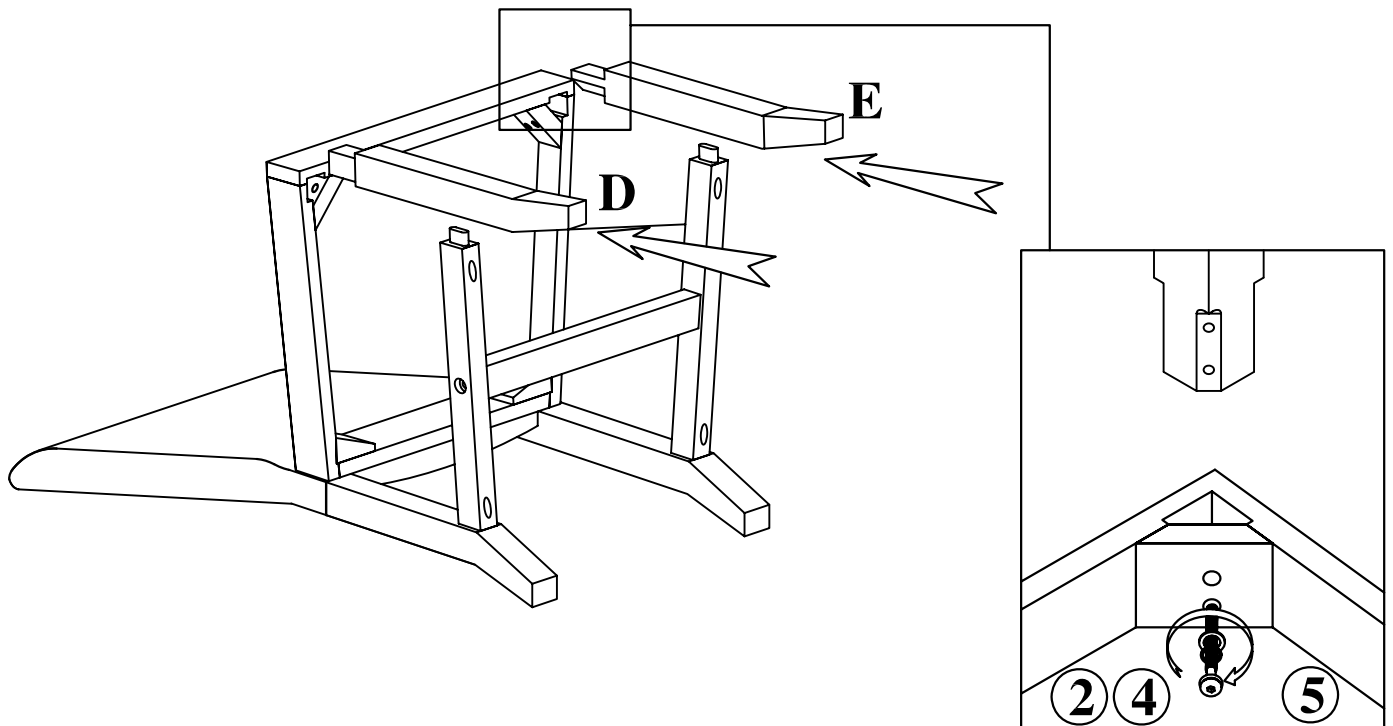**STEP 6:**

Fix middle stretcher again by screw (7).  
Assembly complete

