

GENEVA STORAGE BED

FULL / QUEEN SIZE

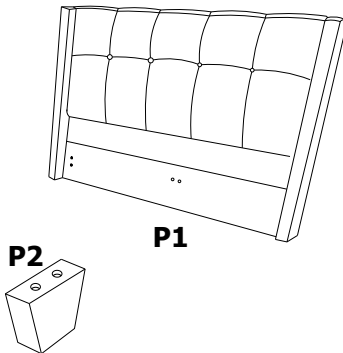
ASSEMBLY INSTRUCTIONS



PARTS AND FITTING PACKAGING DETAIL

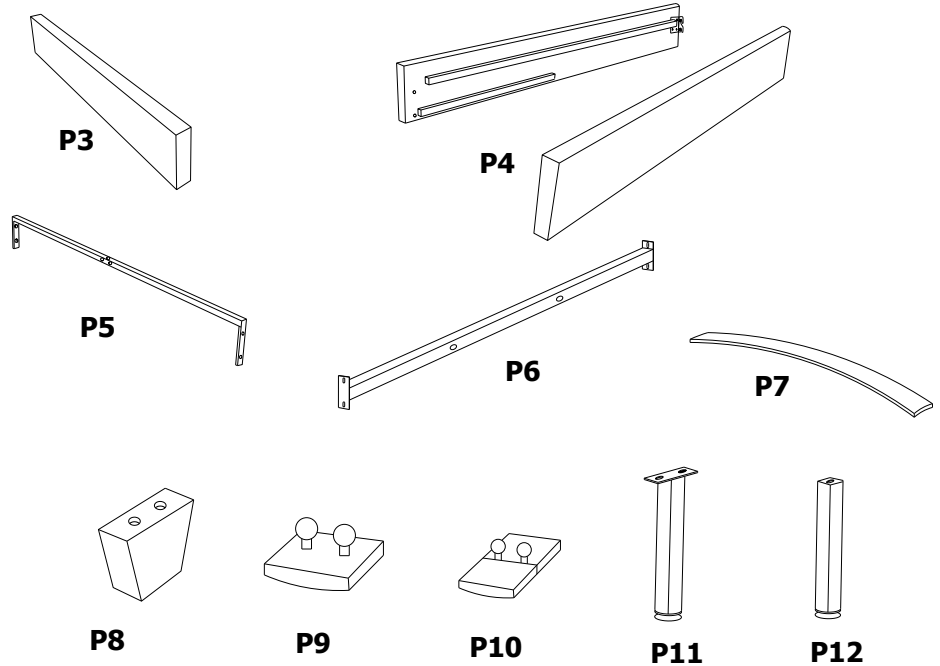
BOX #1

- P1. HEADBOARD 1 PC
P2. WOODEN LEG 2 PCS



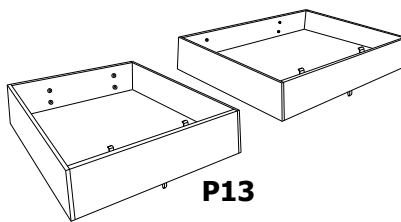
BOX #2

- P3. FOOTBOARD 1 PC
P4. SIDE RAIL 2 PCS
P5. METAL SUPPORT BRACE 1 PC
P6. CENTER SLAT SUPPORT 1 PC
P7. SLAT 26 PCS
P8. WOODEN LEG 2 PCS
P9. SIDE RAIL SLAT CLIP 26 PCS
P10. CENTER SUPPORT SLAT CLIP 13 PCS
P11. CENTER SUPPORT LEG 2 PCS
P12. METAL SUPPORT LEG 1 PC

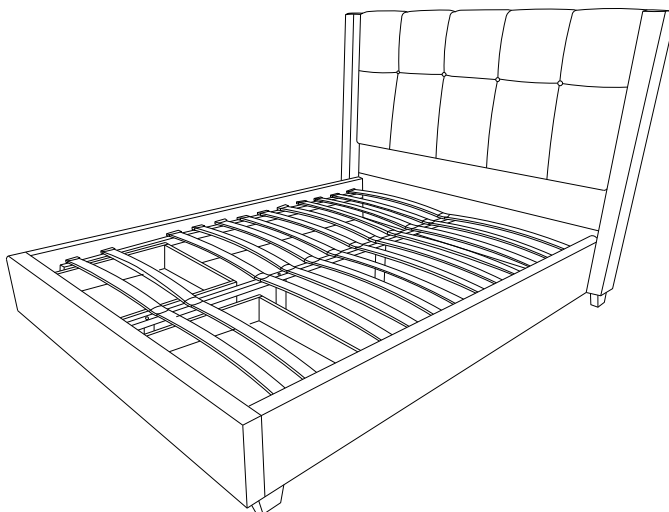










BOX #3









- P13. DRAWER BOX 2 PCS










GENEVA STORAGE BED ASSEMBLED



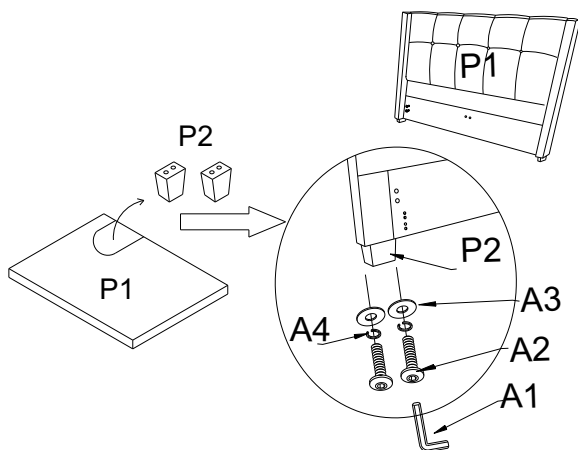
HARDWARE* PACKED IN BOX #1											
A1	ALLEN KEY 5/16"	1 PC	A2	BOLT 5/16"*3.25"	4 PCS	A3	FLAT WASHER	4 PCS	A4	LOCK WASHER	4 PCS
											
A5	ALLEN KEY 1/4"	1 PC	A6	BOLT 1/4"*1"	8 PCS	A7	FLAT WASHER	8 PCS	A8	LOCK WASHER	8 PCS
											

HARDWARE* PACKED IN BOX #2											
B1	ALLEN KEY 5/16"	1 PC	B2	SPANNER 5/16"	1 PC	B3	BOLT 5/16"*1"	6 PCS	B4	BOLT 5/16"*2.5"	7 PCS
											
B5	BOLT 5/16"*3.25"	2 PCS	B6	FLAT WASHER	21 PCS	B7	LOCK WASHER	21 PCS	B8	NUT 5/16"	6 PCS
											

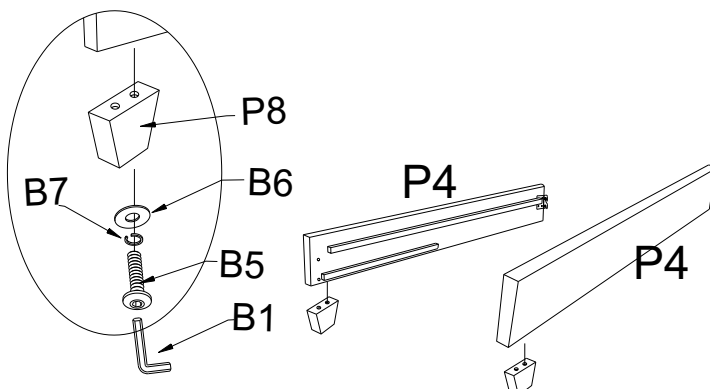
HARDWARE* PACKED IN BOX #3											
C1	ALLEN KEY 1/4"	1 PC	C2	BOLT 1/4"*1.25"	8 PCS	C3	FLAT WASHER	8 PCS	C4	LOCK WASHER	8 PCS
											
C5	BOLT 5/16"*2.5"	4 PCS	C6	FLAT WASHER	4 PCS	C7	LOCK WASHER	4 PCS			
											

STEP 1:

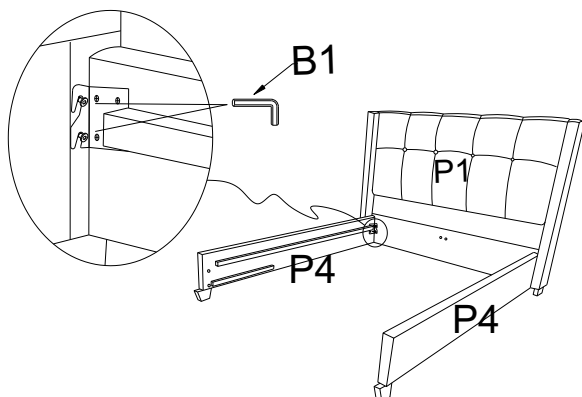
REMOVE WOODEN LEGS (P2) FROM BACK OF HEADBOARD. ATTACH TO BOTTOM OF HEADBOARD (P1) FOLLOWING ILLUSTRATION.

**STEP 2:**

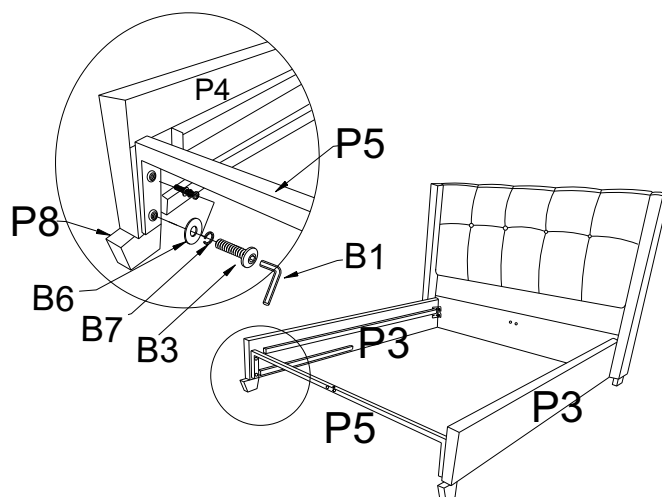
ATTACH WOODEN LEGS (P8) TO THE BOTTOM OF THE SIDE RAILS (P4) FOLLOWING ILLUSTRATION.

**STEP 3 :**

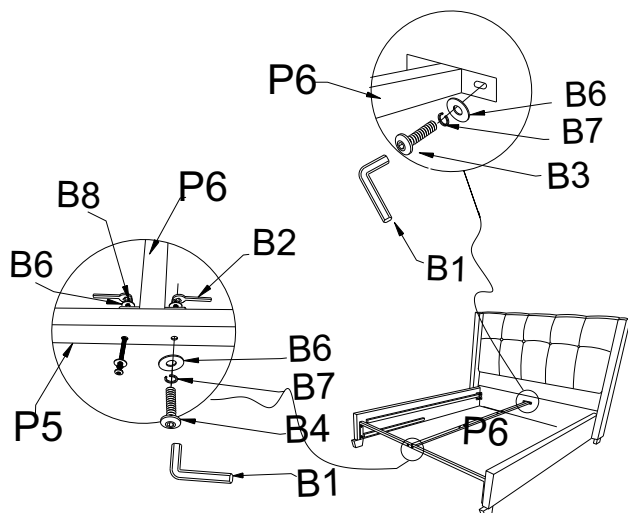
LOOSEN THE PREATTACHED BOLTS ON THE HEADBOARD AND CONNECT THE SIDE RAILS. TIGHTEN THE BOLTS WITH ALLEN KEY (B1).

**STEP 4 :**

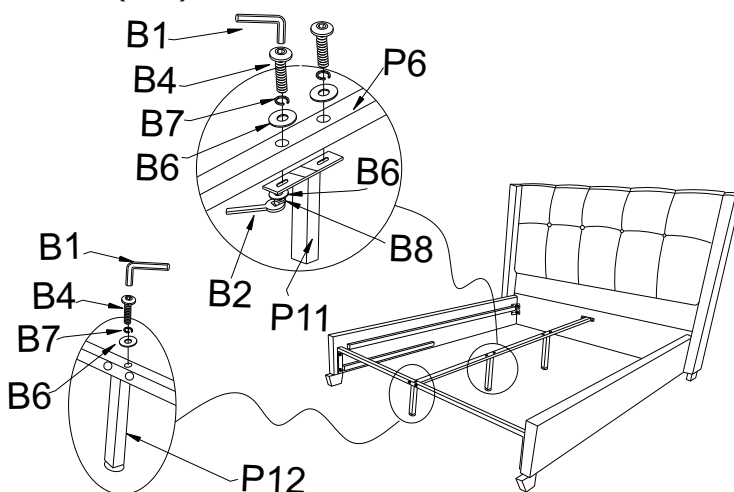
ATTACH METAL SUPPORT BRACE (P5) TO THE SIDE RAILS FOLLOWING ILLUSTRATION. TIGHTEN WITH ALLEN KEY.

**STEP 5 :**

CONNECT CENTER SLAT SUPPORTS (P6) TO HEADBOARD AND METAL SUPPORT BRACE FOLLOWING ILLUSTRATION.

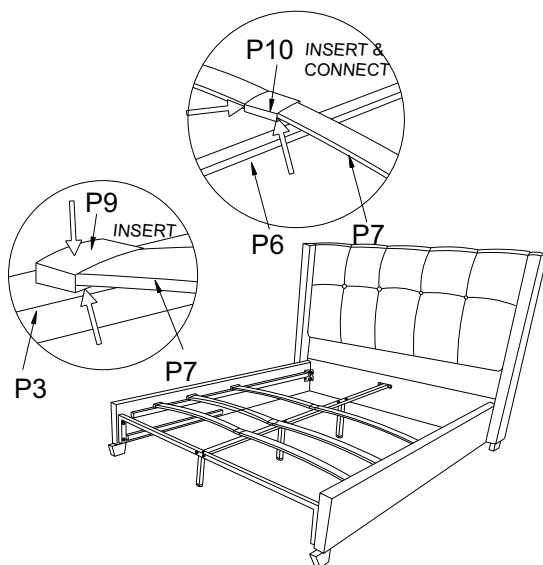
**STEP 6 :**

FOLLOWING ILLUSTRATION. ATTACH CENTER SUPPORT LEGS (P11) TO CENTER SLAT SUPPORT. ATTACH METAL SUPPORT LEG (P12) TO METAL SUPPORT BRACE.

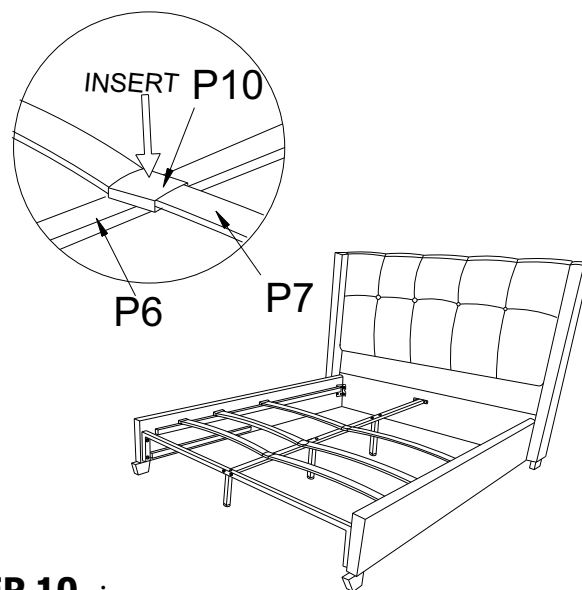


STEP 7 :

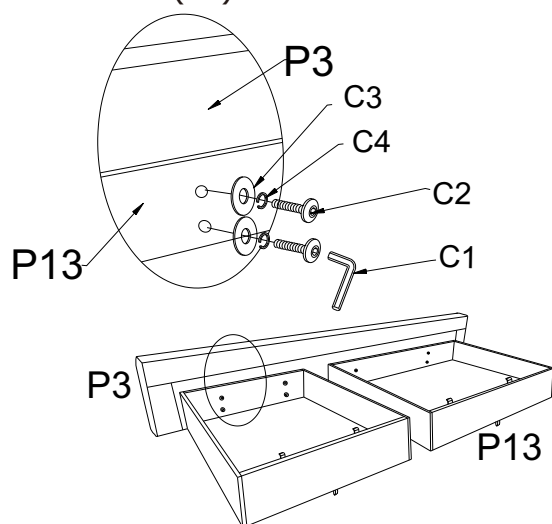
ATTACH SIDE RAIL SLAT CLIPS (P9) TO SIDE RAIL. INSERT SLATS (P7) INTO SIDE RAIL CLIPS THEN CONNECT THE SLAT SECTIONS WITH CENTER SUPPORT SLAT CLIPS (P10).

**STEP 8 :**

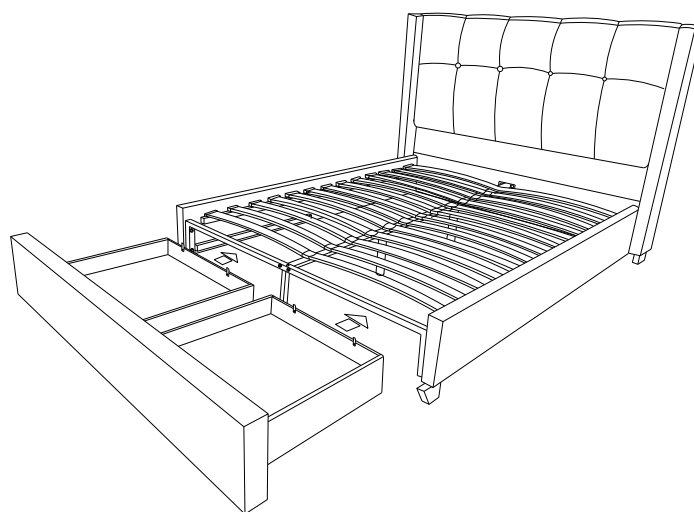
ATTACH CENTER SUPPORT CLIPS, WITH SLATS INSERTED, INTO CENTER SLAT SUPPORTS.

**STEP 9 :**

ATTACH DRAWER BOXES (P13) TO FOOTBOARD (P3) FOLLOWING THE ILLUSTRATION. TIGHTEN WITH ALLEN KEY (C1).

**STEP 10 :**

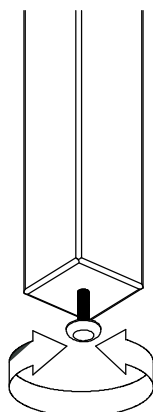
INSERT ASSEMBLED STORAGE DRAWER INTO FOOT OF BED.

**INSTRUCTIONS FOR ADJUSTING LEVELERS :**

POSITION THE BED IN YOUR ROOM. LOCATE LEVELERS UNDER EACH SUPPORT LEG (P11/P12).

TURN COUNTER-CLOCKWISE TO EXTEND, CLOCKWISE TO CONTRACT.

ADJUST LEVELERS UNTIL EACH LEG SUPPORT IS APPLYING EQUAL UPWARD PRESSURE ON THE CENTER SLAT.

**MAINTENANCE INSTRUCTIONS :**

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.

GENEVA STORAGE BED

C. KING/E. KING

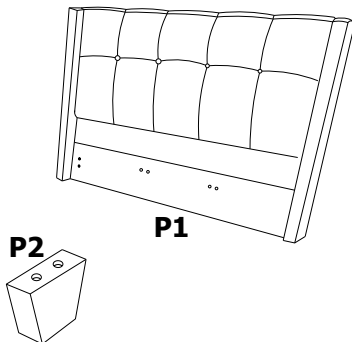
ASSEMBLY INSTRUCTIONS



PARTS AND FITTING PACKAGING DETAIL

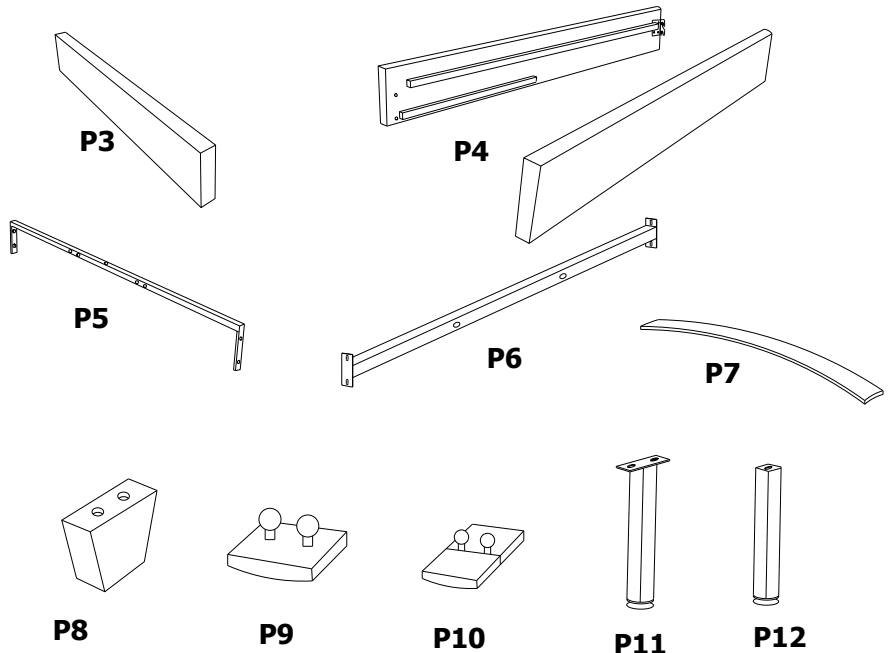
BOX #1

- P1. HEADBOARD 1 PC
P2. WOODEN LEG 2 PCS



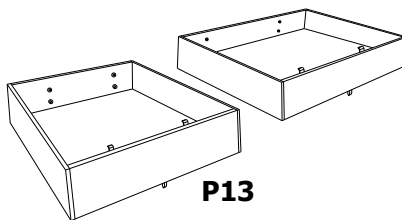
BOX #2

- P3. FOOTBOARD 1 PC
P4. SIDE RAIL 2 PCS
P5. METAL SUPPORT BRACE 1 PC
P6. CENTER SLAT SUPPORT 2 PCS
P7. SLAT 39 PCS
P8. WOODEN LEG 2 PCS
P9. SIDE RAIL SLAT CLIP 26 PCS
P10. CENTER SUPPORT SLAT CLIP 26 PCS
P11. CENTER SUPPORT LEG 4 PCS
P12. METAL SUPPORT LEG 1 PC

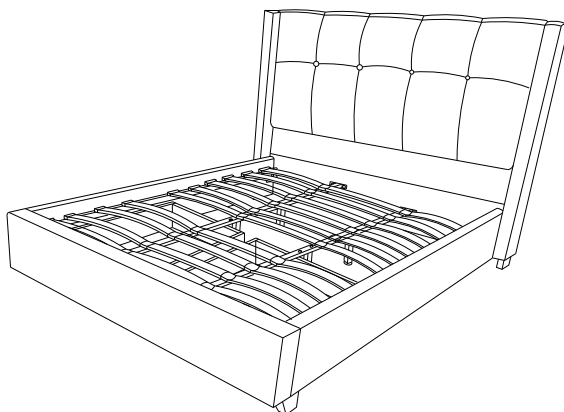


BOX #3









- P13. DRAWER BOX 2 PCS











GENEVA STORAGE BED ASSEMBLED










HARDWARE* PACKED IN BOX #1

A1	ALLEN KEY 5/16"	1 PC	A2	BOLT 5/16"*3.25"	4 PCS	A3	FLAT WASHER	4 PCS	A4	LOCK WASHER	4 PCS
											
A5	ALLEN KEY 1/4"	1 PC	A6	BOLT 1/4"*1"	8 PCS	A7	FLAT WASHER	8 PCS	A8	LOCK WASHER	8 PCS
											

HARDWARE* PACKED IN BOX #2

B1	ALLEN KEY 5/16"	1 PC	B2	SPANNER 5/16"	1 PC	B3	BOLT 5/16"*1"	8 PCS	B4	BOLT 5/16"*2.5"	13 PCS
											
B5	BOLT 5/16"*3.25"	2 PCS	B6	FLAT WASHER	35 PCS	B7	LOCK WASHER	35 PCS	B8	NUT 5/16"	12 PCS
											

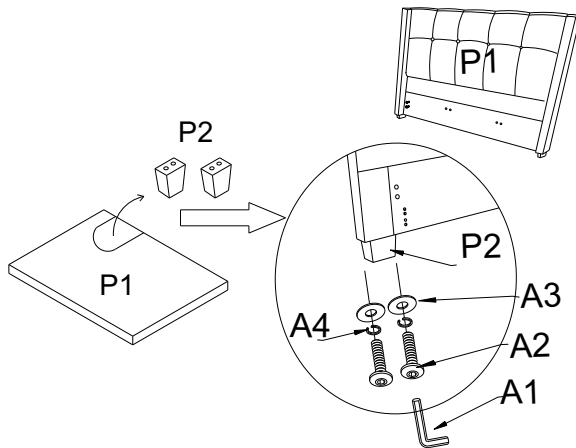
HARDWARE* PACKED IN BOX #3

C1	ALLEN KEY 1/4"	1 PC	C2	BOLT 1/4"*1.25"	8 PCS	C3	FLAT WASHER	8 PCS	C4	LOCK WASHER	8 PCS
											
C5	BOLT 5/16"*2.5"	4 PCS	C6	FLAT WASHER	4 PCS	C7	LOCK WASHER	4 PCS			
											

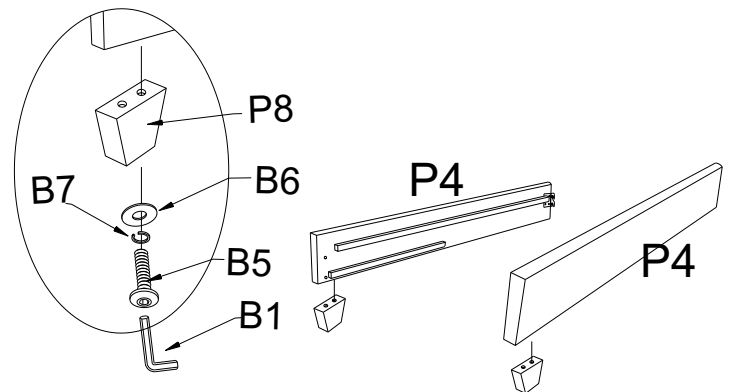
UPDATED : APRIL 17TH, 2018

STEP 1:

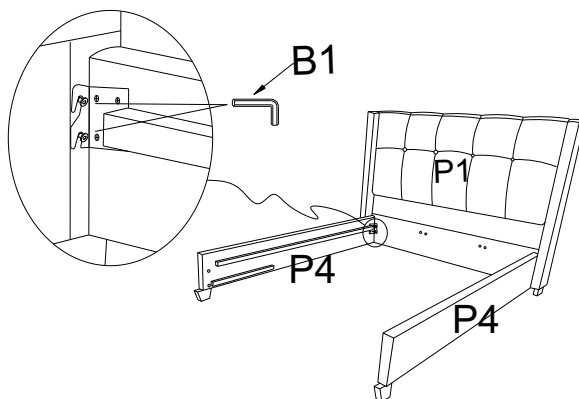
REMOVE WOODEN LEGS (P2) FROM BACK OF HEADBOARD. ATTACH TO BOTTOM OF HEADBOARD (P1) FOLLOWING ILLUSTRATION.

**STEP 2:**

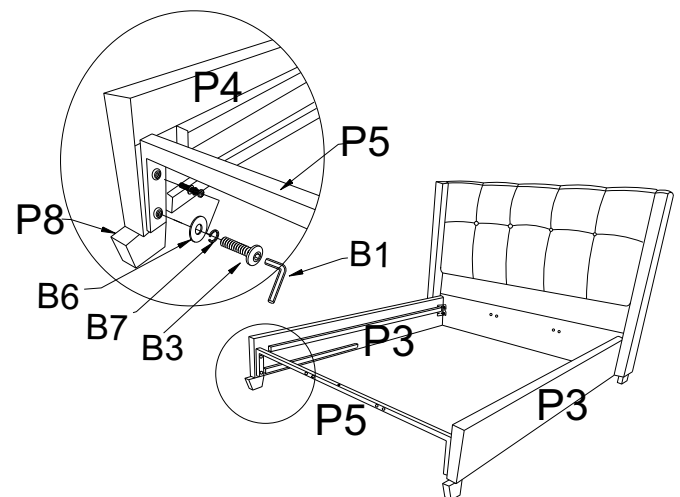
ATTACH WOODEN LEGS (P8) TO THE BOTTOM OF THE SIDE RAILS (P4) FOLLOWING ILLUSTRATION.

**STEP 3 :**

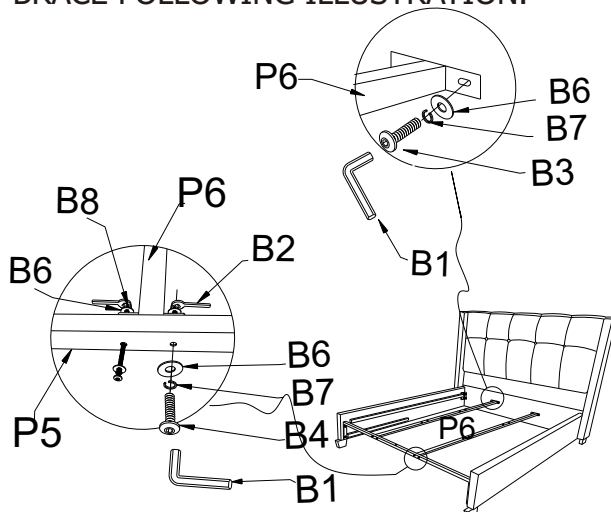
LOOSEN THE PREATTACHED BOLTS ON THE HEADBOARD AND CONNECT THE SIDE RAILS. TIGHTEN THE BOLTS WITH ALLEN KEY (B1).

**STEP 4 :**

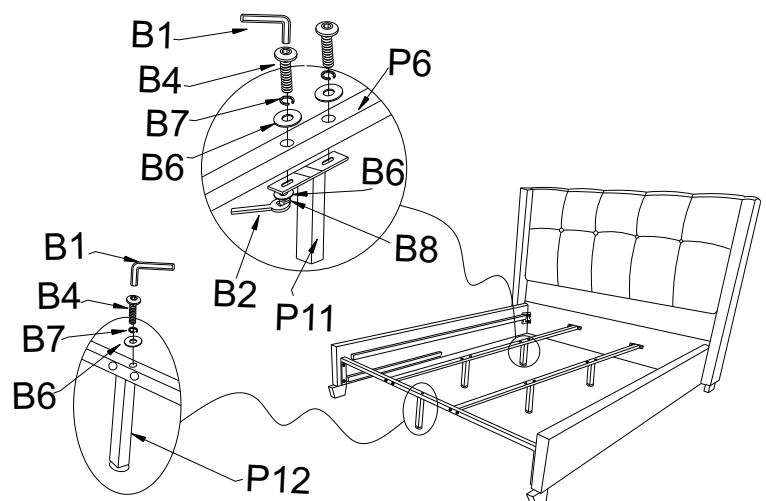
ATTACH METAL SUPPORT BRACE (P5) TO THE SIDE RAILS FOLLOWING ILLUSTRATION. TIGHTEN WITH ALLEN KEY.

**STEP 5 :**

CONNECT CENTER SLAT SUPPORTS (P6) TO HEADBOARD AND METAL SUPPORT BRACE FOLLOWING ILLUSTRATION.

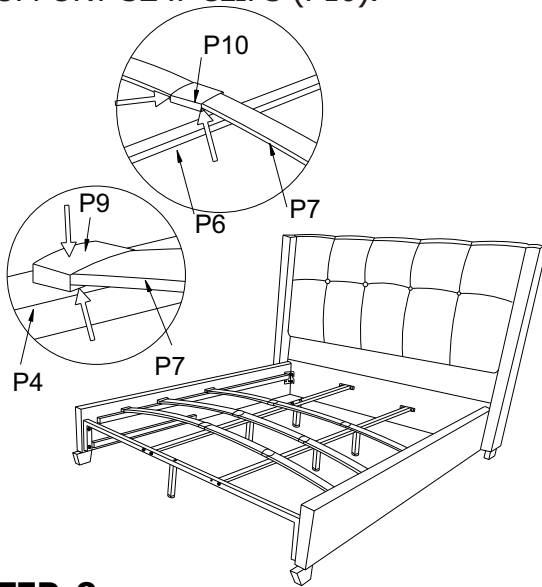
**STEP 6 :**

FOLLOWING ILLUSTRATION. ATTACH CENTER SUPPORT LEGS (P11) TO CENTER SLAT SUPPORT. ATTACH METAL SUPPORT LEG (P12) TO METAL SUPPORT BRACE.

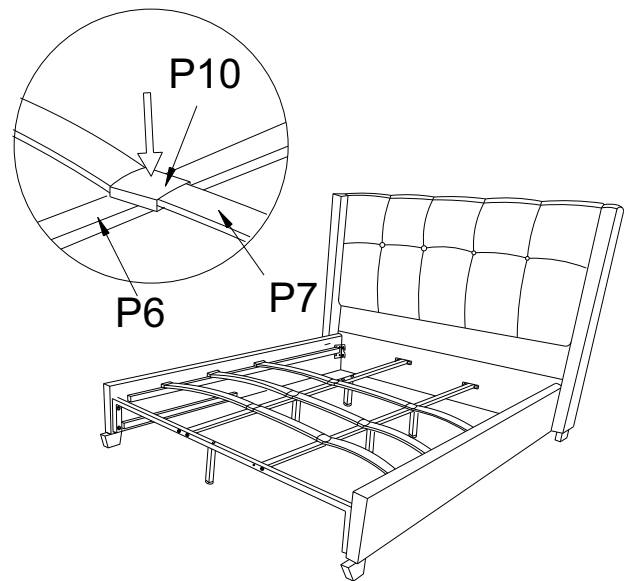


STEP 7 :

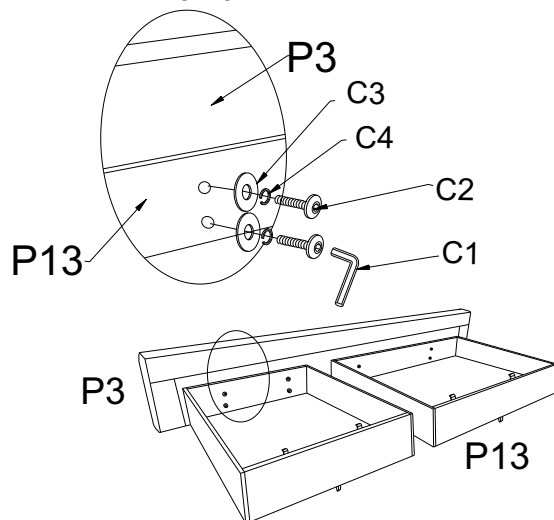
ATTACH SIDE RAIL SLAT CLIPS (P9) TO SIDE RAIL. INSERT SLATS (P7) INTO SIDE RAIL CLIPS THEN CONNECT THE SLAT SECTIONS WITH CENTER SUPPORT SLAT CLIPS (P10).

**STEP 8 :**

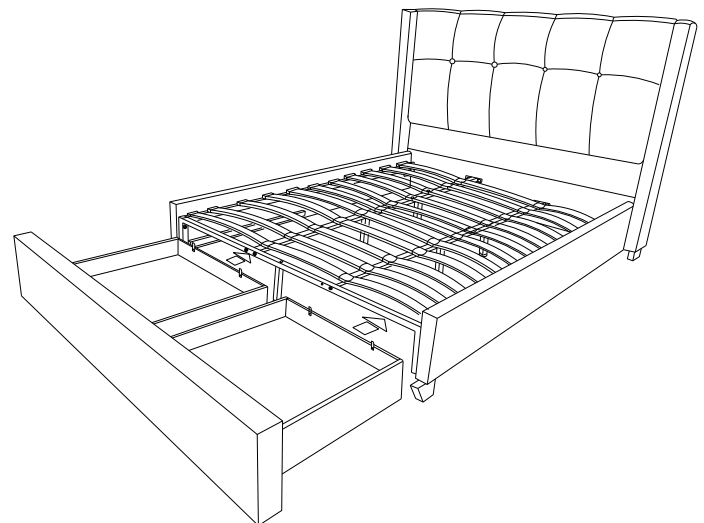
ATTACH CENTER SUPPORT CLIPS, WITH SLATS INSERTED, INTO CENTER SLAT SUPPORTS.

**STEP 9 :**

ATTACH DRAWER BOXES (P13) TO FOOTBOARD (P3) FOLLOWING THE ILLUSTRATION. TIGHTEN WITH ALLEN KEY (C1).

**STEP 10 :**

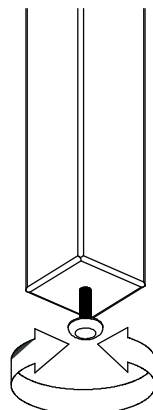
INSERT ASSEMBLED STORAGE DRAWER INTO FOOT OF BED.

**INSTRUCTIONS FOR ADJUSTING LEVELERS :**

POSITION THE BED IN YOUR ROOM. LOCATE LEVELERS UNDER EACH SUPPORT LEG (P11/P12).

TURN COUNTER-CLOCKWISE TO EXTEND, CLOCKWISE TO CONTRACT.

ADJUST LEVELERS UNTIL EACH LEG SUPPORT IS APPLYING EQUAL UPWARD PRESSURE ON THE CENTER SLAT.

**MAINTENANCE INSTRUCTIONS :**

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.