




DESIGNED IN CALIFORNIA

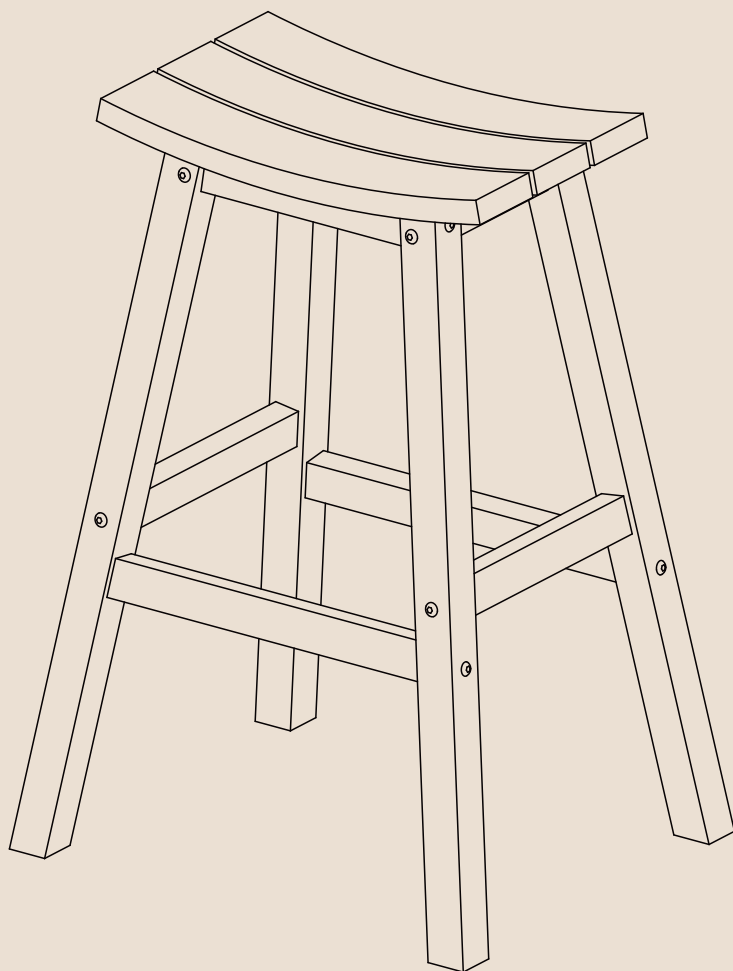

— CONTEMPO 29" SADDLE BAR STOOL —

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

<https://westintrends.com/welcome>



QUESTIONS OR COMMENTS?

If you have questions reach out to
cs@westintrends.com

FOLLOW, SHARE, & LEARN



PRODUCT REGISTRATION

<https://westintrends.com/apps/product-registration>



ACCESSIBILITY - COMMUNITY - VALUE - SUSTAINABILITY

! CARE & MAINTENANCE

Do not overtighten screws. (Insert all screws before tighten screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



STOOL
330 LBS
CAPACITY



1 PERSON
ASSEMBLY



UP TO 20 MIN.
ASSEMBLY

HARDWARE

1

BOLT
M6.3 x 70mm



16 PCS

PARTS

A

SADDLE



1 PC

B

STOOL LEG



2 PCS

C

STOOL LEG



2 PCS

D

SHORT RAIL



2 PCS

E


LONG RAIL



2 PCS

PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this stool and exact position of each parts to be assembled.

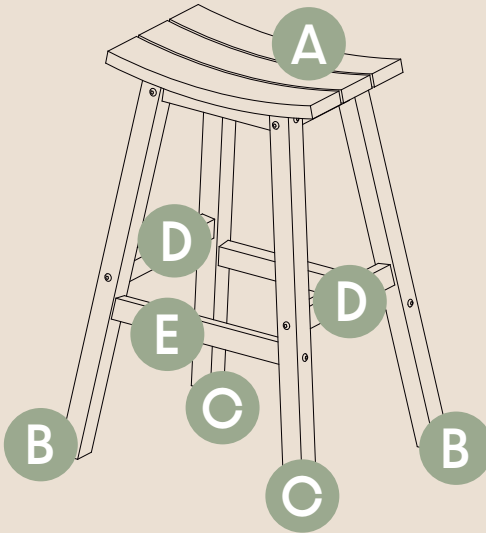


PRODUCT ASSEMBLY

1

Attach **Part B & C Stool Legs** to **Part A Saddle** with 8 pcs of **Hardware #1 Bolt**.


Do not tighten screws too much at this step.

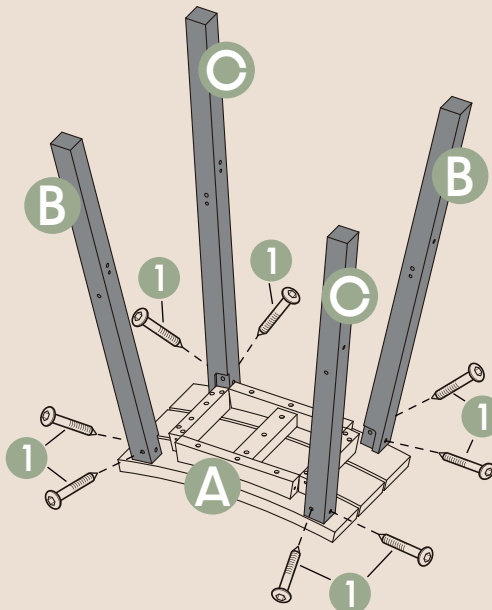

2

Remove the cap from the safety pin before you fix the **Part D Short Rail** to **Part B & C Stool Legs**. Attach **Part D Short Rail** to **Part C** and **Part B Stool Legs** with 4 pcs of **Hardware #1 Bolt**.

Do not tighten screws too much at this step.

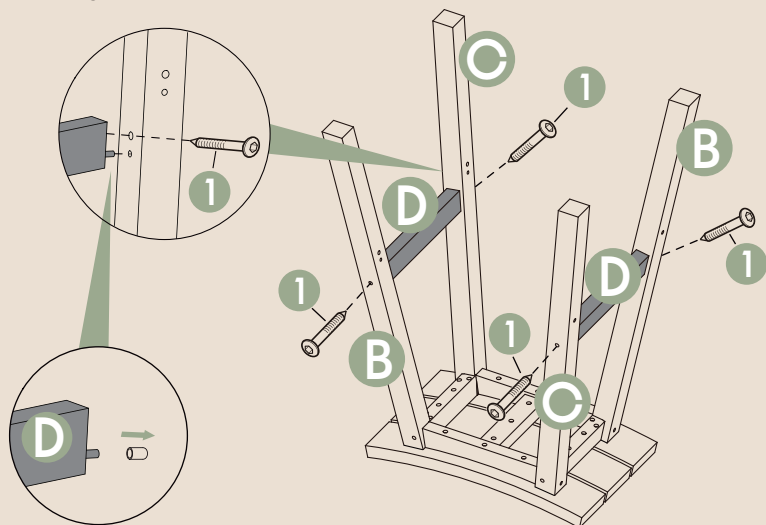


Remove the cap only.

3

Attach **Part E Long Rail** to the combined **Legs (Part B+C)** as below with 4 pcs of **Hardware #1 Bolts**.


Remove the cap from the safety pin before you fix the **Part E Long Rail** to stool legs.

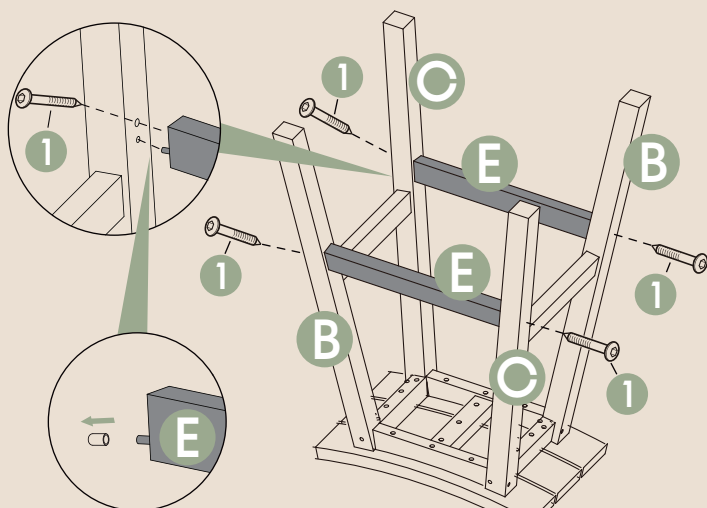

Remove the cap only.

4

Tighten all the bolts and finish the assembly.

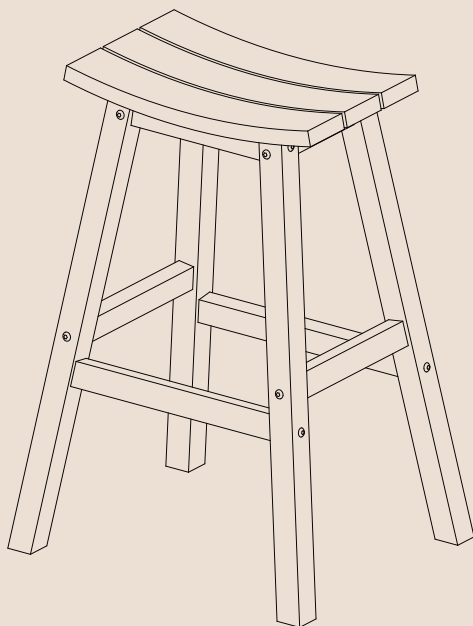

REGISTRATION & REFUND POLICY

<https://westintrends.com/apps/product-registration>



<https://westintrends.com/policies/refund-policy>



HAVING TROUBLE

- **Not sure how to assemble or missing pieces?**

Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #, Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning - **DO NOT exceed 1500 PSI** - this will remove any debris and dirt.