

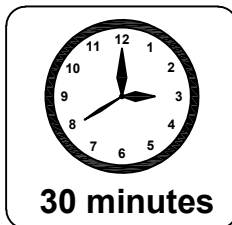

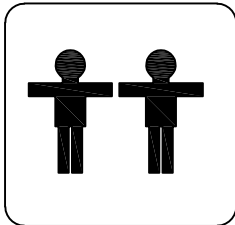
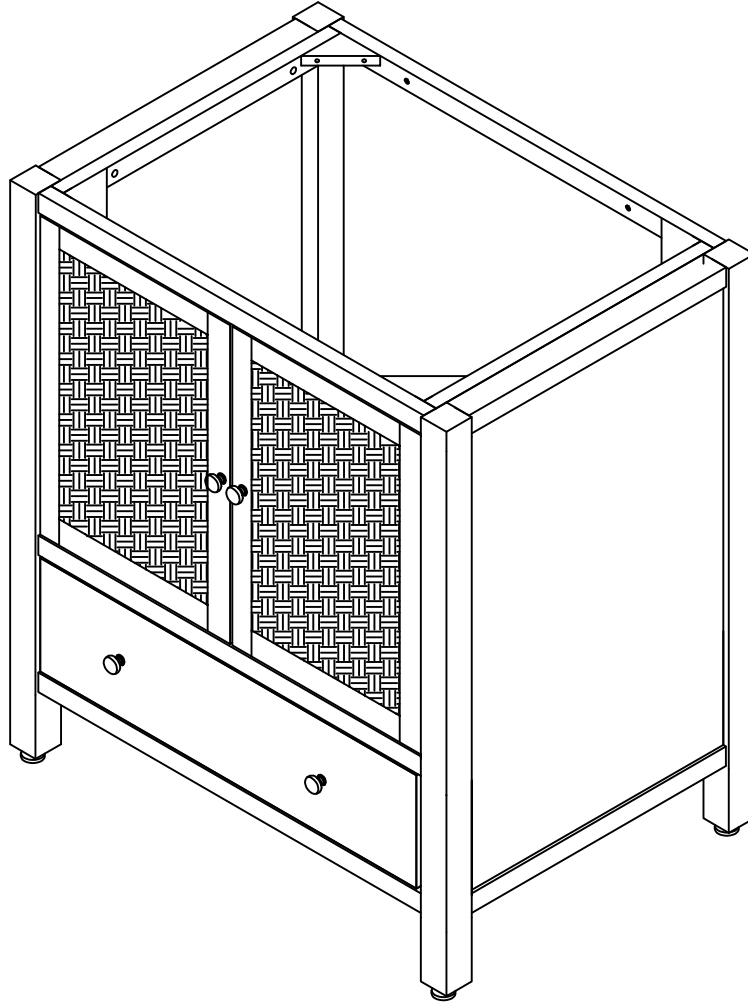


ASSEMBLY INSTRUCTION

36"VANITY

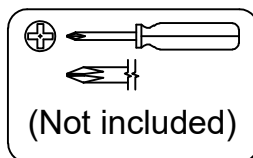

Tools Required

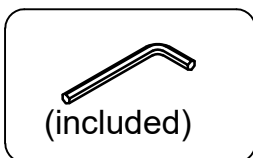


ASSEMBLY VIDEO

www.boltonfurniture.com







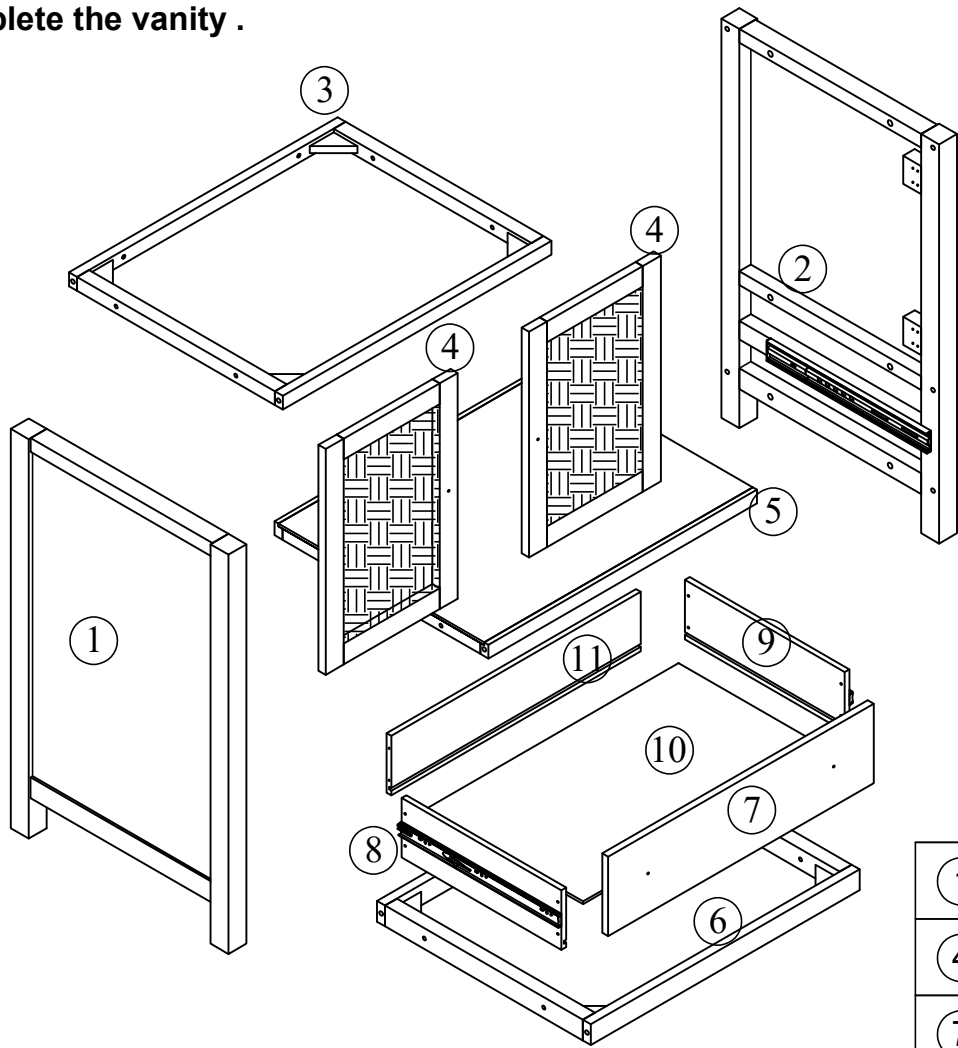


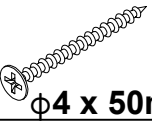




Part list - 36" VANITY

Before assembling please confirm you have all of the parts and hardware required to complete the vanity .




QTY					
①	1	②	1	③	1
④	2	⑤	1	⑥	1
⑦	1	⑧	1	⑨	1
⑩	1	⑪	1		


Identifying the hardware-Identify the hardware using the illustrations below

A  Ø10x35 10	B  M6x45mm Bolt 08	C  Hinges 04
D  φ3.5 x 12mm Screw 24	E  Knob 04	F  φ4 x 25mm Bolt 04
G  Hex Wrench 01	H  φ4 x 25mm Screw 08	I  Leveler 04
J  φ4 x 50mm Screw 02	K  4x40mm Anchor 02	L  M6x35mm Bolt 04
M  Door Stopper 01	N  φ4 x 15mm Screw 02	

Step 01

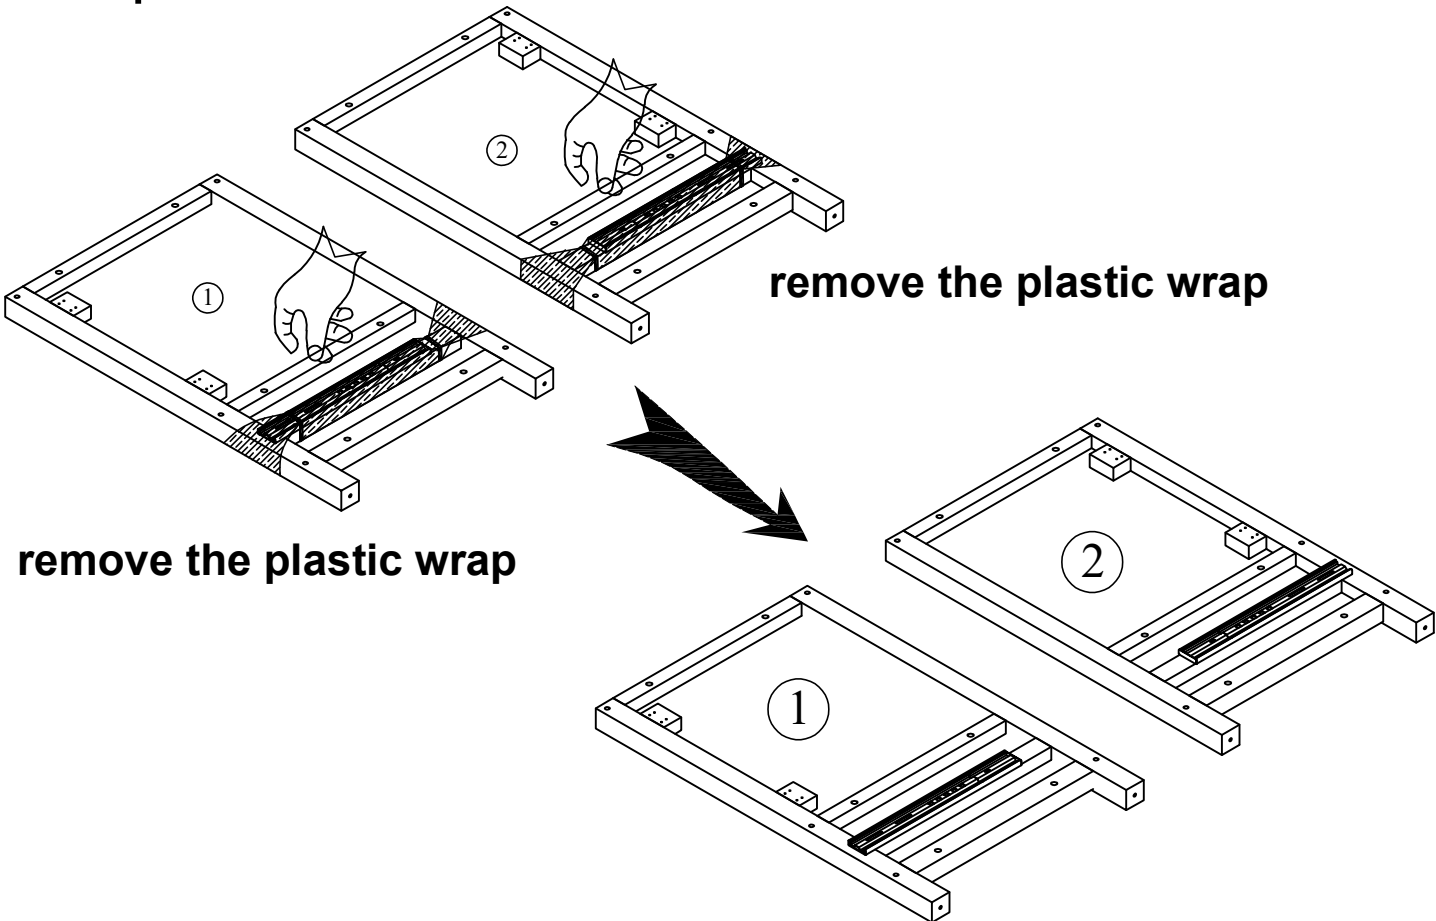

Step 02

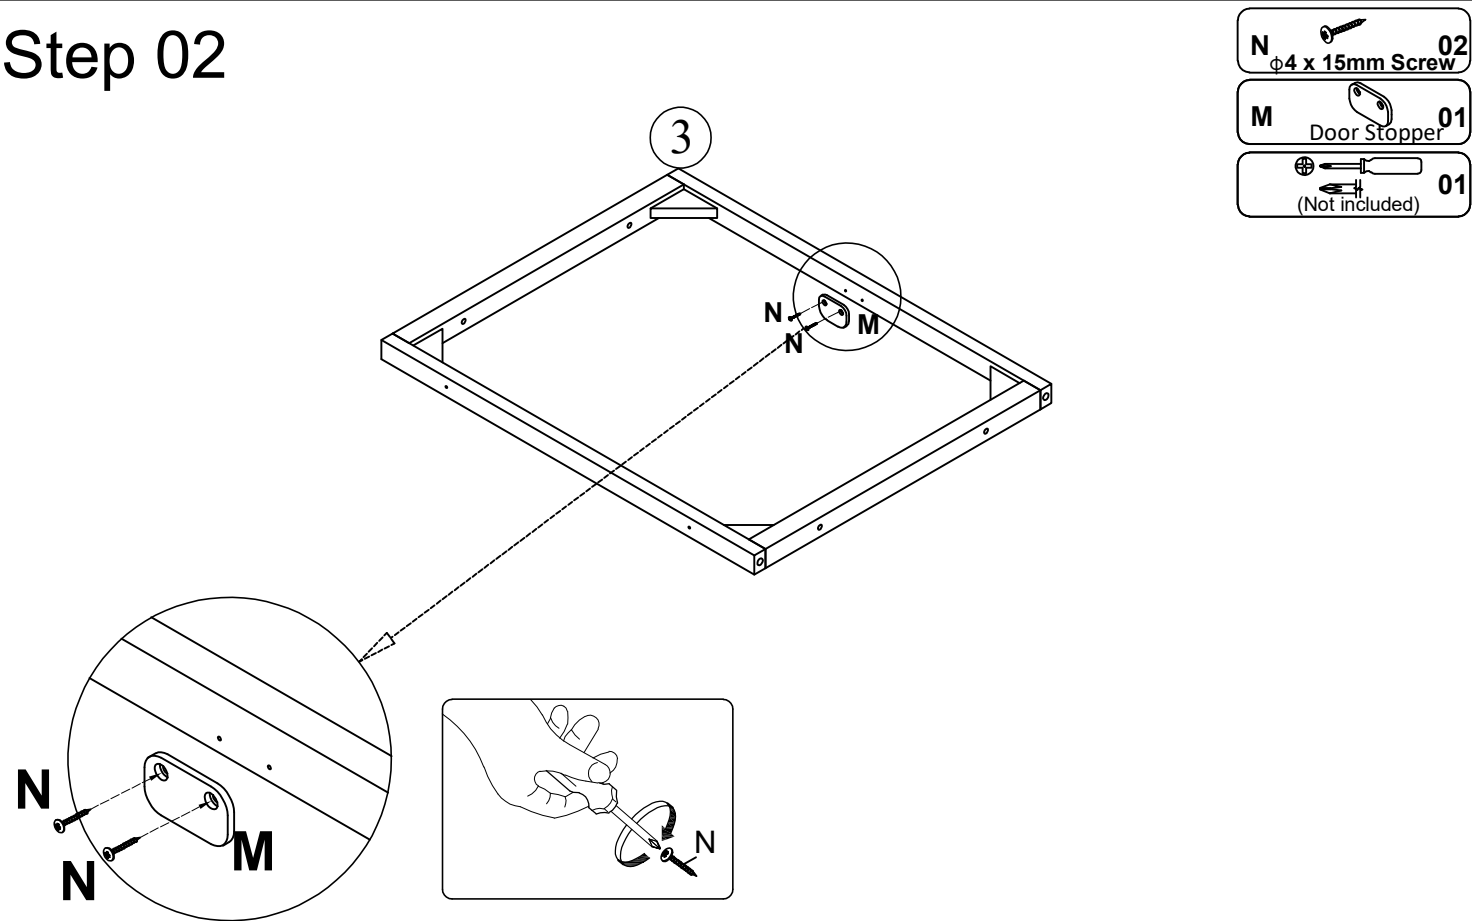


Step 03

A


Ø10x35

10

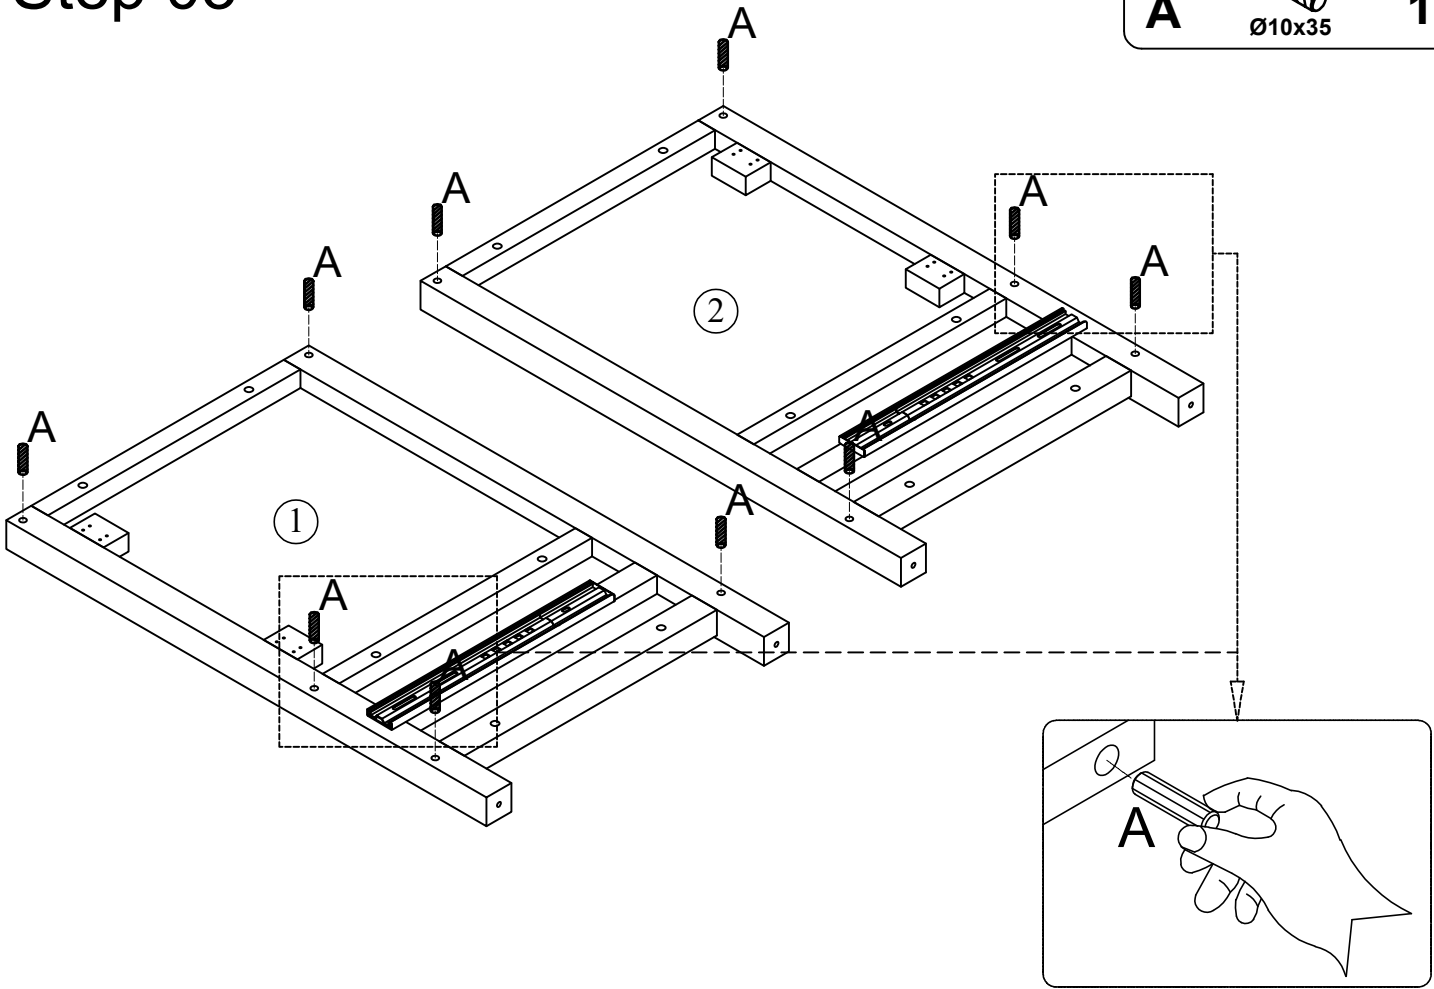


Step 04


Note: Do not tighten bolts firmly at this time.

B

M6x45mm Bolt


04

G


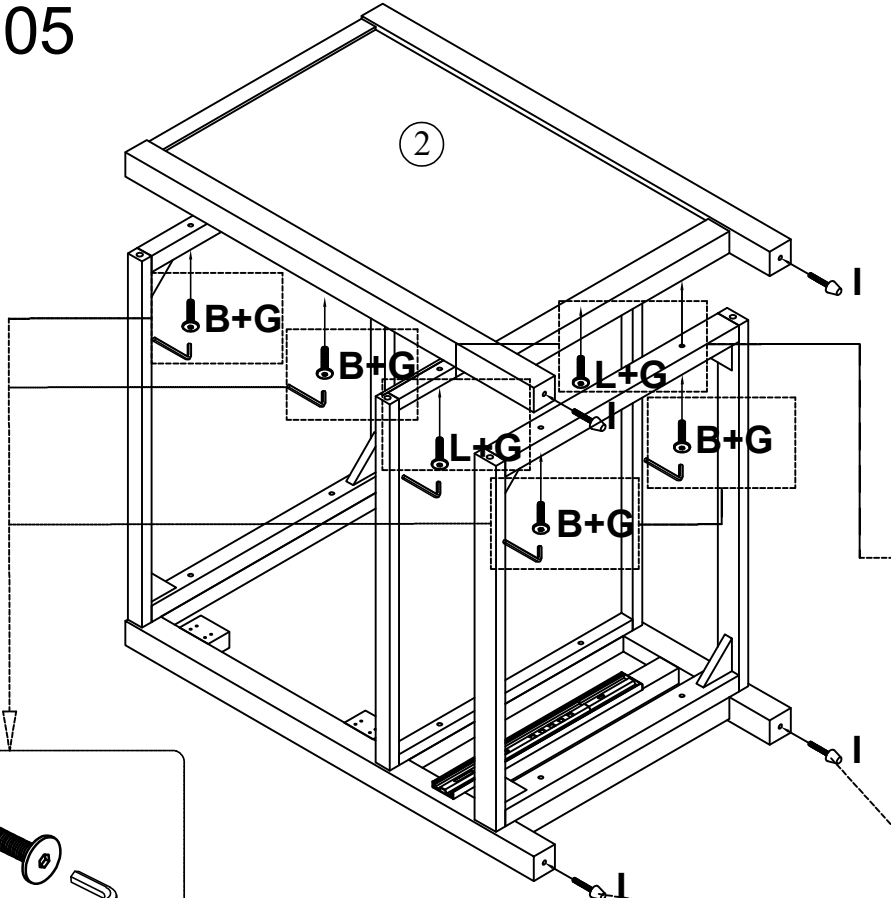
01

L

M6x35mm Bolt

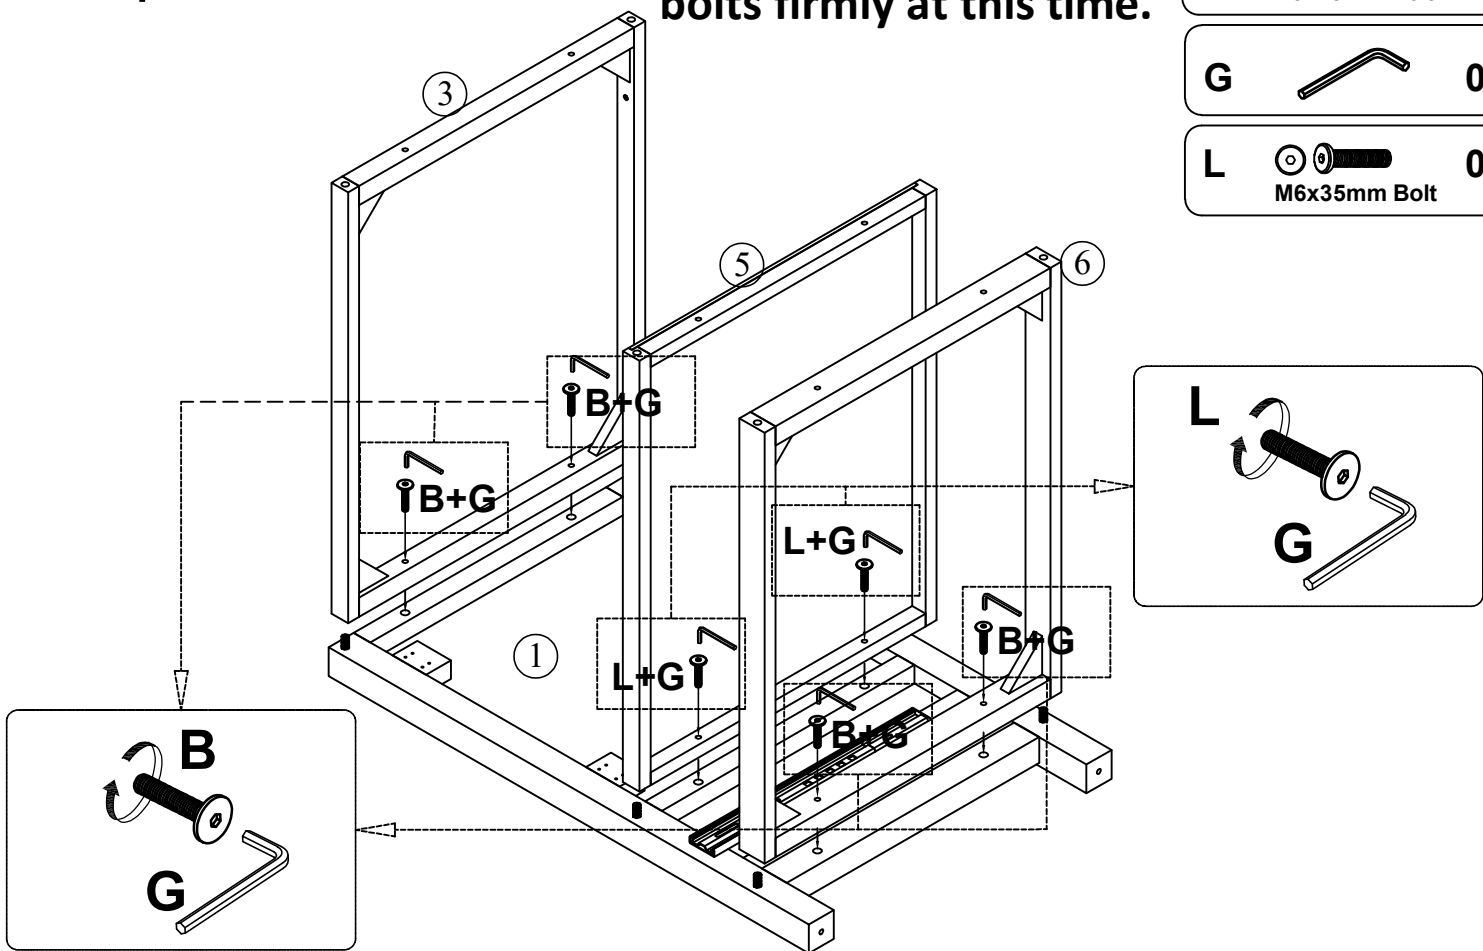
02





Step 05




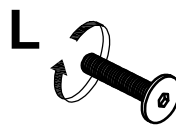
Note: Tighten all bolts at this time.


B  **04**
M6x45mm Bolt


G  **01**

I  **04**


L  **02**
M6x35mm Bolt


L  **G**

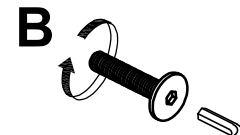
B  **G**


I 


Step 06

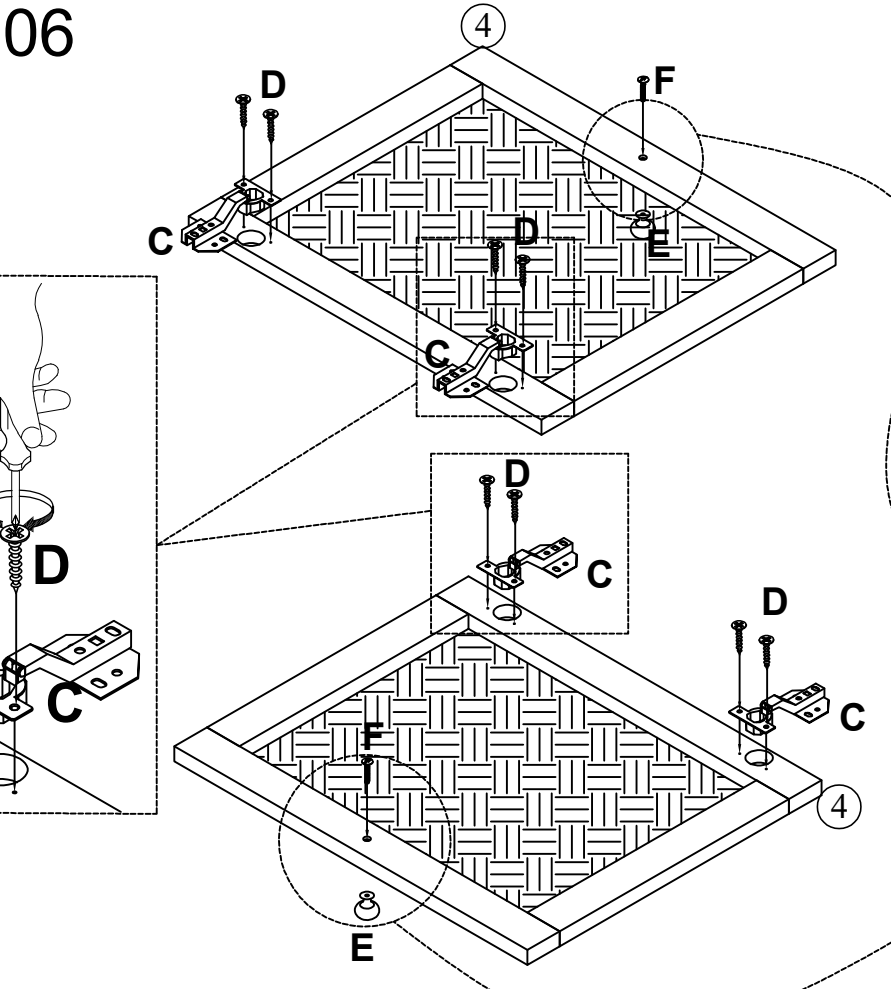



C  **04**
Hinges


D  **08**
φ3.5 x 12mm Screw


E  **02**
Knob

F  **02**
φ4 x 25mm Bolt

D 



C 

F 

E 

Step 07

D  **16**
 $\phi 3.5 \times 12\text{mm}$ Screw

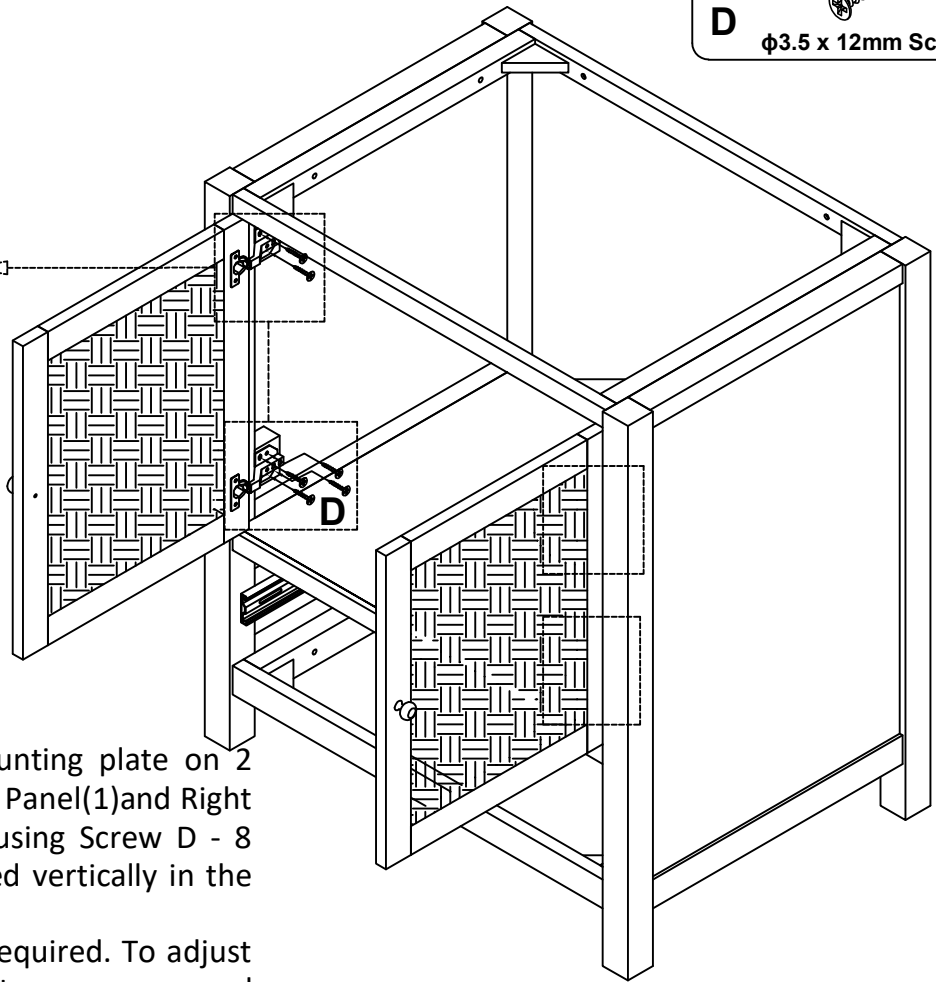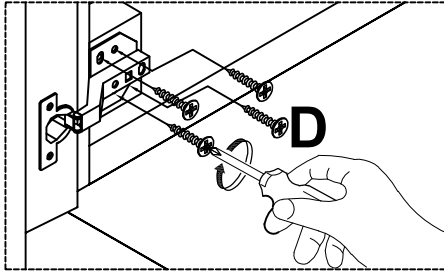

Align slotted holes in Hinge Mounting plate on 2 doors with pilot holes on Left End Panel(1) and Right End Panel(2). Attach 2 Doors using Screw D - 8 places. Screw D should be centered vertically in the slotted holes.

Note: Final adjustments may be required. To adjust up or down, loosen Screw D, Adjust as necessary and re-tighten Screw D.



Step 08

If any hinge requires slight adjustment out, loosen Bolt II and adjust out as necessary.



To adjust the Left Hand Doors: Adjust door to Right by turning Bolt III clockwise. Adjust door to Left by turning Bolt III counterclockwise.


To adjust the Right Hand Doors: Adjust door to Left by turning screw III clockwise. Adjust door to Right by turning screw III counterclockwise.

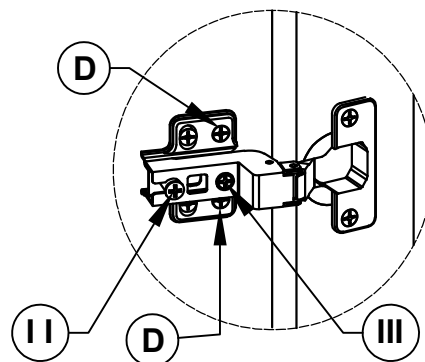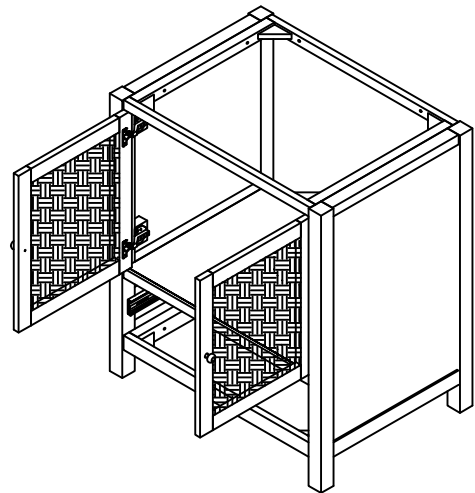Once all adjustments are made and doors are aligned, install set screw D in the last 2 holes in the mounting plate, on 2 doors, 8 places.






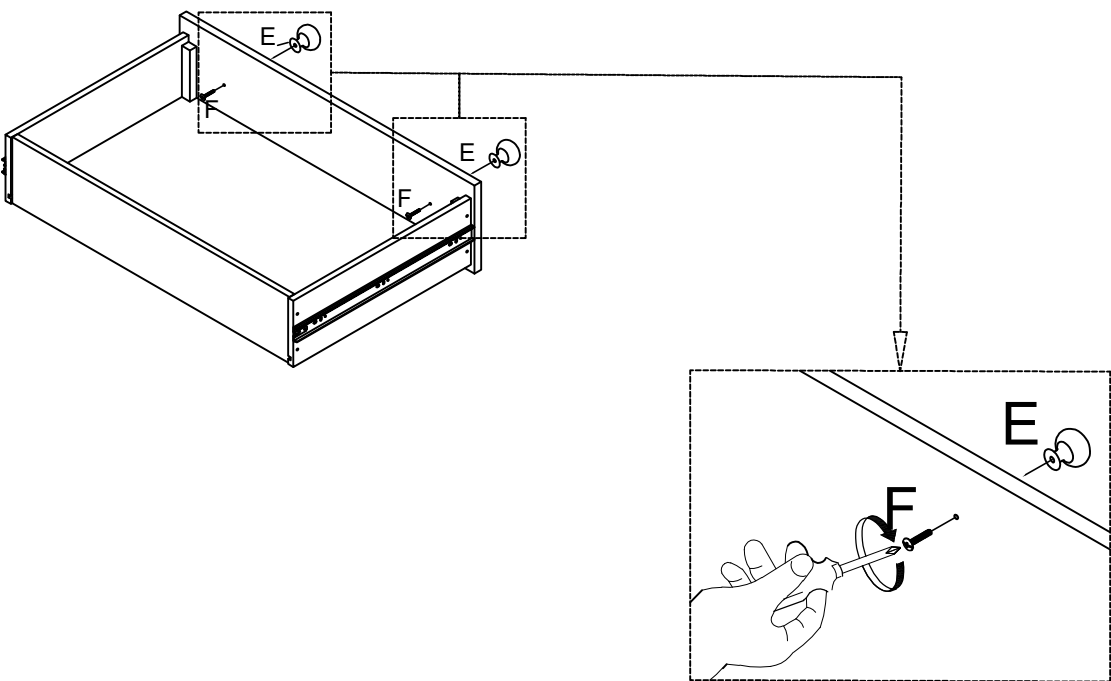
Step 09

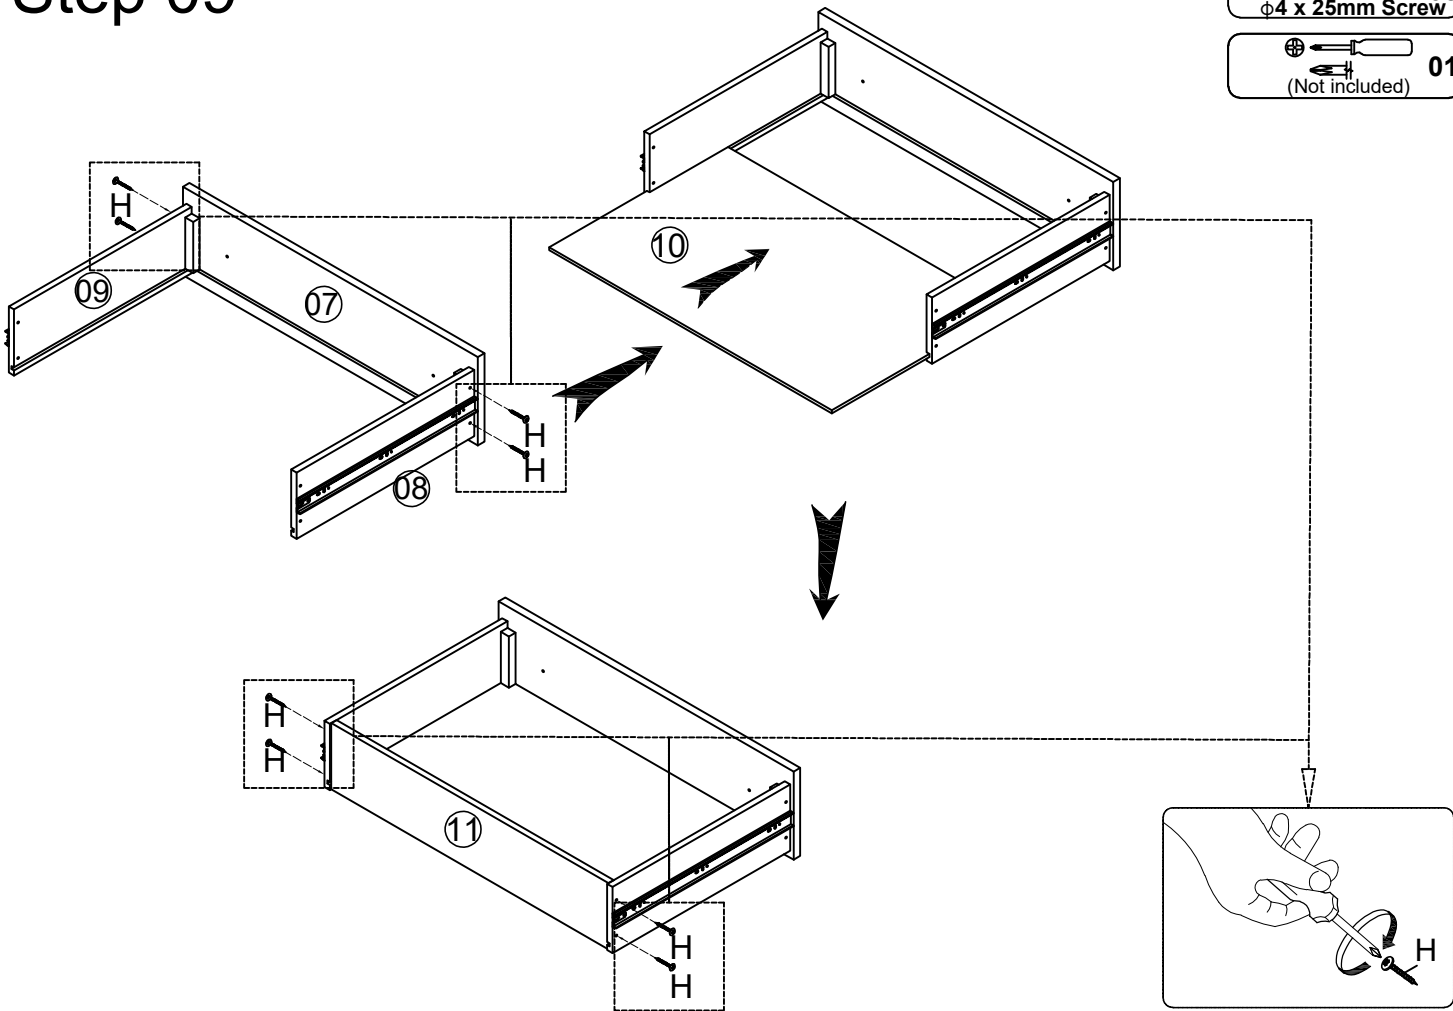- **H**
φ4 x 25mm Screw **08**
- **01**
(Not included)




Step 10

- **F**
φ4 x 25mm Bolt **02**
- **E**
Knob **02**
- **01**
(Not included)




Step 11

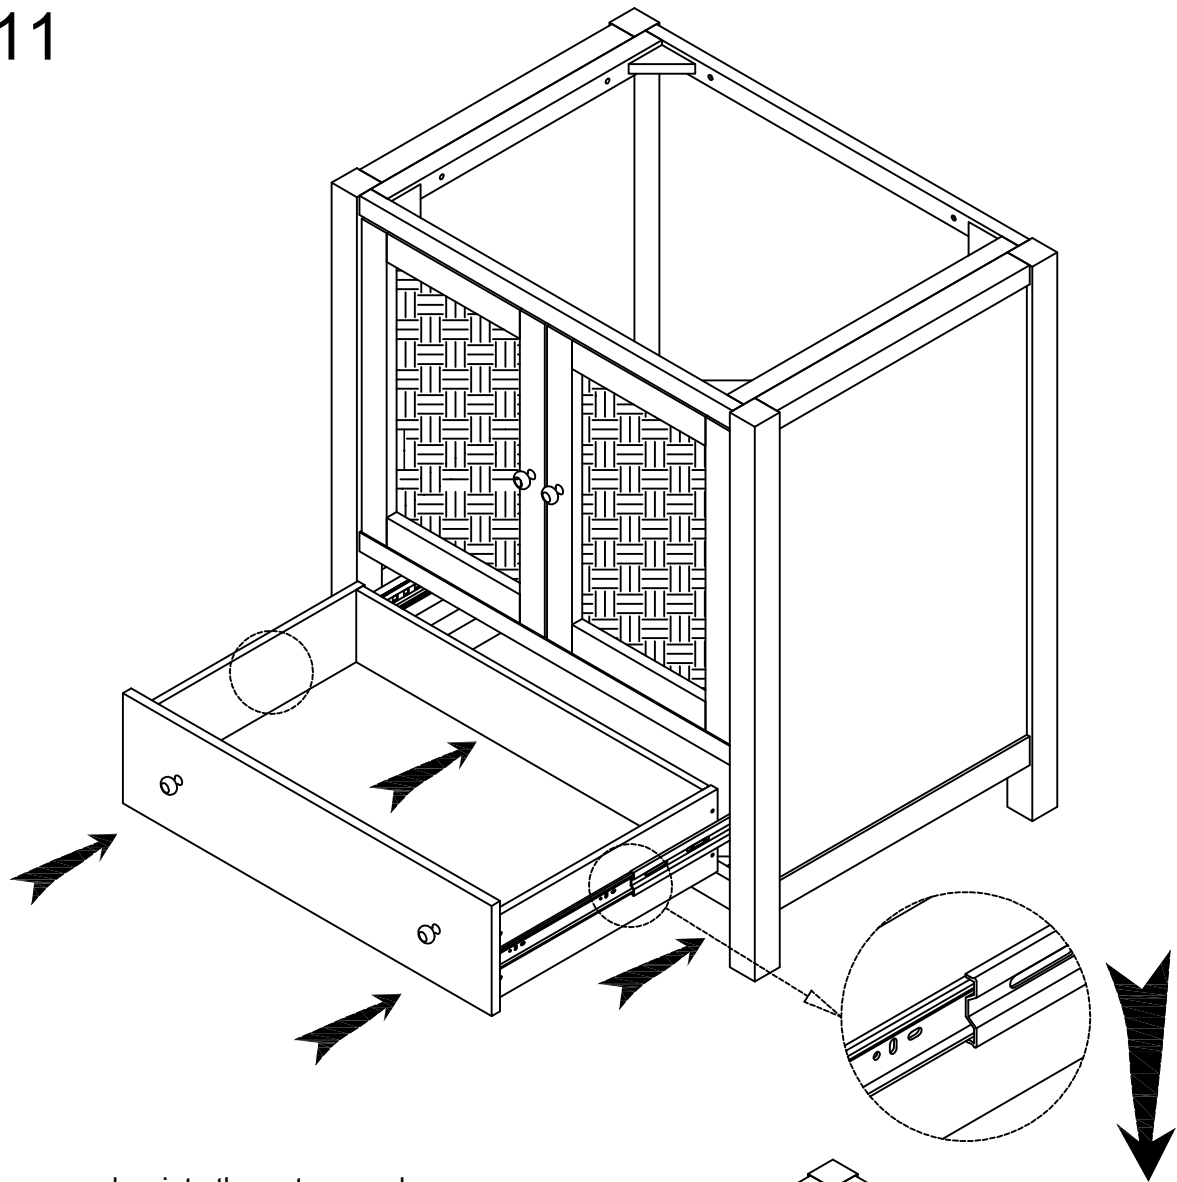

Insert the inner member into the outer member and push the drawer all of the way in.

Do not use an excessive amount of force when inserting the drawer.

Note: If the drawer can not be closed with ease, please remove the drawer and then try to insert it again.

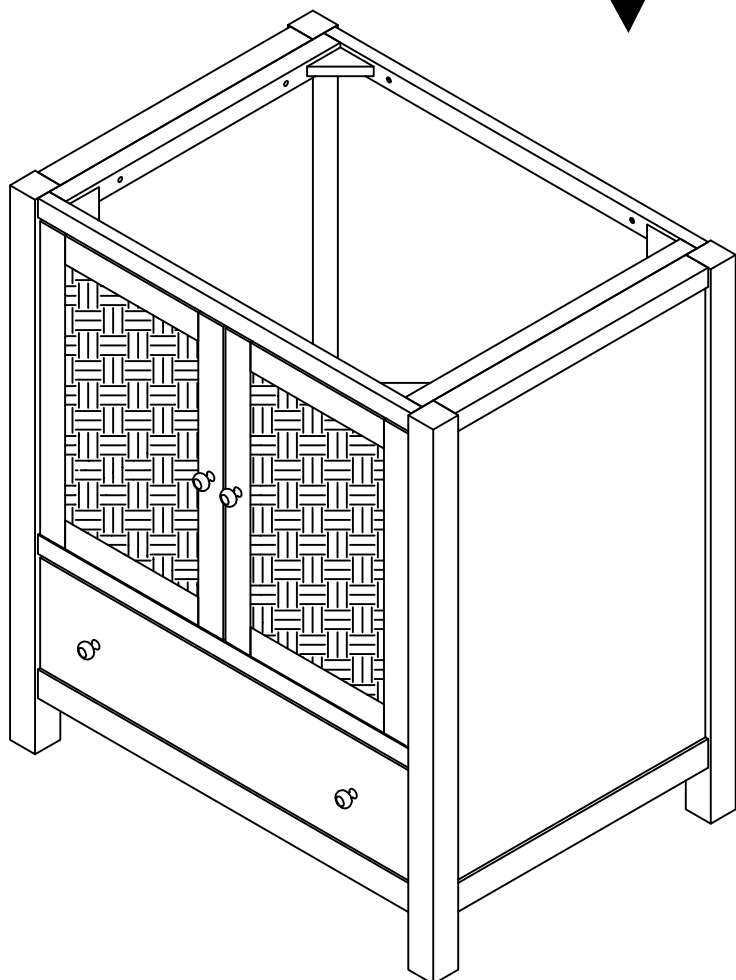


Step 12



.For best results, we suggest securing your Vanity to a stud in at least two locations.

- . Mark the location of the Studs in the wall on the stretcher rail.
- . Drill a 1/16" thru hole in the center of the Stretcher Rail at the location of the studs in the wall.
- . Secure the Vanity to the wall using screws (J) make sure the screws align with the Stud in the wall.
- . If hole locations do not align with stud in wall, install the EZ Anchor(K) in to drywall and then screwing the EZ Anchor in to the drywall.



J  02
φ4 x 50mm Screw

K  02
4x40mm Anchor

 01
(Not included)

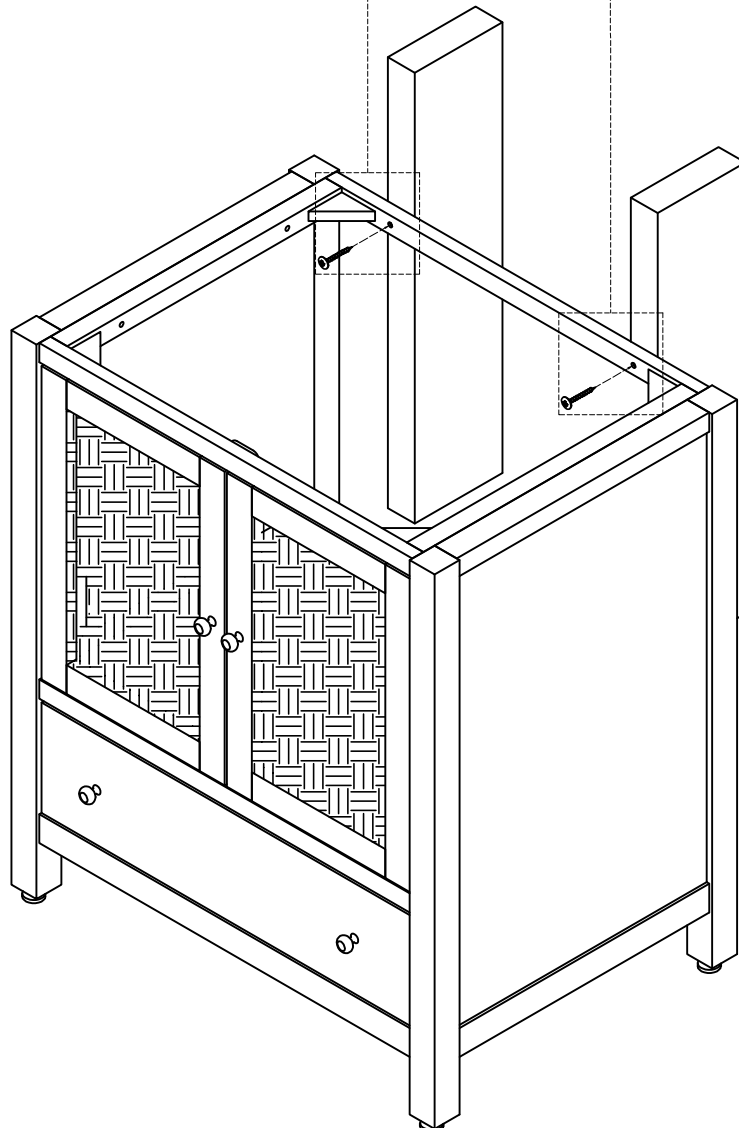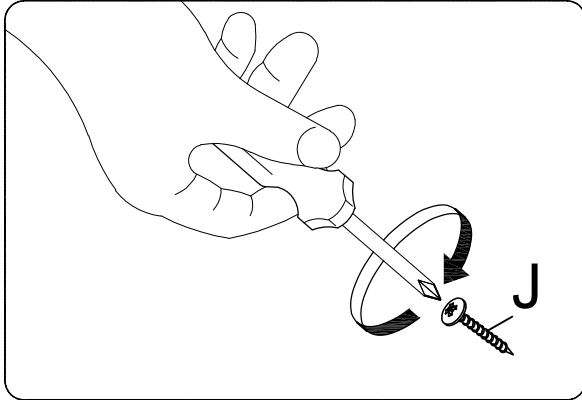

36" Vanity

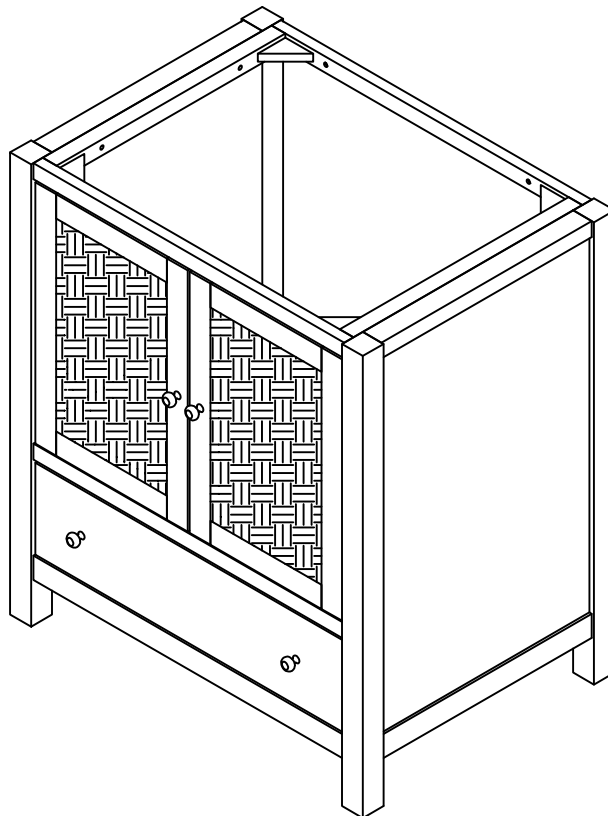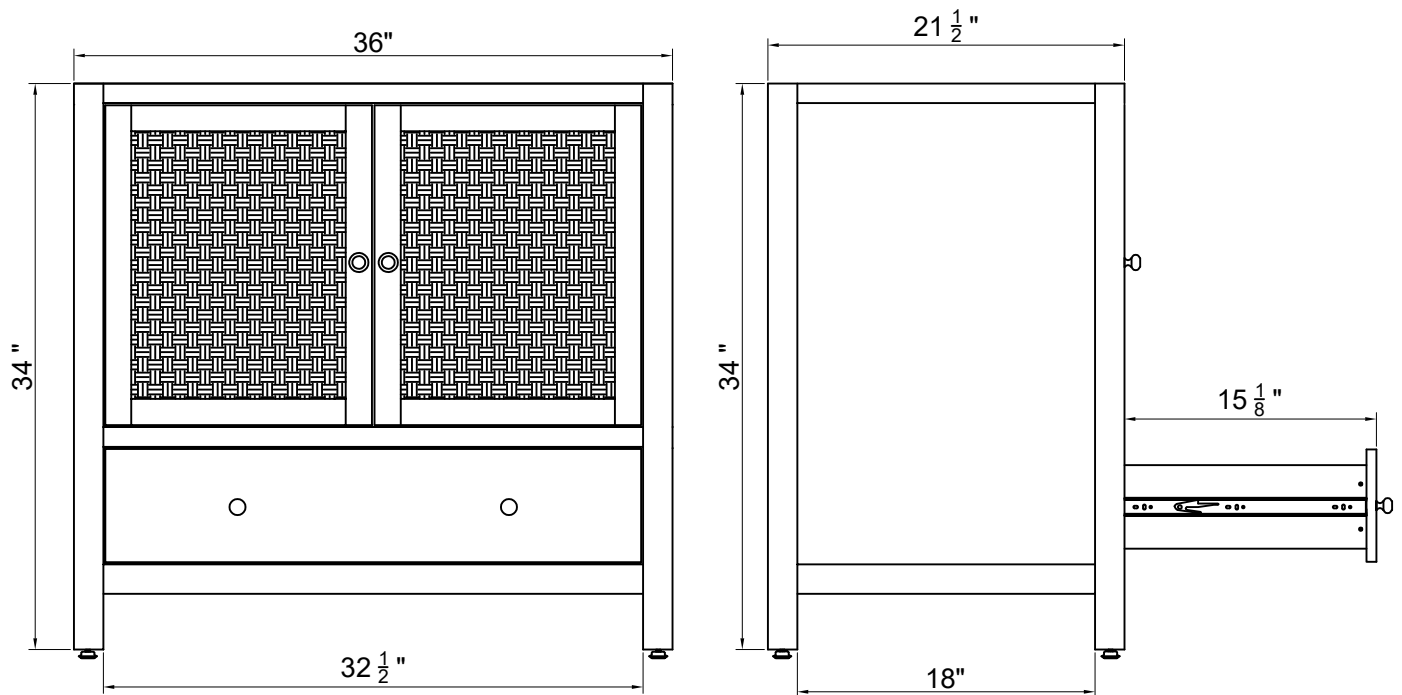

Weight Capacity on the top of vanity is
300lbs, 48lbs on any interior shelves.