


Model 161-FLS2 Fabric Loveseat

Parts Listing

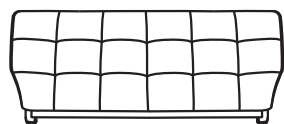

A
Back
1 Unit



B
Seat
1 Unit



C
Pillow
2 Units




D
Wood leg
4 Units



E
M6x18mm Screw
12 Units



F
M6 Allen Key
1 Unit

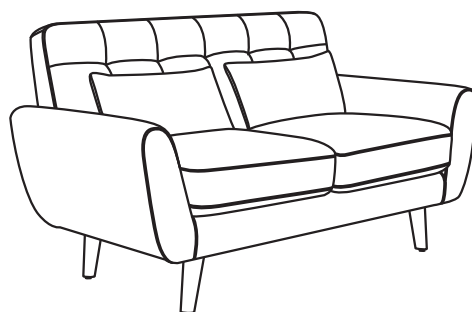

Assembly Instructions




Tools Needed: Allen Wrench - Provided
Please read all instructions before assembly.

Step 1: Attach Wood Legs(D) to the Seat(B) , using twelve M6x18mm Screws(F) first as shown. Tighten with M6 Allen Key(F).

Step 2: Attach the Back(A) to the the Seat(B) by interlocking the metal pieces at the Back(A) of the cushions as shown.

Step 3: Cover the Back(A) with Velcro as shown.

Step 4: Put the Pillows(C) on the Sofa as shown.

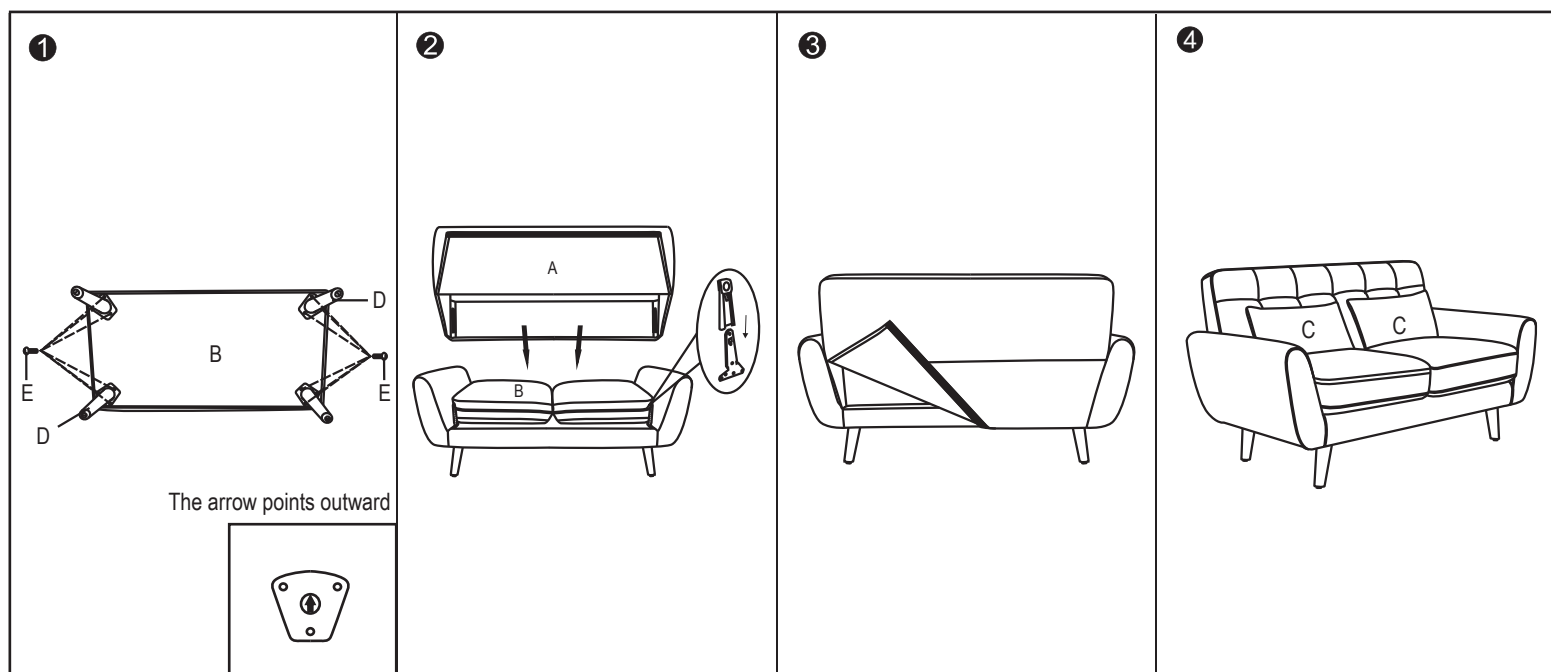

WEIGHT CAPACITY: 225 lbs.

Assembly Notes:

During assembly, hand tighten screw only when all screws are in place, you may then tighten all screws completely.

CAUTION:

1. Do not use this chair as a step ladder.
2. Check for loose screws and tighten them every 6 months.

161 Tradition Trail Holly Springs, NC, 27540
800-520-7471 (voice) 919-362-4765 (fax)
919- 303-6389 (voice) www.ofminc.com
support@ofminc.com