

Harlow 12" Flush Mount

SCHOOLHOUSE

NOTES:


- Instructions are applicable to sconce and surface mount versions.

TOOLS INCLUDED:

Wiring Kit (1x)



REQUIRED TOOLS:

Flat Head Screwdriver

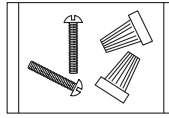

ASSEMBLY INSTRUCTIONS

- Detach Perforated Shade from Fitter/Canopy Assembly by removing 8-32 x 3/8" Screws. Also detach Bracket Assembly from Fitter/Canopy Assembly by unscrewing Finial. Reserve Finial and 8-32 x 3/8" Screws.
- Attach Bracket Assembly to Junction Box using provided Screws in Wiring Kit.
- Wire Fitter/Canopy Assembly to Junction Box using provided Wiring Kit. Consult electrician if necessary.
- Slip center hole of Fitter/Canopy Assembly over Threaded Rod. Reattach Finial to protruding portion of Threaded Rod.

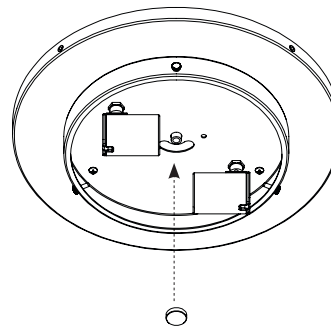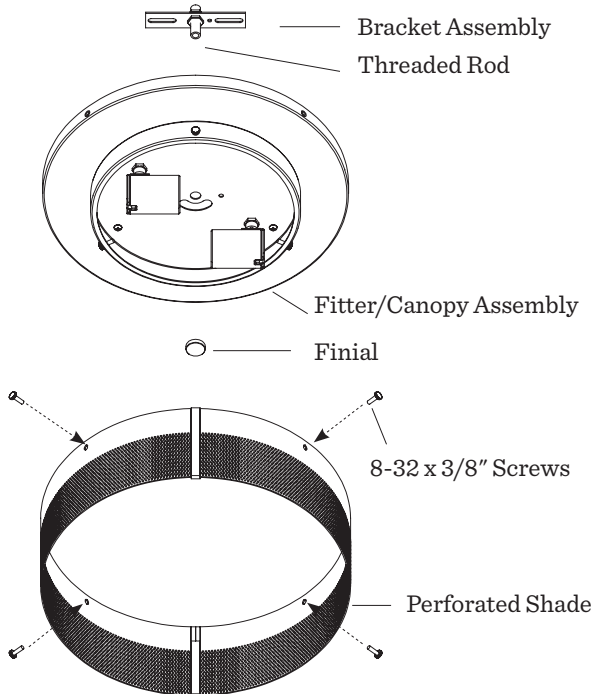

ASSEMBLY INSTRUCTIONS

5. Install Bulbs.
6. Attach Glass Shade by loosening Fitter Screws, placing Glass Shade into position and tightening Fitter Screws again. Test that Glass Shade is fully attached before letting go.
7. Slip Perforated Shade over Canopy/Fitter Assembly and attach using reserved 8-32 x 3/8" Screws. Tighten securely.

