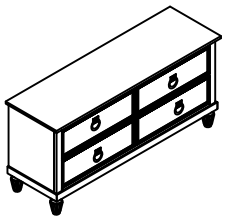
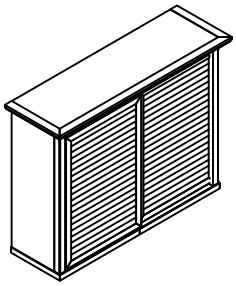
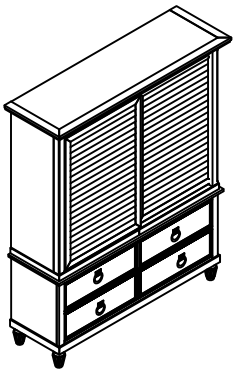
a m e r i c a n d r e w
•inspired design•

ASSEMBLY INSTRUCTIONS

Tel: 828-728-3261
www.americandrew.com


016-270


016-271


016-270 016-271

TOOLS REQUIRED:

Phillips Screwdriver (Not Provided)


BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Turn the cabinet upside down on to a clean soft surface.
2. Attach legs to the Cabinet Bottom, Tighten all bolt (See Figure 1)
3. Attach mending plates to connect the base and top. (See Figure 2)
4.Please stick the Plastic Pad on the cabinet inner frame.(See Figure 3)

Figure 1

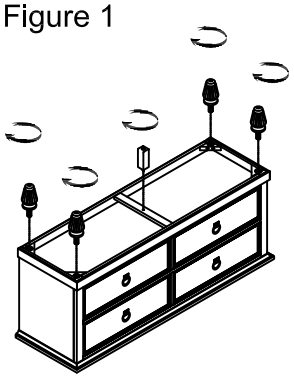

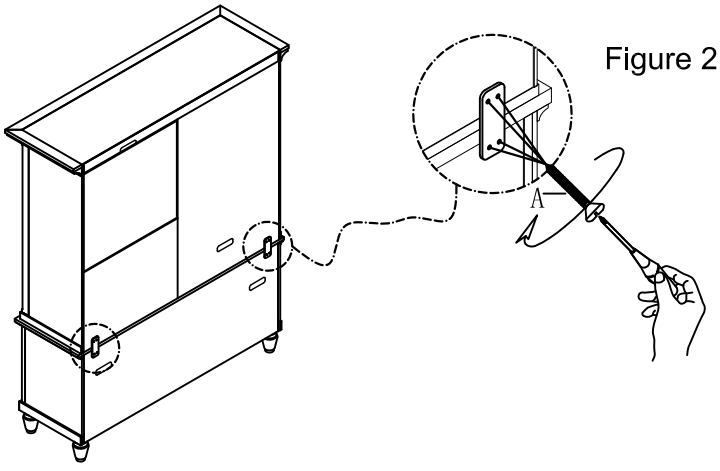


Figure 2

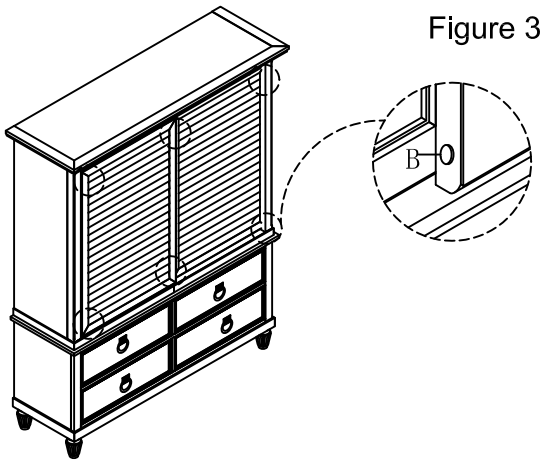


Figure 3

No.	Hardware List		Q'ty
A		Screw (Ø8*19mm)	6pcs
B		Plastic Pad (Ø10*2mm)	8pcs

Thank you for purchasing furniture from american drew!