





SD-AZ01 SHOWER PANEL SERIES

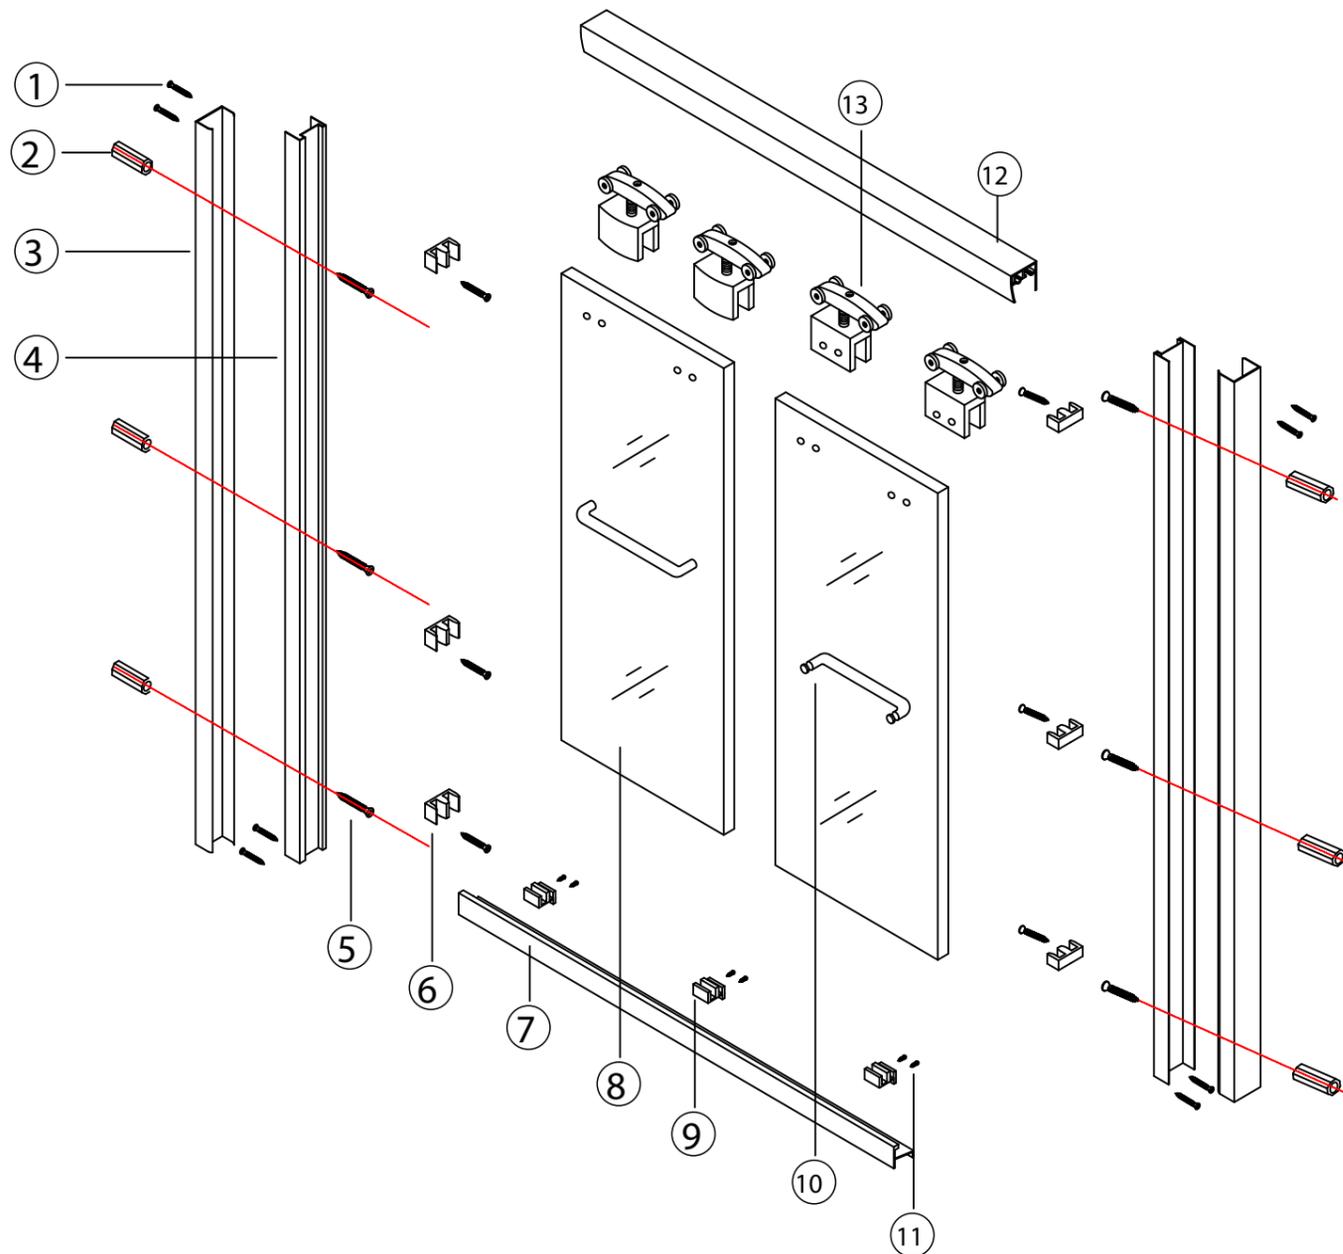

Componentlist


NO.	Description	Drawing	Qty
①	ST5*40		2
②	Wall anchor(6)		6
③	Profile to wall		2
④	Side profile		2
⑤	ST4*30		10
⑥	Stopper		6
⑦	Bottom guide rail		1
⑧	Moving glass panel		2
⑨	Door bottom guide		3
⑩	Handle		2
⑪	ST4*12		6
⑫	Guide rail		1
⑬	Single Rollers		4

NOTE: Unpack your unit carefully and inspect it. Identify all parts using the detailed diagram and packing list in this manual as a reference. Before discarding the carton, check for small hardware bags that may have fallen to the bottom of the box. If any parts are damaged or missing, please contact ANZZI at 1-844-44-ANZZI or support@ANZZI.com.

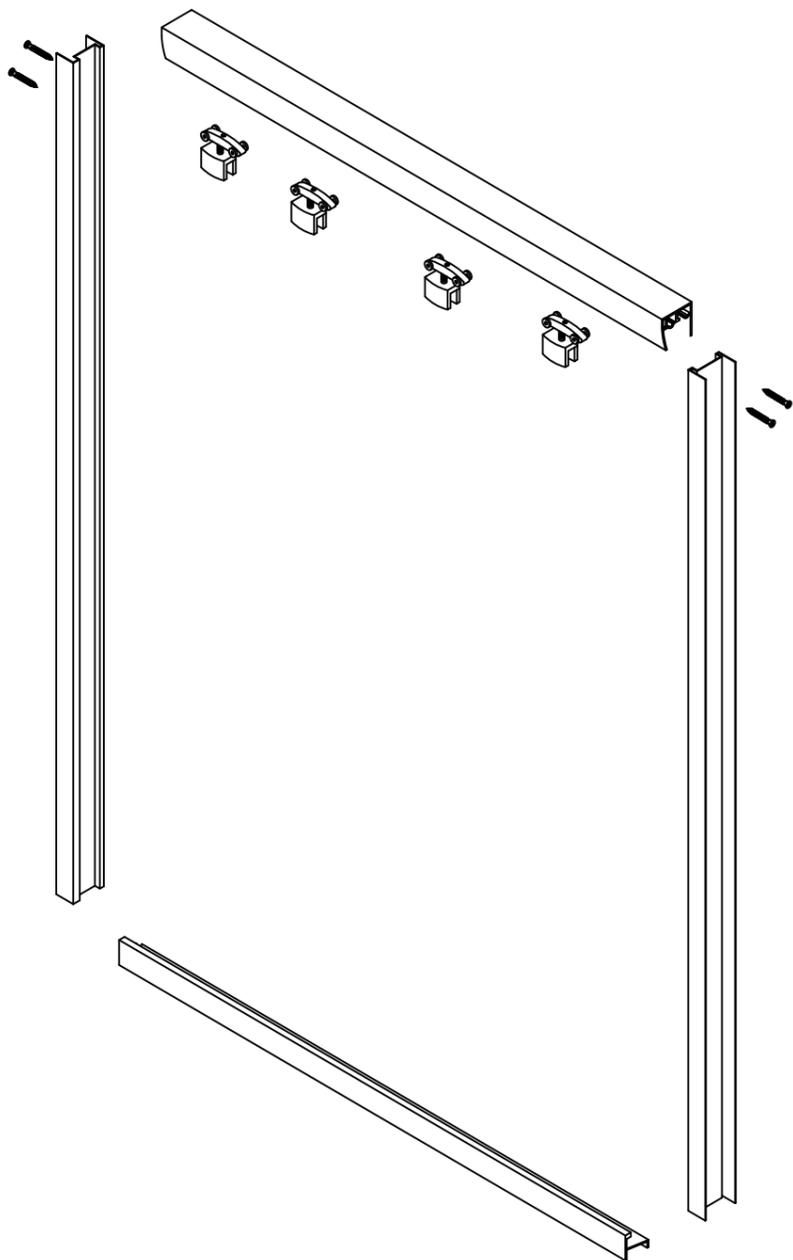


Guard Rail

1. Fix rollers (13) to the top guide rail (12).
2. Lay down the bottom guide rail (7). And fix the side profiles (4) to the top and bottom guide rails.

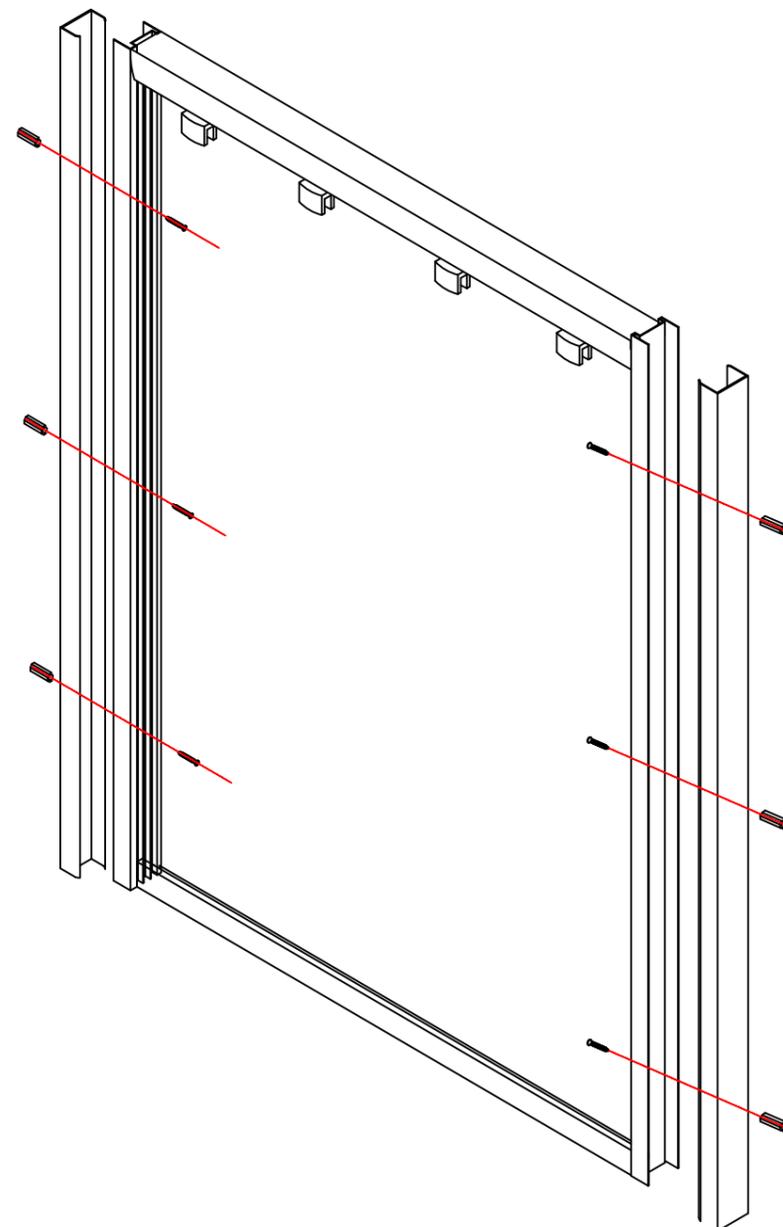


Side/Wall Profiles

3. Align the wall profile guides (3) to the shower wall. Make sure it is level and mark where the drill holes will be located. Drill the holes using a 6mm bit and insert the provided anchors (2). Do this on both sides.
4. Fit the frame into the installed wall profiles and secure the side profiles to the wall with the wall profiles in between using the provided ST5*30 screws.

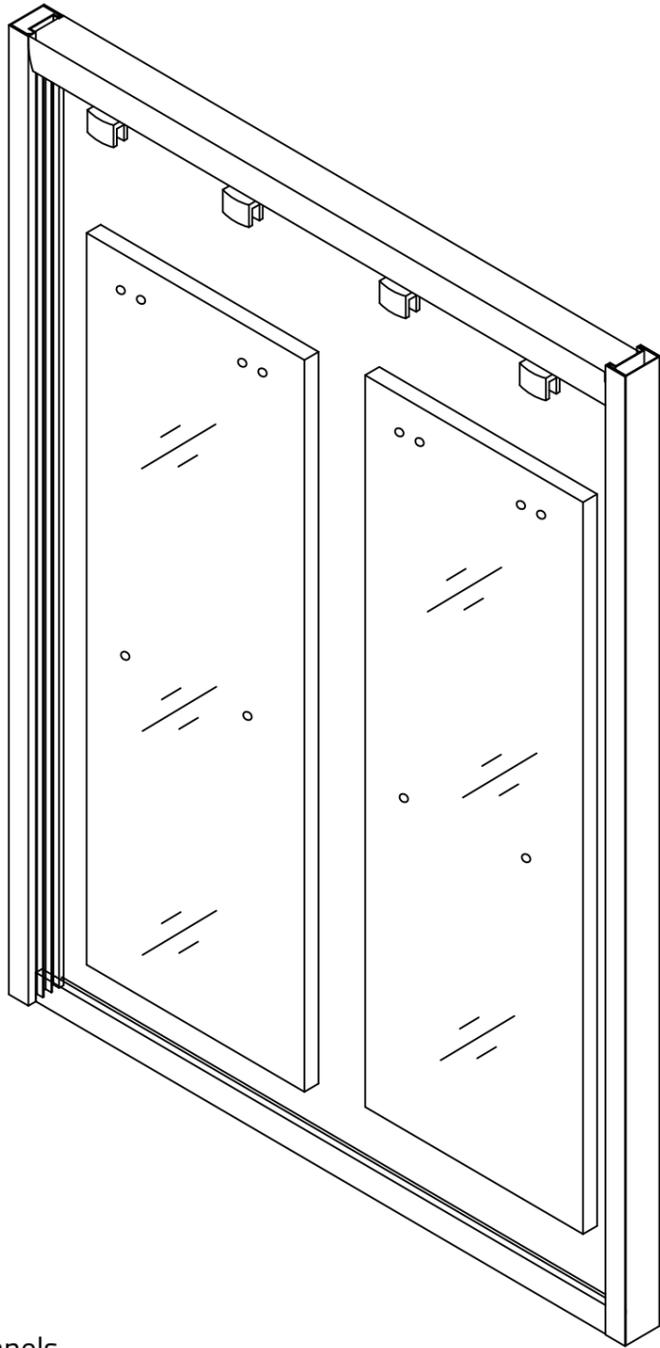

Glass Panels

5. Now attached the glass panels (8) to the rollers. Fit two rollers to each glass panel.

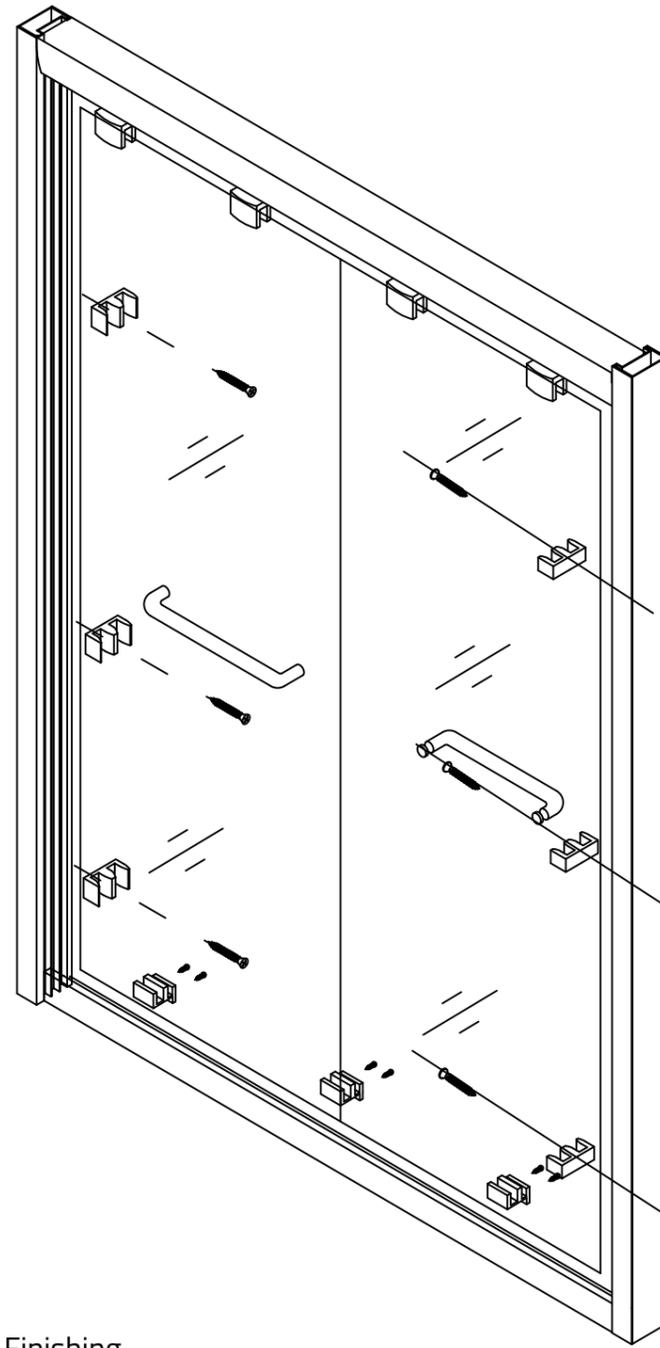

Finishing

6. Install the stoppers (6). There are three on each side of the frame.

7. Install the bottom door guides (9) at the bottom.

8. Finally install the handles (10).