
KINCAID
SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

269-706 ZANE COUNTER HEIGHT TRESTLE TABLE

www.kincaidfurniture.com
Phone : 828-728-3261.

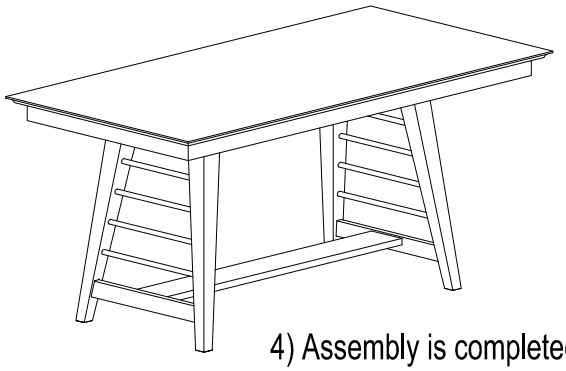

4) Assembly is completed.

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.


. Check to be sure that you have all parts and hardware.

. Remove all wrapping materials,including staples and packing straps before you start to assemble.

. Do not tighten all screws and bolts until completely assembled.

. Keep all hardware out of the reach of children.

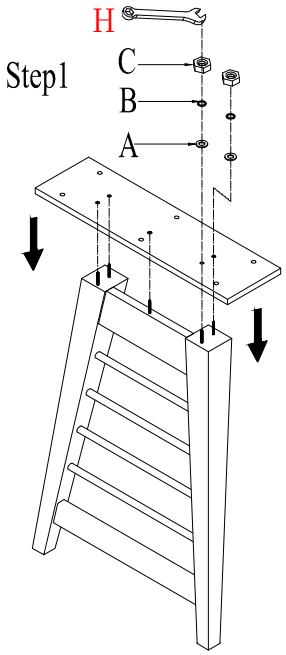

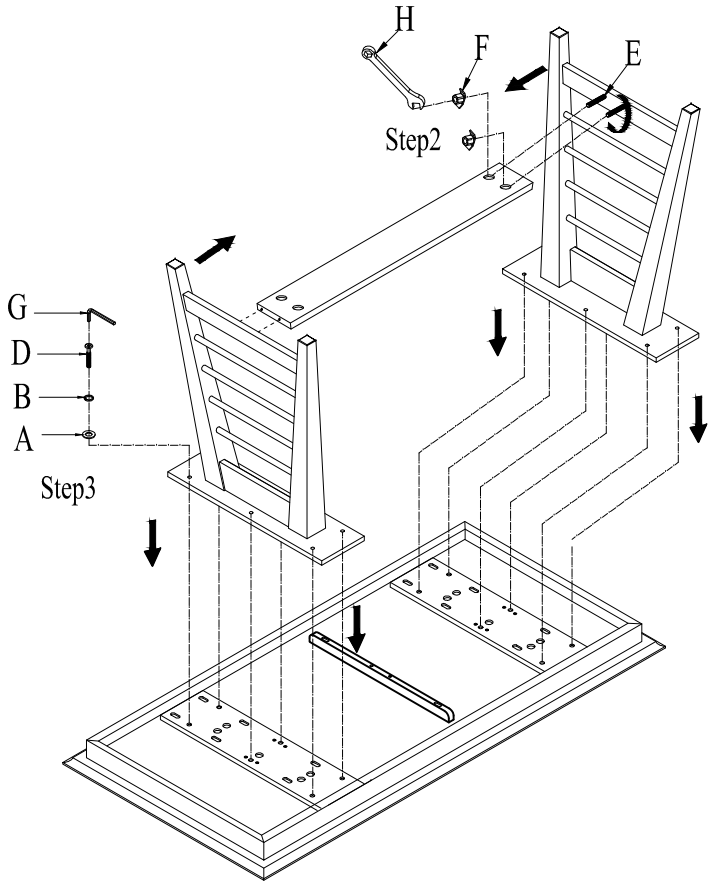

NO.	Dimension	Shape	Quantity
A	Flat Washer Ø5/16"*19mm		22pcs
B	Lock Washer Ø5/16"		22pcs
C	Nuts 5/16"		10pcs
D	Bolt 5/16*35mm		12pcs
E	Thread Rod 5/16"*88mm		4pcs
F	Curved Slotted Washer 5/16"		4pcs
G	Allen Key 4mm		1pc
H	Wrench 12mm		1pc