a m e r i c a n d r e w
• i n s p i r e d d e s i g n •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED:

Allen Key (supplied, part # H)
Spanner Wrench (supplied, part # J)
Phillips Head Screwdriver (Not Provided)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Place the Chair Back facing upward on a soft and flat surface . Attach chair seat to the chair back, using Flat Washer (D), Lock Washer (C), Bolts (B). Tighten Allen Key (H). (See Figure 1)

2. Place the Chair Back facing upward on a soft and flat surface . Attach chair seat to the chair back, using Flat Washer (D), Lock Washer (C), Bolts (A) for in the corners. Tighten Allen key (H). (See Figure 2)


3. Attach the front leg to the front corner block of the chair seat, using Flat Washer (D), Lock Washer (C), Nuts (I) and tighten all nuts with Wrench (J). (See Figure 3)

4.Use Bolt (E), Lock Washer (F) and Flat Washer (G) to attach the arm assembly to arm chair frame. Tighten bolt Allen key (H). (See Figure 4)

5.Use Bolt (E), Lock Washer (F) and Flat Washer (G) to attach the left arm assembly to back frame. Tighten bolt Allen key (H). (See Figure 5)

6. Tighten all bolts and nuts before use.

No.	Hardware List	Q'ty
A	Bolt Ø5/16"xL3"	4
B	Bolt Ø5/16"xL1-1/2"	1
C	Lock Washer Ø5/16"	9
D	Flat Washer Ø5/16"	9
E	Bolt Ø1/4"xL1-1/2"	4
F	Lock Washer Ø1/4"	4
G	Flat Washer Ø1/4"	4
H	Allen Wrench 4mm	1
I	Hex Nut Ø5/16"	4
J	Spanner Wrench 12mm	1

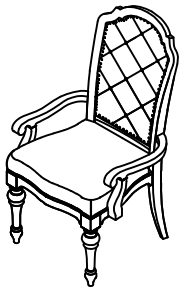

011-637

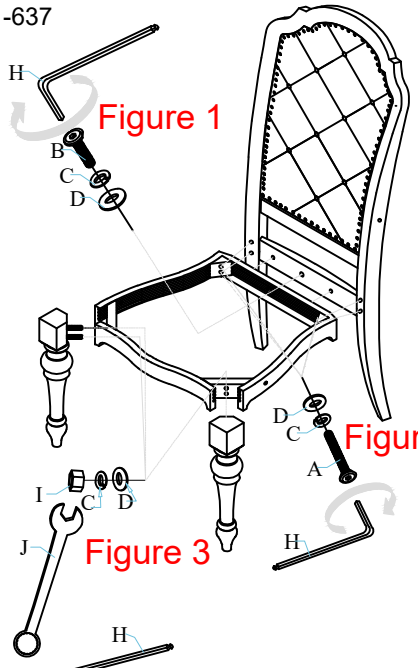


Figure 1

Figure 2

Figure 3

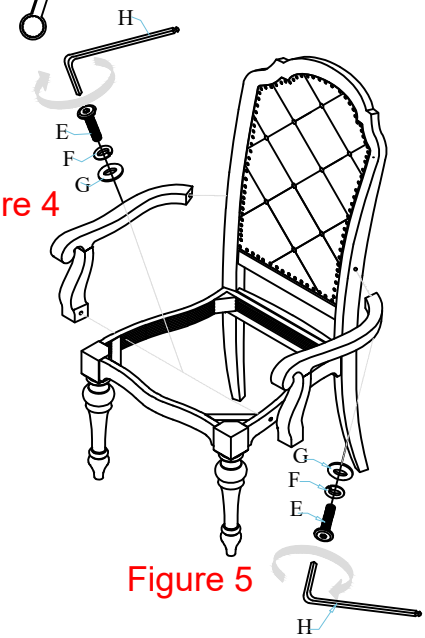


Figure 4

Figure 5

Thank you for purchasing furniture from american drew!