american drew
•inspired design•

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

924-745

TOOLS REQUIRED:

Allen key (supplied, part # E)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Attach the horizontal bar ballast to the leg frame, using Bolt (B), Lock washers (C), (D) and Flat washers (B). Tighten with Allen key (E). (See Figure 1)
2. Attach the slanting bar to the leg frame, using Bolt (A), Lock washers (B), and Flat washers (C). Tighten with Allen key (E). (See Figure 2).
3. Attach the surface table to the leg frame, using Bolt (A), Lock washers (B), and Flat washers (C). Tighten with Allen key (E). (See Figure 3).
4. Unlock the table locks and slide open the table halves. Place the Leaf to the Top. Lock the table locks, which are located on the underside of the table secure the table halves in place. (See Figure 4)

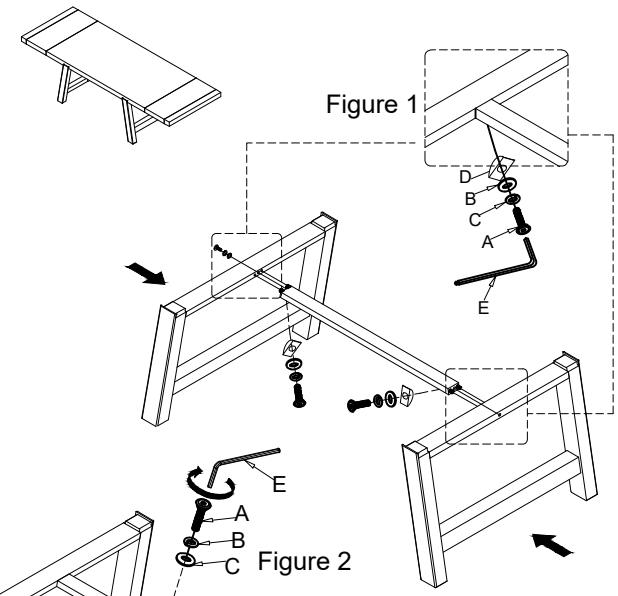
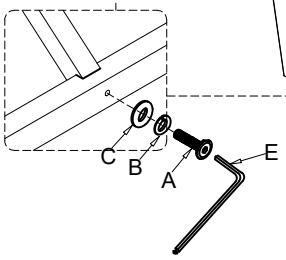


Figure 1

Figure 2



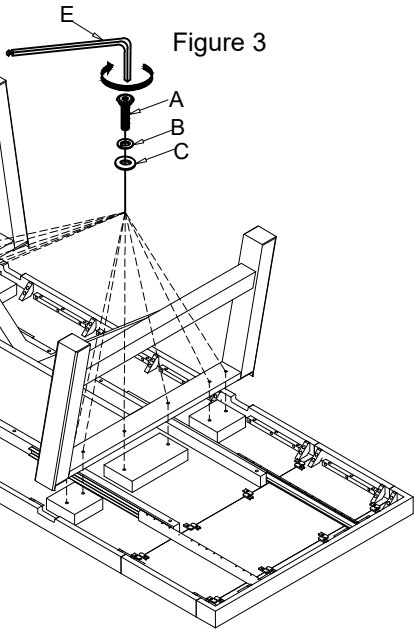


Figure 3

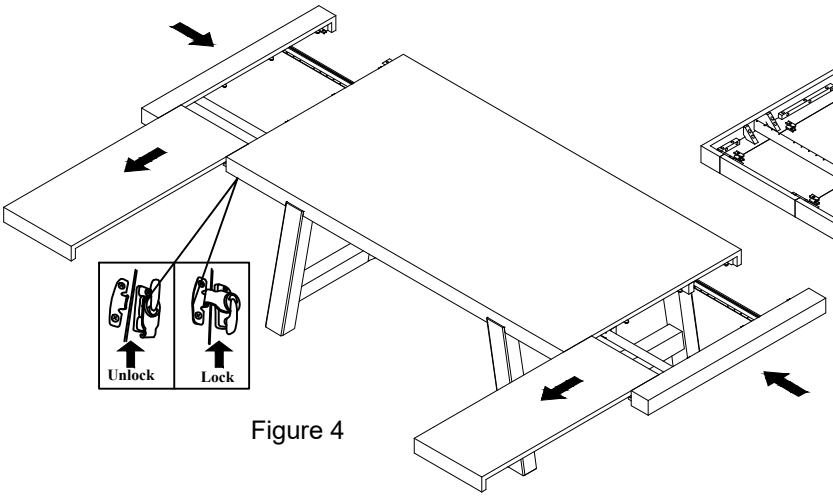


Figure 4

No.		Hardware List	Q'ty
A		Bolt Ø5/16"x 2"	20
B		Lock Washer Ø5/16"	20
C		Flat Washer Ø5/16"	20
D		Lock Washer Ø5/16"x3mm	
E		Allen Key 4mm	1

Thank you for purchasing furniture from american drew!