


# KIKI UPHOLSTERED BED C.KING/E.KING ASSEMBLY INSTRUCTIONS



## BOX#1

- A. HEADBOARD  
I. LEG

1 PC  
2 PCS

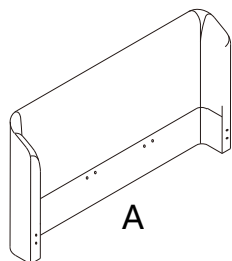

## HARDWARE KIT PACKED IN BOX #1

1	ALLEN BOLT(5/16"x2-1/2")		2 PCS
2	FLAT WASHER(3/4")		2 PCS
3	LOCK WASHER(5/16")		2 PCS
4	ALLEN KEY(5/16")		1 PC


## HARDWARE KIT PACKED IN BOX #2

1	ALLEN BOLT(5/16"x1-1/4")		8 PCS
2	ALLEN BOLT(5/16"x2-1/2")		10 PCS
3	THREADED BOLT (5/16"x4-1/4")		8 PCS
4	FLAT WASHER(3/4")		14 PCS
5	LOCK WASHER(5/16")		18 PCS
6	ALLEN KEY(5/16")		1 PC
7	WRENCH(5/16")		1 PC
8	MENDING PLATE		4 PCS
9	HEX NUT(5/16")		8 PCS
10	FLAT WASHER(1")		4 PCS

## BOX#2


- B. FOOTBOARD  
I. LEG

1 PC  
2 PCS

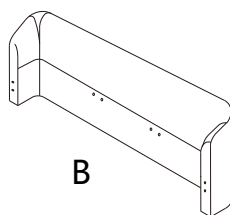


## BOX#3


- C. SIDE RAIL 2 PCS  
D. SLAT 39 PCS  
E. CENTER SLAT SUPPORT 2 PCS  
F. SIDE RAIL SLAT CLIP 26 PCS  
G. CENTER SUPPORT SLAT CLIP 26 PCS  
H. SLAT SUPPORT LEG 4 PCS

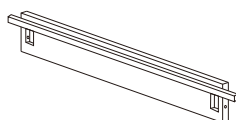

C

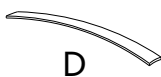

D

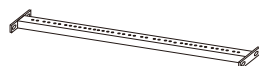

E



F






G



H

## KIKI UPHOLSTERED BED FULLY ASSEMBLED

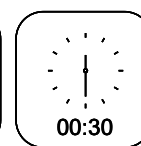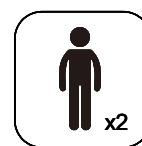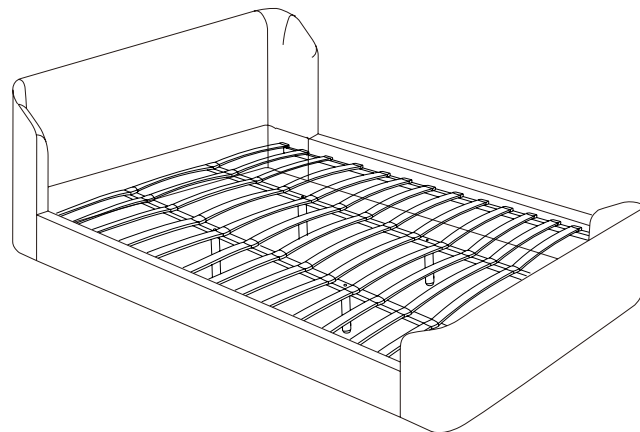


# KIKI UPHOLSTERED BED C.KING/E.KING ASSEMBLY INSTRUCTIONS




## STEP 1

NOTE: USE HARDWARE PACKED IN BOX #1 FOR STEP 1.

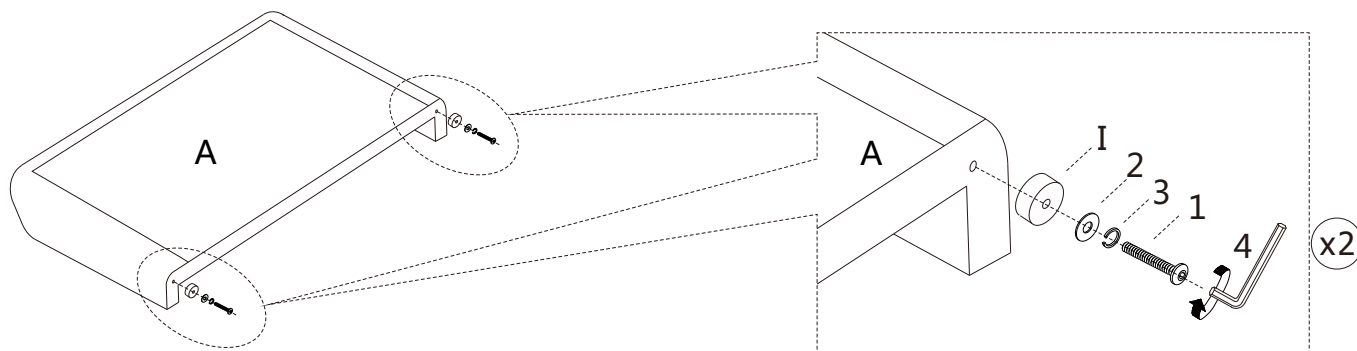


## STEP 2

NOTE: USE HARDWARE PACKED IN BOX #2 FOR STEP 2 AND ALL STEPS THAT FOLLOW.

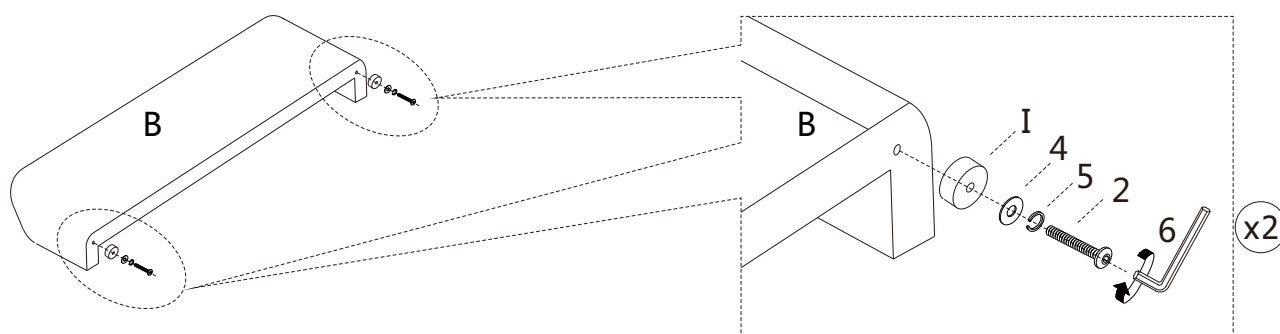


## STEP 3

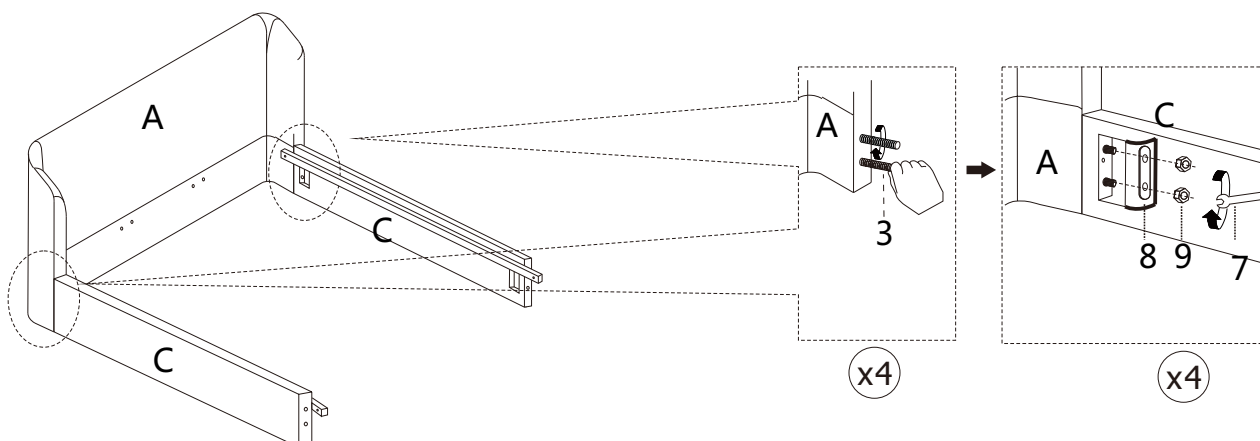


# KIKI UPHOLSTERED BED C.KING/E.KING ASSEMBLY INSTRUCTIONS



## STEP 4

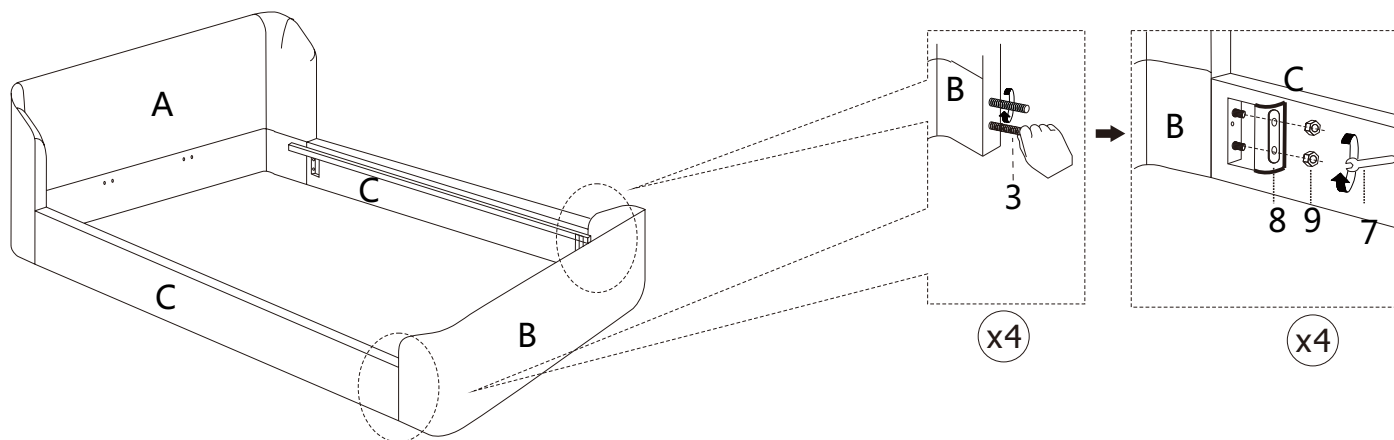


## STEP 5

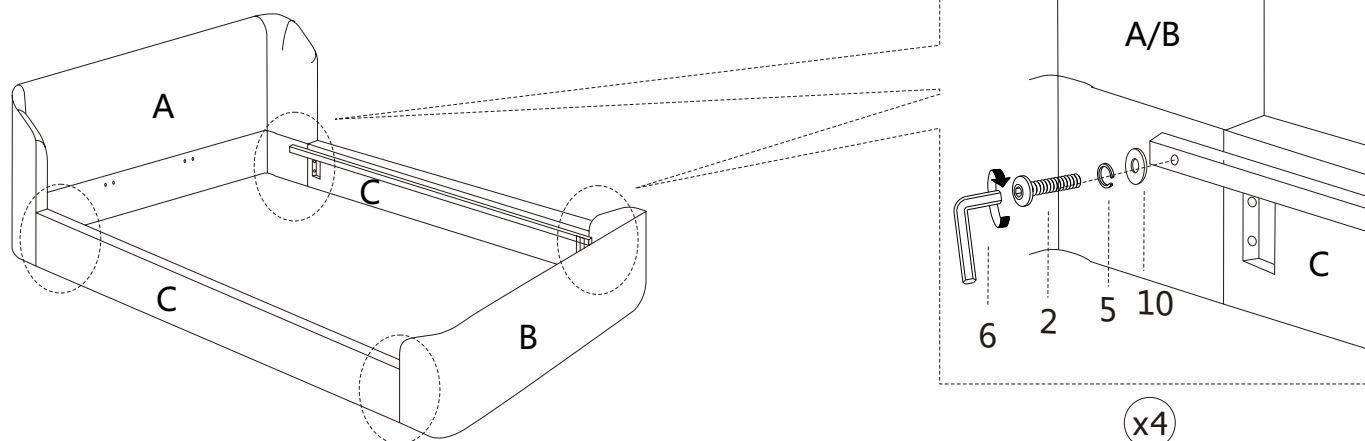

## STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 6, 7, 8 & 9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 6.


## STEP 6

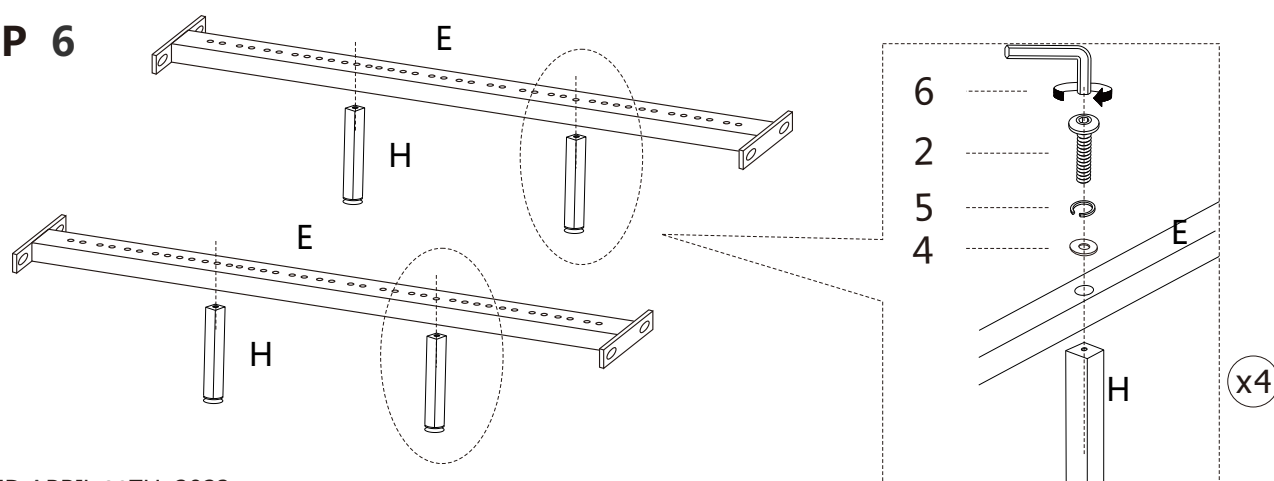


# KIKI UPHOLSTERED BED C.KING/E.KING ASSEMBLY INSTRUCTIONS




## STEP 7:

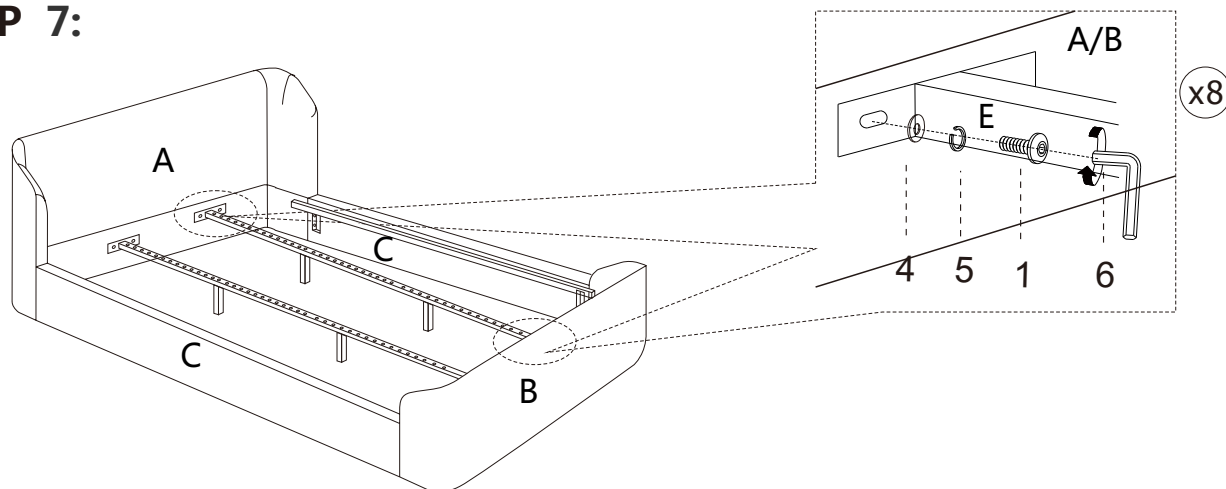


## STEP 8: STARTING FROM HEADBOARD

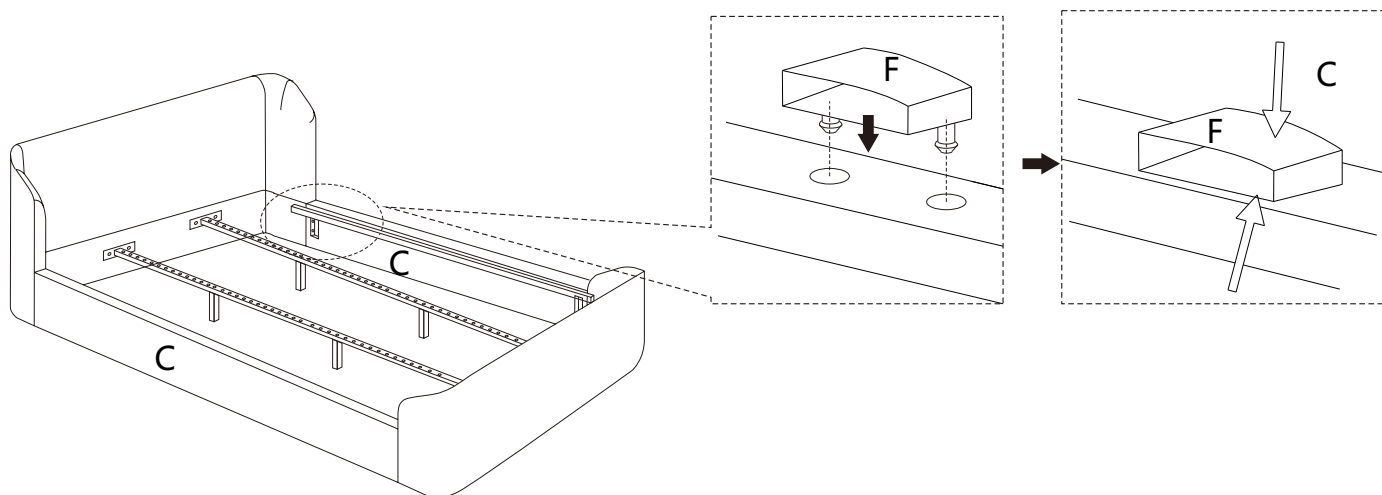

## STEP 9

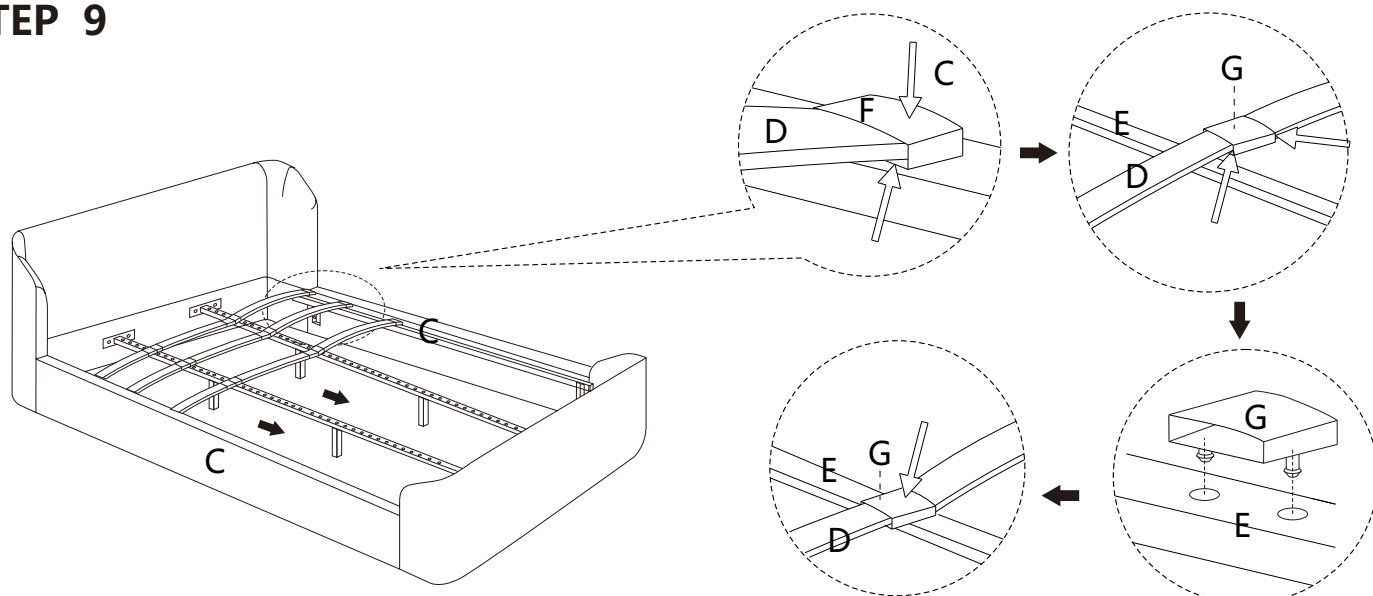

# KIKI UPHOLSTERED BED C.KING/E.KING ASSEMBLY INSTRUCTIONS

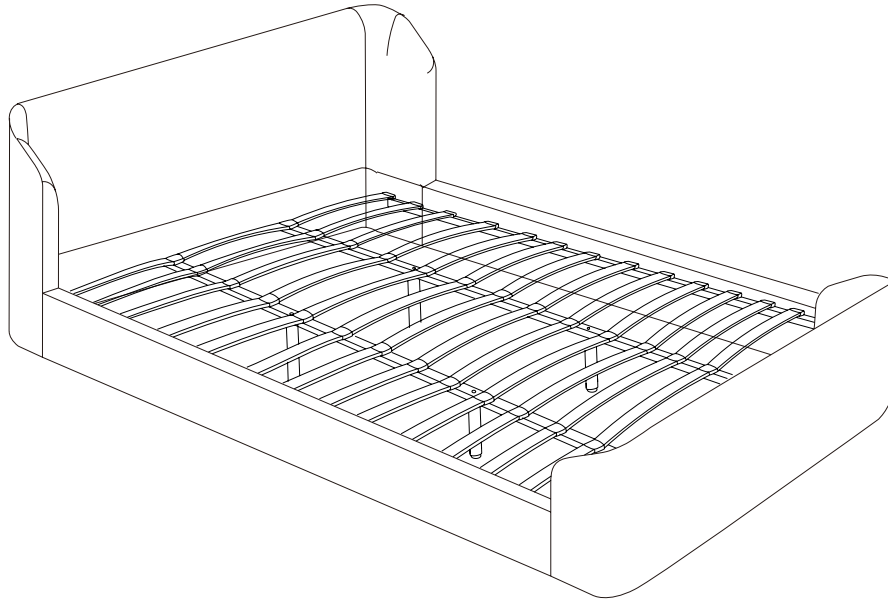


## ASSEMBLY COMPLETE.

### INSTRUCTIONS FOR ADJUSTING LEVELERS:

POSITION THE BED IN YOUR ROOM.  
LOCATE LEVELERS UNDER EACH  
SUPPORT LEG ( H ).

TURN COUNTER-CLOCKWISE TO  
EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH LEG  
SUPPORT IS APPLYING EQUAL UPWARD  
PRESSURE ON THE CENTER SLAT.

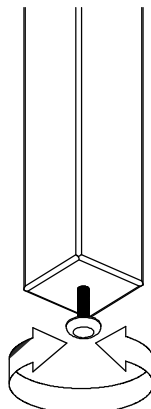

### MAINTENANCE INSTRUCTIONS:

- PERIODICALLY CHECK ALL FITTINGS AND TIGHTEN IF NECESSARY, AS THEY CAN LOOSEN OVER TIME.
- ALWAYS REMOVE BOX SPRING AND MATTRESS BEFORE MOVING THE BED.
- LIFT THE BED WHEN MOVING IT. DRAGGING THE BED CAN DAMAGE THE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING THE BED.

# KIKI UPHOLSTERED BED C.KING/E.KING ASSEMBLY INSTRUCTIONS



## APPENDIX A:ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

### **WARNING!**

SIDE RAIL CLEATS ARE HELD IN PLACE USING PHILLIPS HEAD SCREWS. ONCE THEY ARE REMOVED THE USER WILL NOT BE ABLE TO SAFELY RE-INSTALL THE SIDE RAIL CLEATS FOR FUTURE USE WITH A STANDARD BOX SPRING OR FOUNDATION.

### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. SLAT	39 PCS
E. CENTER SLAT SUPPORT	2 PCS
F. SIDE RAIL SLAT CLIP	26 PCS
G. CENTER SUPPORT SLAT CLIP	26 PCS
H. SLAT SUPPORT LEG	4PCS

### STEP 1 :

USE A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) AND ALLEN KEY (6) TO UNSCREW THE PHILLIPS SCREWS AND ALLEN BOLTS IN ORDER TO REMOVE THE PRE-ASSEMBLED SIDE RAIL CLEATS.

