


# DORSEY WOVEN QUEEN / KING BED ASSEMBLY INSTRUCTIONS




## BOX #1

A. HEADBOARD 1 PC

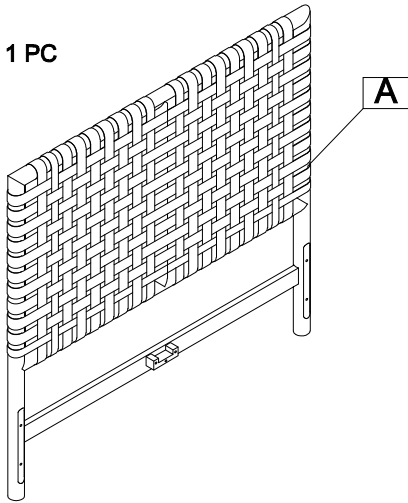

## BOX #2

B. FOOTBOARD 1 PC  
D. SLAT ROLL 1 SET  
BED HARDWARE BOX


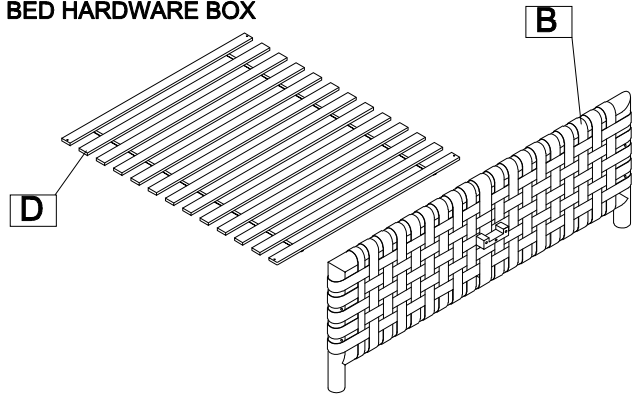


## HARDWARE KIT PACKED IN BOX #2

| No. | DESCRIPTION                           | IMAGE | QUANTITY |
|-----|---------------------------------------|-------|----------|
| 1   | ALL- THREAD BOLT (5/16"x80mm)         |       | 8 PCS    |
| 2   | THREADED HALF MOON WASHER NUT (5/16") |       | 8 PCS    |
| 3   | SPANNER                               |       | 1 PC     |
| 4   | WOOD SCREW (4x30mm)                   |       | 6 PCS    |
| 5   | ALLEN KEY                             |       | 1 PC     |

## BOX #3 :


C. SIDE RAIL 2 PCS  
E. CENTER SLAT SUPPORT 1PC  
F. SUPPORT LEG 4PCS

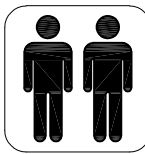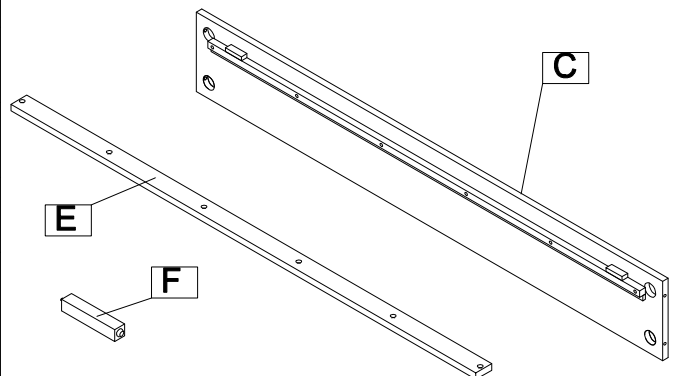

Not provided

ASSEMBLE ON A SOFT SURFACE


## FULLY ASSEMBLED

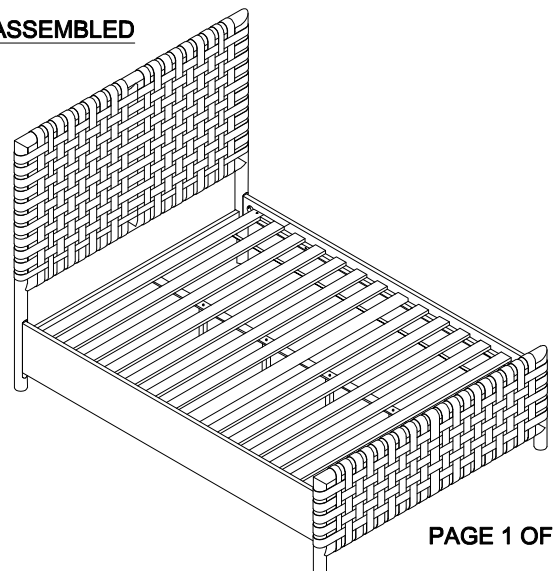


# DORSEY WOVEN QUEEN / KING BED ASSEMBLY INSTRUCTIONS



## STEP #1:

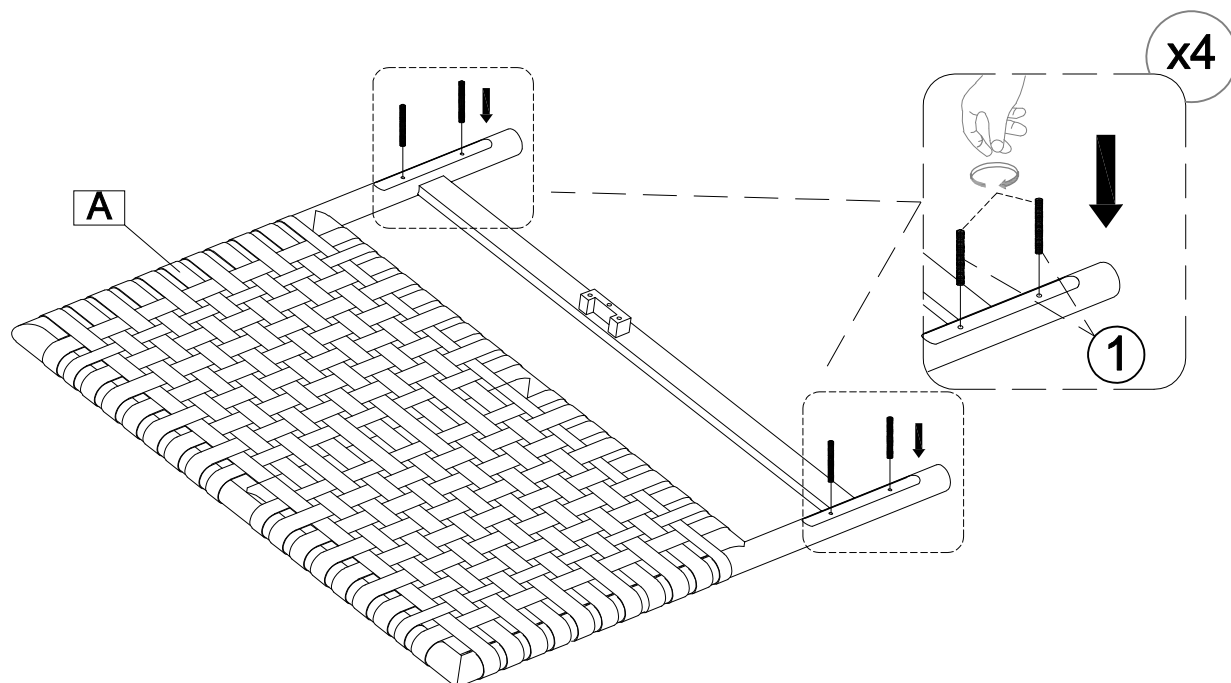


## STEP #2:

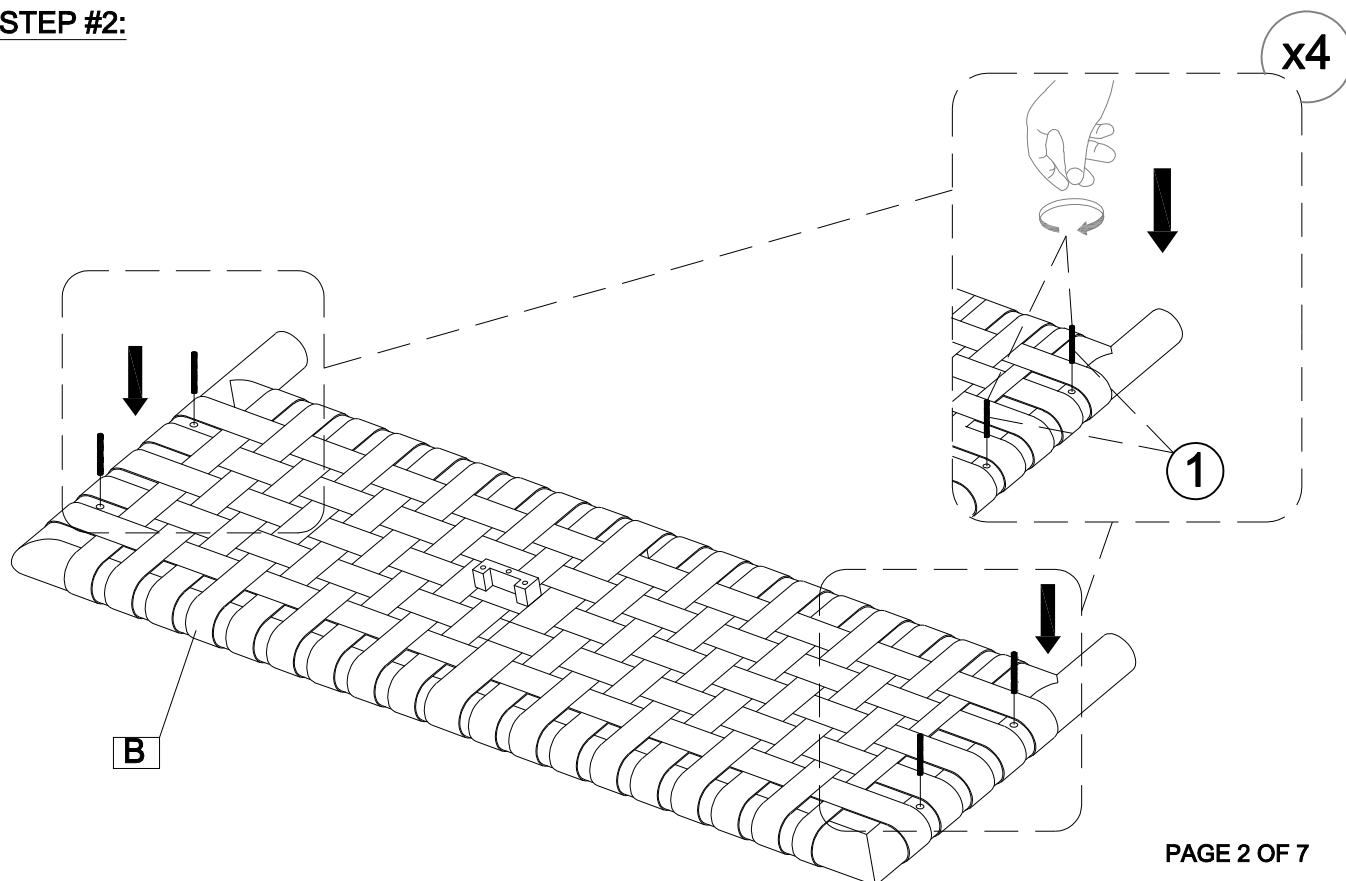


# DORSEY WOVEN QUEEN / KING BED ASSEMBLY INSTRUCTIONS



## STEP #3:

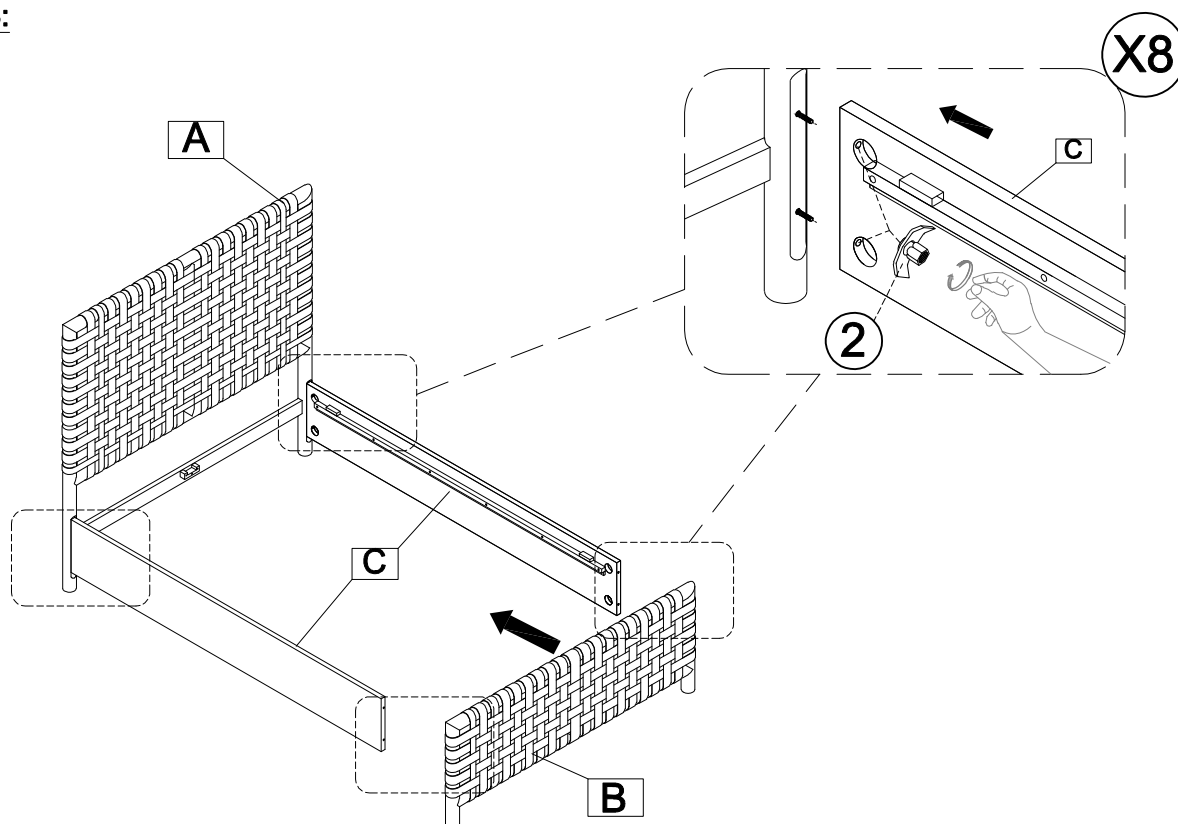

## STEP #4:

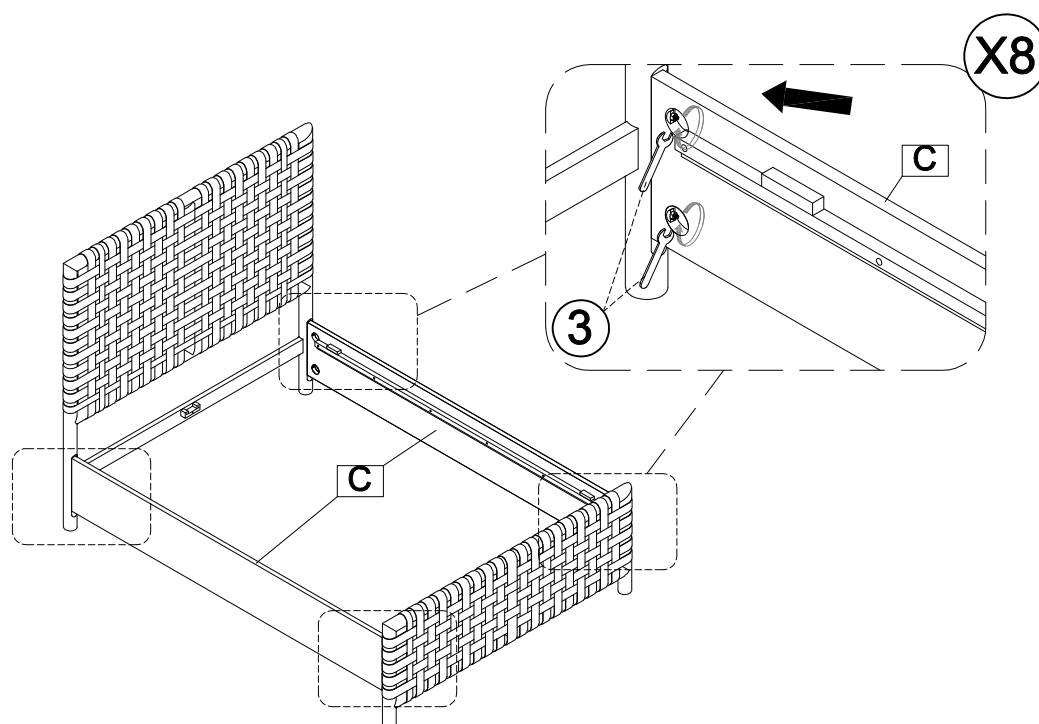


# DORSEY WOVEN QUEEN / KING BED ASSEMBLY INSTRUCTIONS




## STOP

- \* IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- \* IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 5.

### STEP #5:

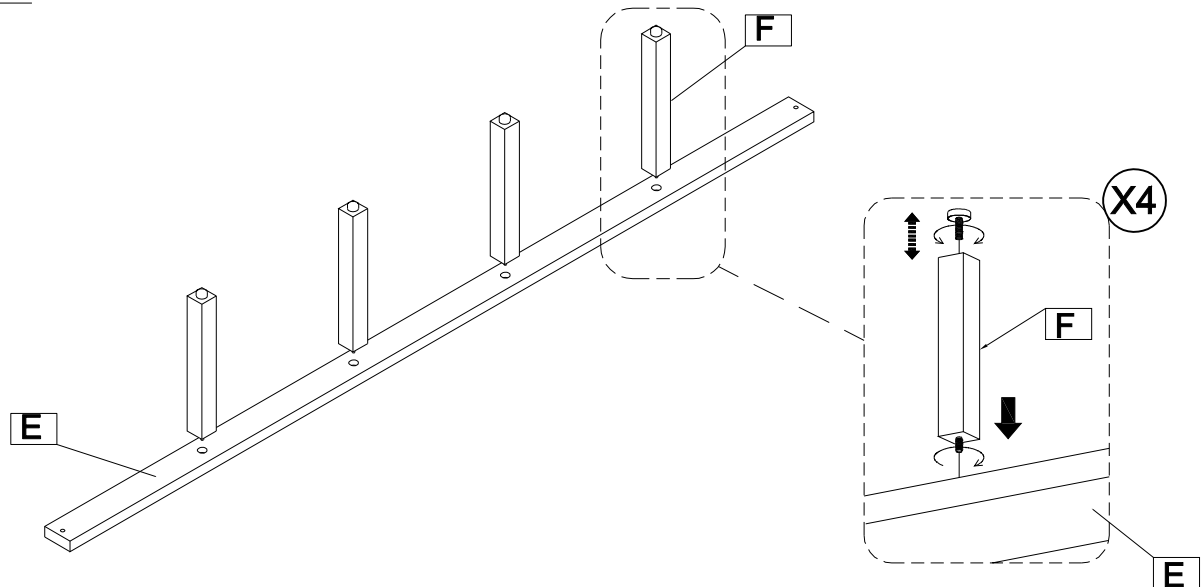


### STEP #6:

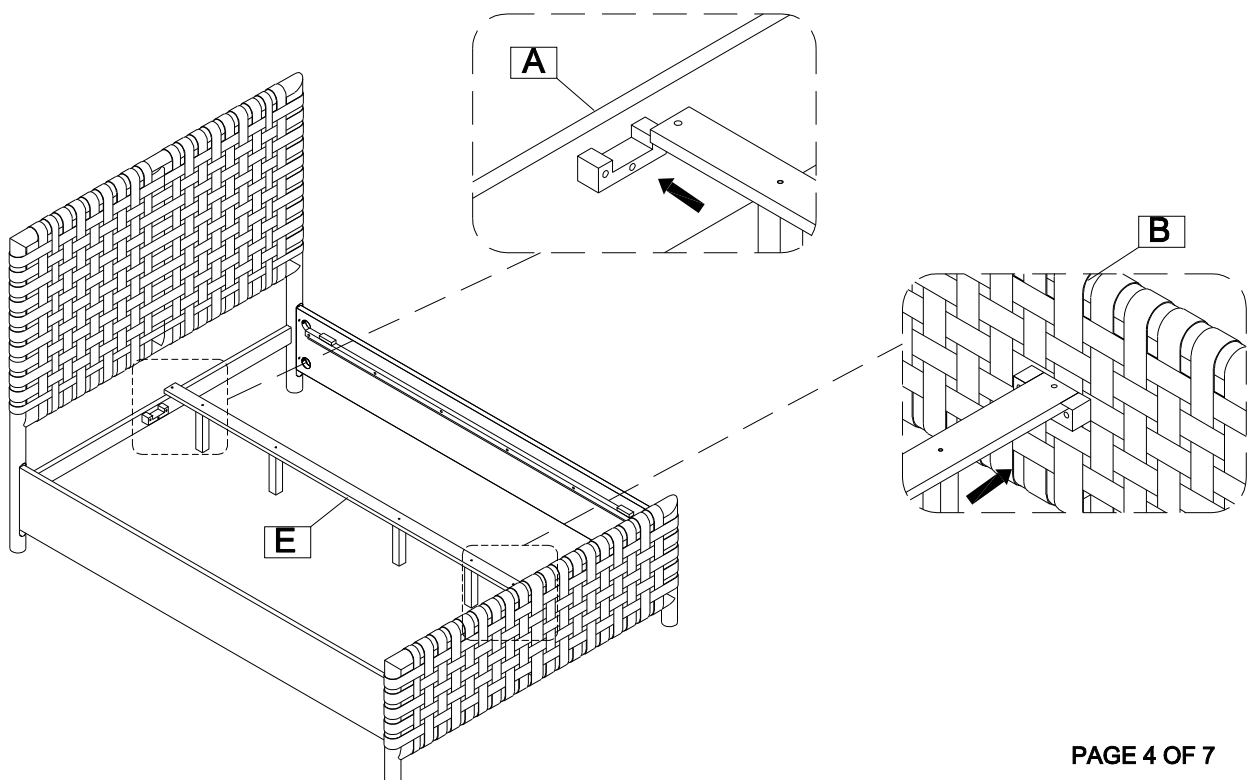


## DORSEY WOVEN QUEEN / KING BED ASSEMBLY INSTRUCTIONS



### STEP #7:

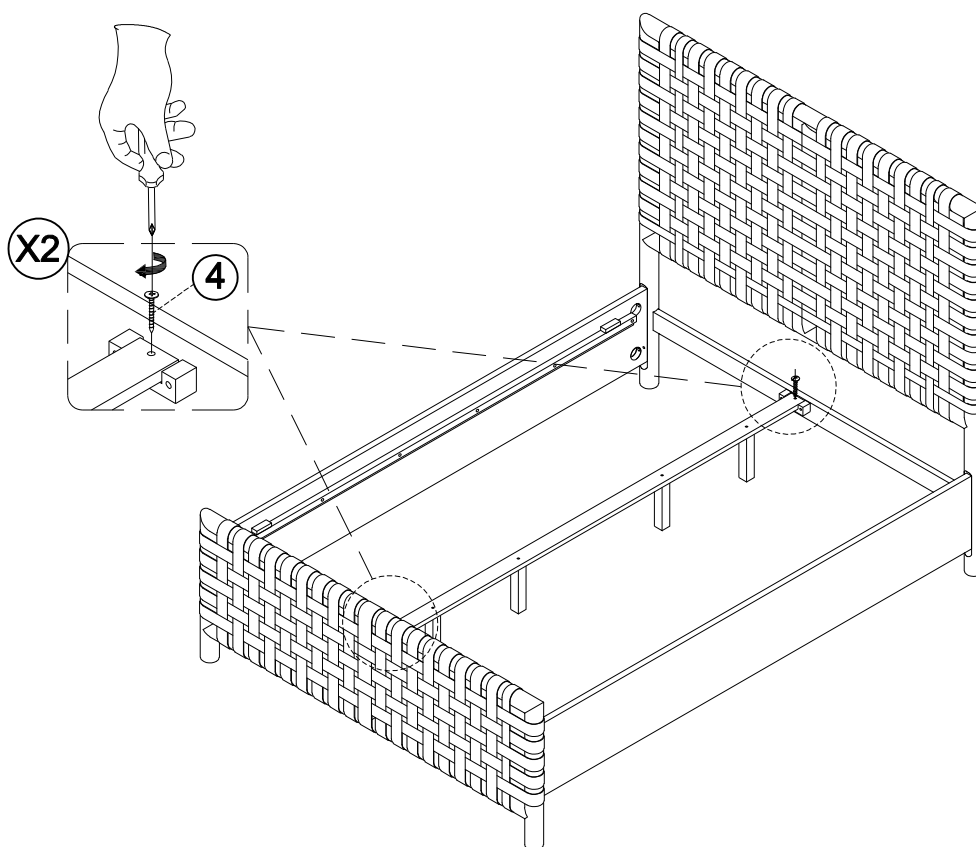


### STEP #8:

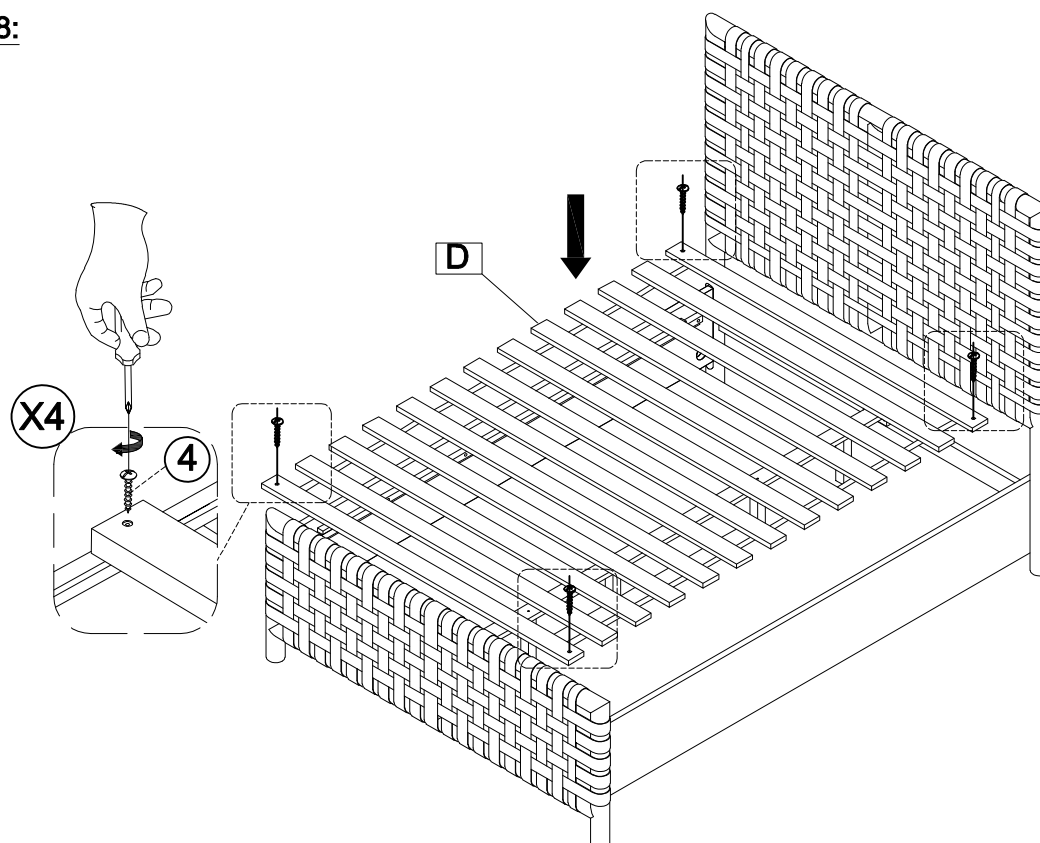

# DORSEY WOVEN QUEEN / KING BED ASSEMBLY INSTRUCTIONS




**ASSEMBLY COMPLETE.**

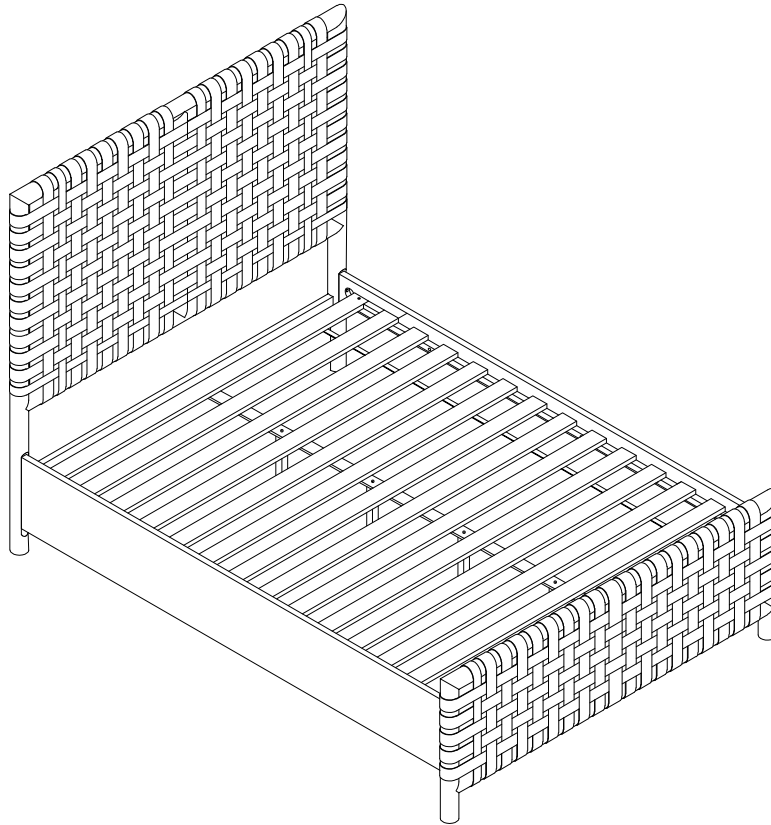

## **INSTRUCTIONS FOR ADJUSTING LEVELER:**

- . POSITION THE BED IN YOUR SPACE AND LOCATE THE LEVELER UNDER EACH SUPPORT LEG.
- . TURN THE LEVELER COUNTER- CLOCKWISE TO EXTEND THE LEVELER AND CLOCKWISE TO RETRACT IT.
- . ADJUST EACH LEVELER UNTIL EACH SUPPORT LEG IS APPLYING EQUAL, UPWARD PRESSURE ON THE BED SUPPORT SLAT.

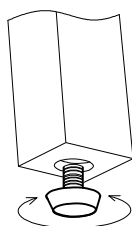

## **MAINTENANCE INSTRUCTION:**

- . REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- . LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE THE LEG SUPPORT.
- . READJUST LEVELERS AFTER MOVING YOUR BED.

# DORSEY WOVEN QUEEN / KING BED ASSEMBLY INSTRUCTIONS

## APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY. PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

**THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:**

D. SLAT ROLL 1SET


4. WOOD SCREW (4x30mm) 6PCS

E. CENTER SLAT SUPPORT 1PC

F. SUPPORT LEG 4PCS

### STEP 1:

USE ALLEN KEY (5) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

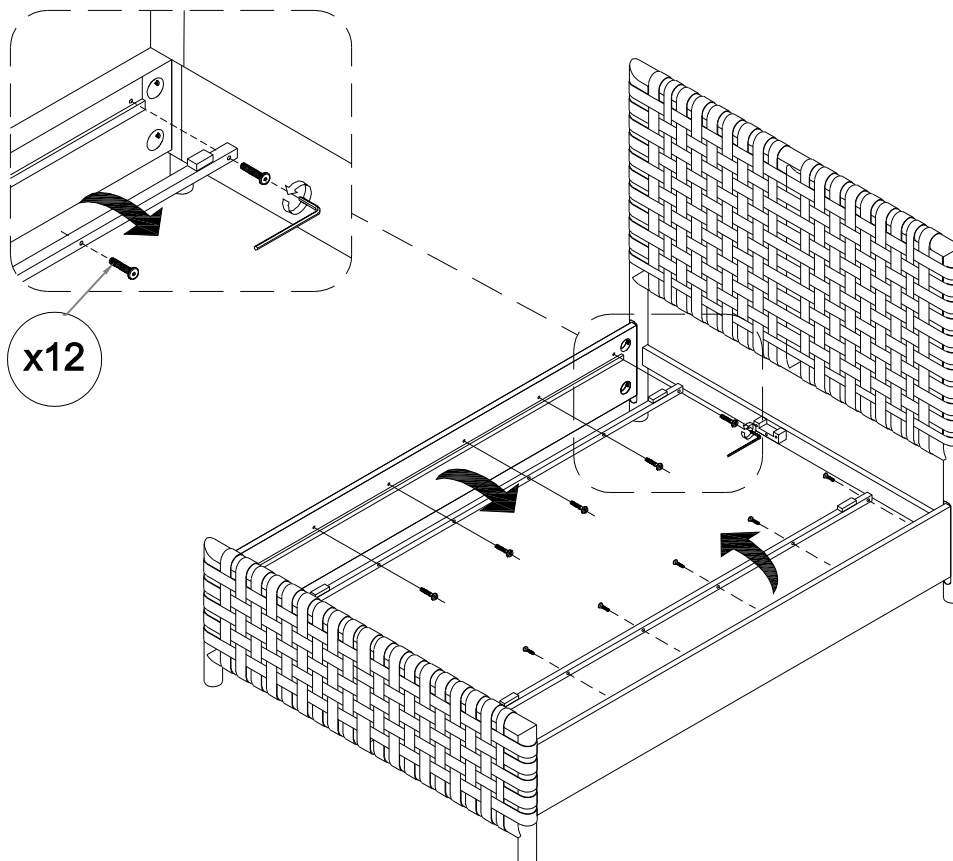

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION