american drew
•inspired design•

Tel: 828-728-3261
www.americandrew.com


ASSEMBLY INSTRUCTIONS

750-130/131/215/220/225/420/422/585


750-130


750-131


750-215


750-220


750-225

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.


750-420


750-422


750-585

INSTRUCTIONS:

1. Turn the case top upside down on a clean soft surface .

2. Screw hanger bolt on Bun foot into spring insert on bottom base. Secure all bun feet and make sure they align together. see Figure 1

NOTE: The insert has a spring which allows up to a 3/4 turn to align the square Bun Foot with the base shape.

THIS STEP IS FOR 750-130/131/585 ONLY:

3. Attach hanger bolt on Center Support into the bottom of case. Tighten by turning the Center Support clockwise. See Figure 2.

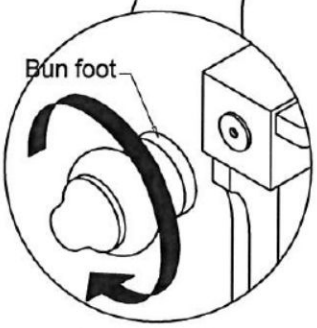
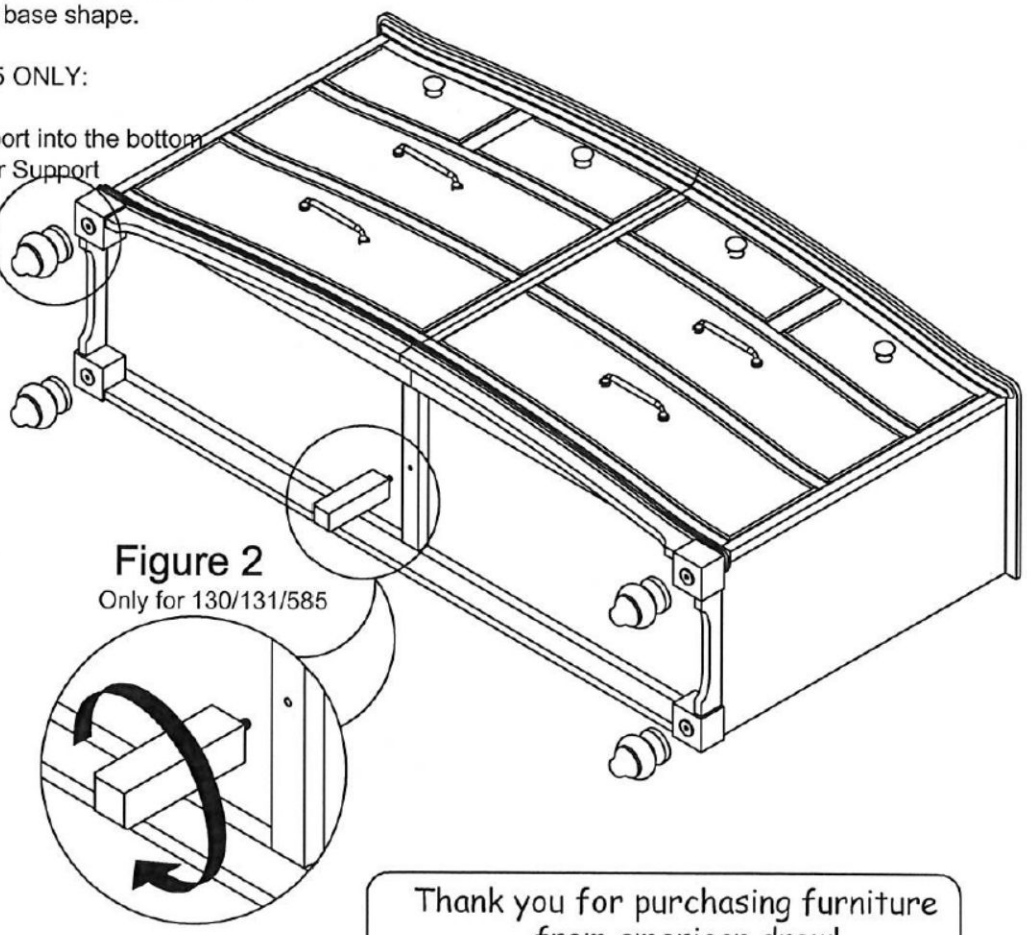


Figure 1


Figure 2
Only for 130/131/585

Thank you for purchasing furniture from american drew!