
PURELL® CS2 DISPENSER INSTALLATION INSTRUCTIONS


These dimensions apply to PURELL brand CS2 push-style dispensers.

Please carefully read all instructions before installing and using the dispenser.

ATTENTION

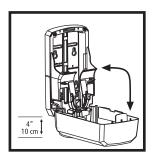


Install the dispenser at least 4" (10 cm) above countertop.

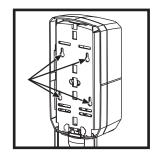

This dispenser is equipped with a universal back plate to allow for easy installation. Before drilling, open dispenser and check existing hardware on wall for alignment.

IMPORTANT NOTE

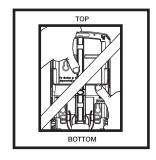


For proper dispenser tape adhesion: Press firmly all around backplate as shown in figure for 30 seconds


For maximum adhesion, do not load refill for 24 hours.

Tape Installation


Should only be used for smooth, dry surface. Clean installation surface throughly. Allow surface to dry for 60 seconds. When installing on marlite wallboard, use scouring cleansing. Rinse and dry thoroughly.

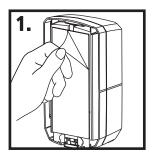

Peel paper off of installation tape and press dispenser firmly into position.

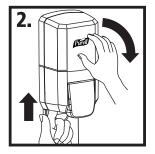


Open dispenser.

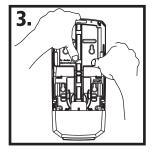


Press firmly on back plate for 30

Fastener Installation | Can be used for installing dipsenser on rough surfaces.

2b. Install # 10 x 1" plugs or anchors into holes, flush against surface. 2c. Insert selftapping Type A screws # 10 x 1" into ho**l**es in back plate and through mounting tape.

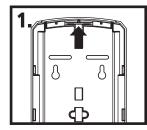


Open dispenser by pushing on cover latch until it releases.



2a. Pierce mounting tape at mounting holes. Be sure protective paper remains in place on mounting tape. Using back plate as template, mark and drill center holes in wall using 1/4" (6.3 mm) spiral masonry drill bit or 1/4" (6.3 mm) wood drill bit.



Peel paper off of installation tape, line up fasteners with anchors, and press dispener firmly into position.

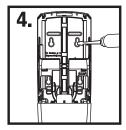

Tighten fasteners securely. Be careful not to overtighten.



Insert refill into dispenser with nozzle facing down.

