

KOKO POSTER QUEEN BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS


BOX #1:
A. HEADBOARD
B. STRETCHER

1 PC
1 PC

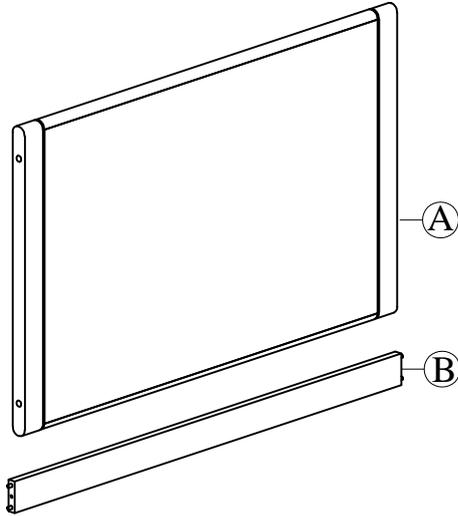


BOX #2:
C. FOOTBOARD
D. SLAT
E. SLAT SUPPORT LEG

1 PC
5 PCS
5 PCS

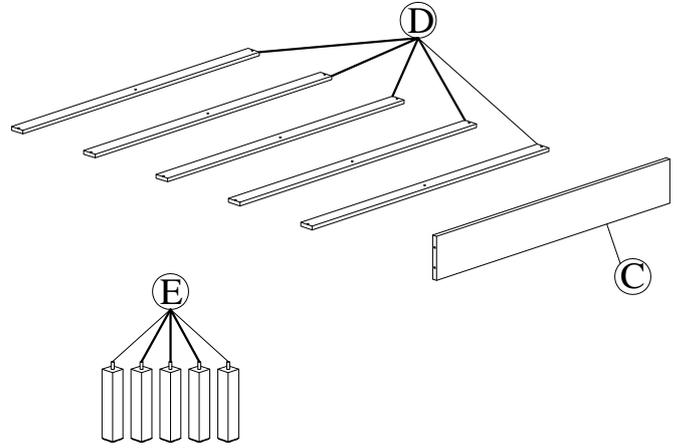


BOX #3:
F. SIDE RAILS

2 PCS

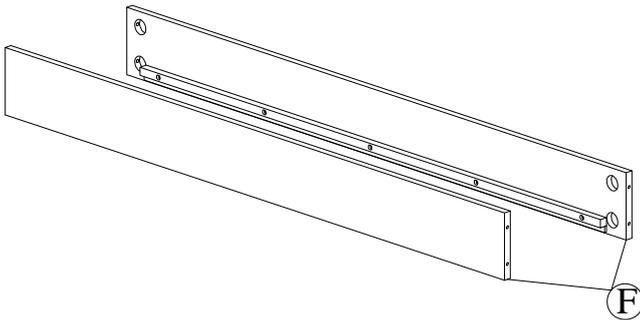


BOX #4:
G. HEADBOARD LEFT POST
H. HEADBOARD RIGHT POST
I. FOOTBOARD LEFT POST
J. FOOTBOARD RIGHT POST

1 PC
1 PC
1 PC
1 PC

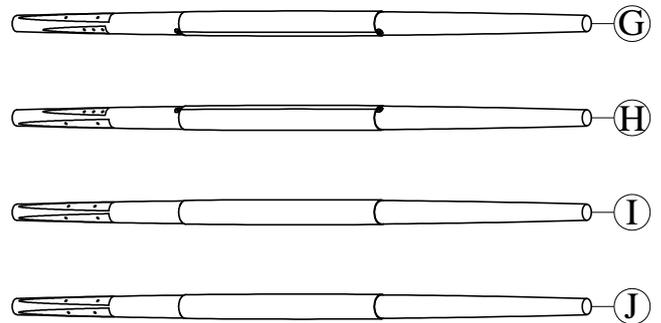


FULLY ASSEMBLED

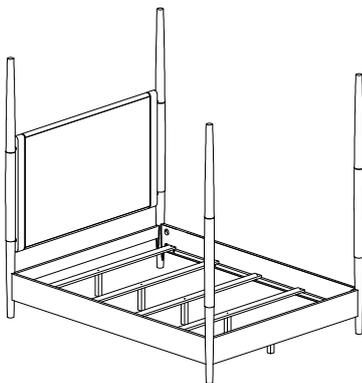

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8x90mm)		18 PCS
2	HALF MOON WASHER (7x14x27mm)		18 PCS
3	HEX NUT (M8)		18 PCS
4	WRENCH (13mm)		1 PC
5	WOOD SCREW (4x30mm)		10 PCS
6	ALLEN KEY (4mm)		1 PC
7	WOOD DOWEL (Ø20x28mm)		4 PCS




Not provided

KOKO POSTER QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 1:

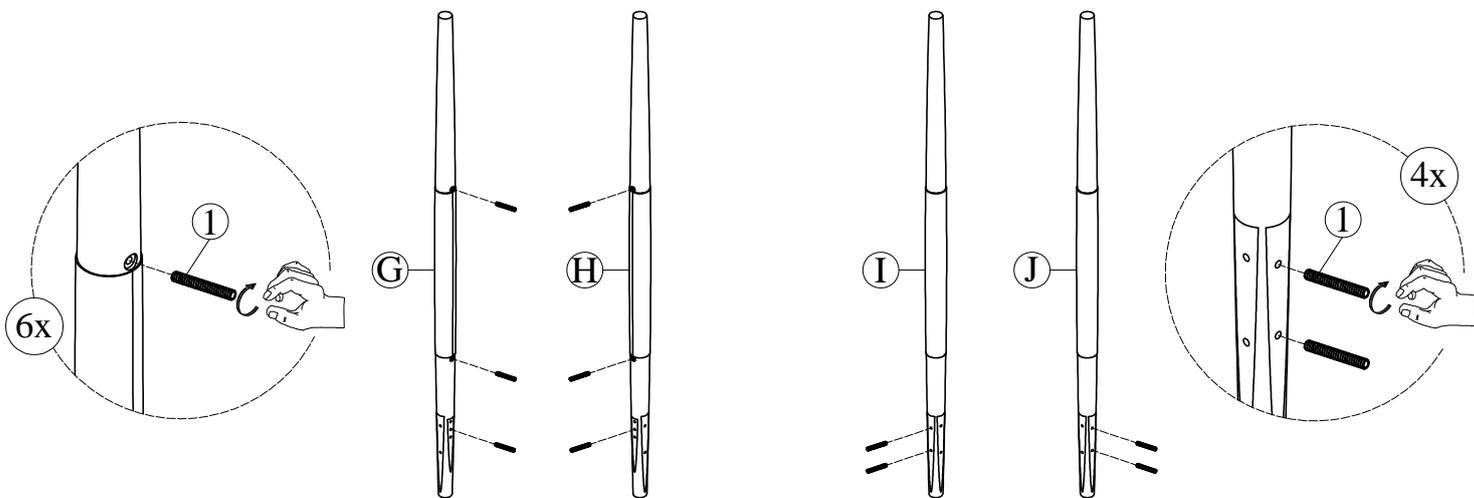

STEP 2:

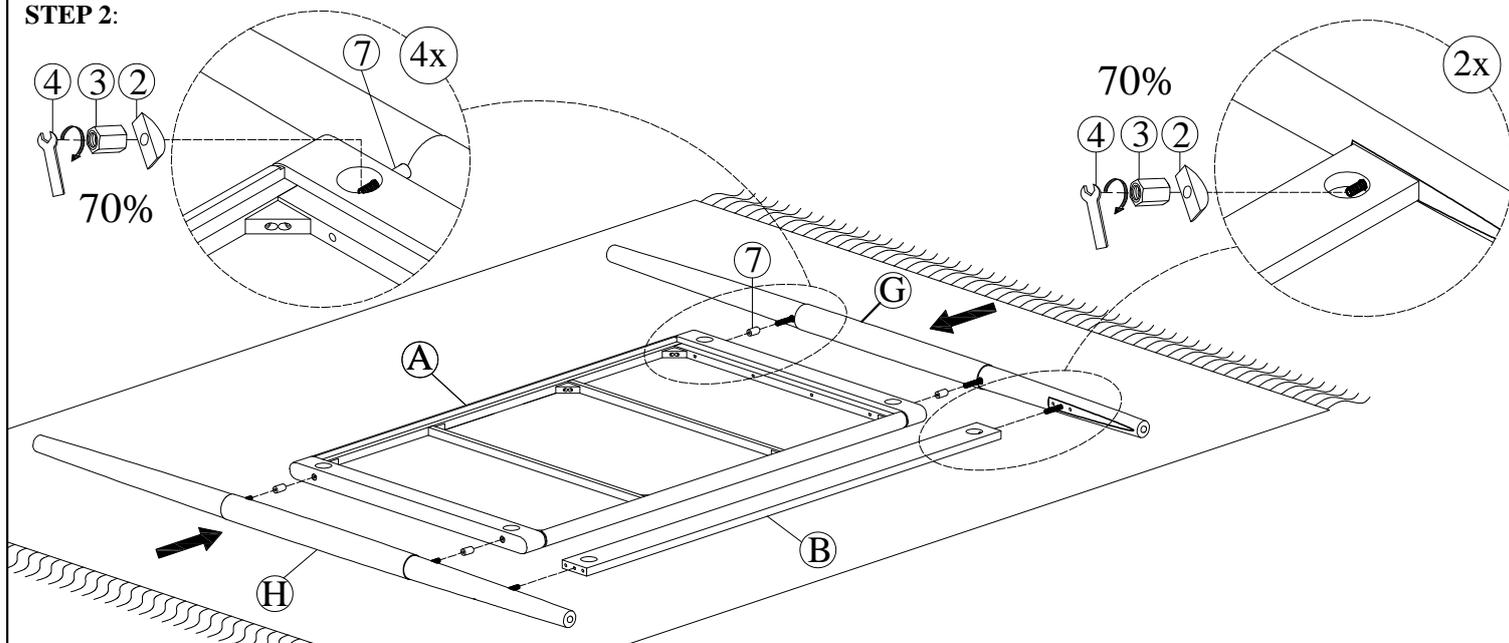

STEP 3:

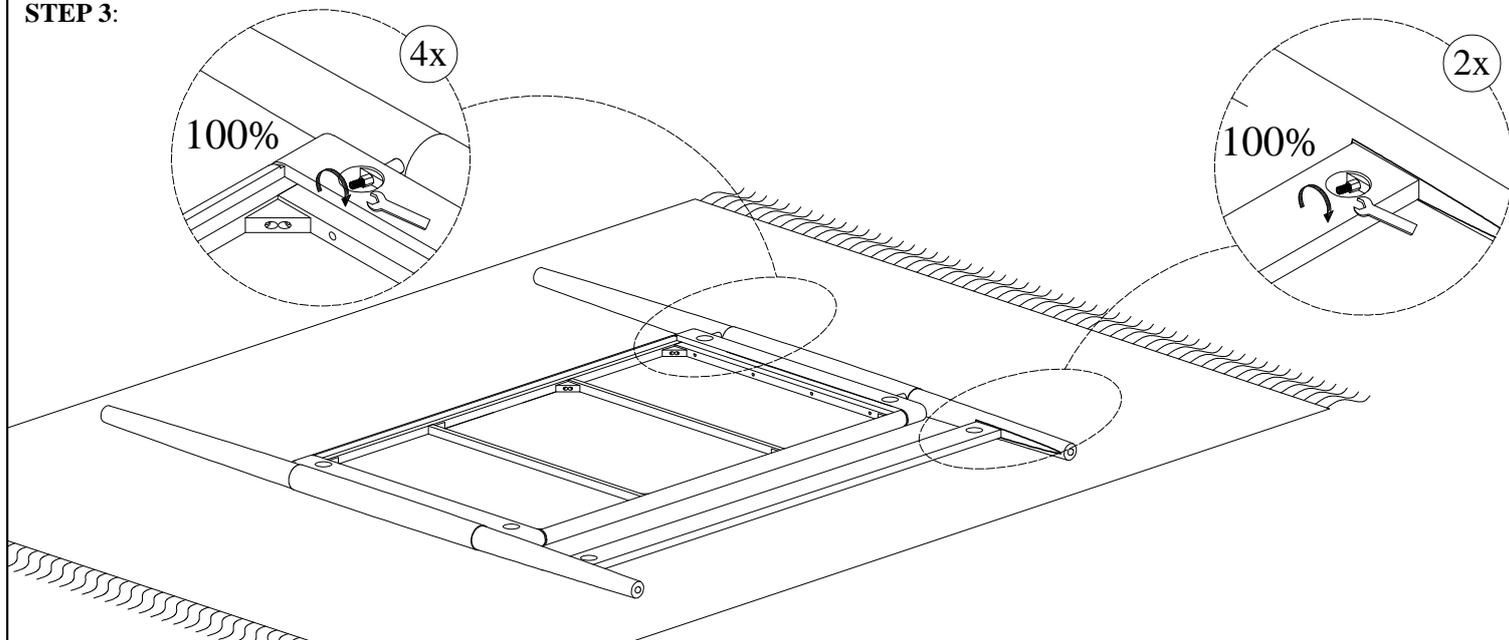


KOKO POSTER QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 4:

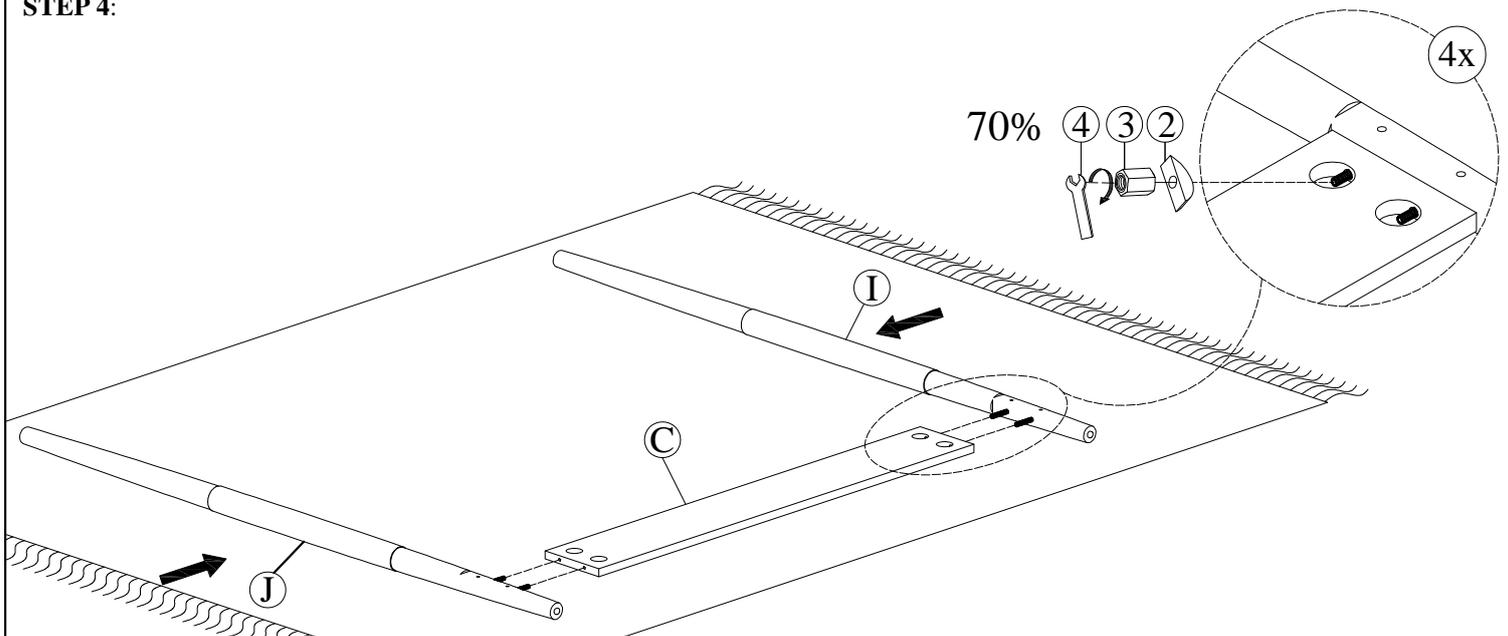

STEP 5:

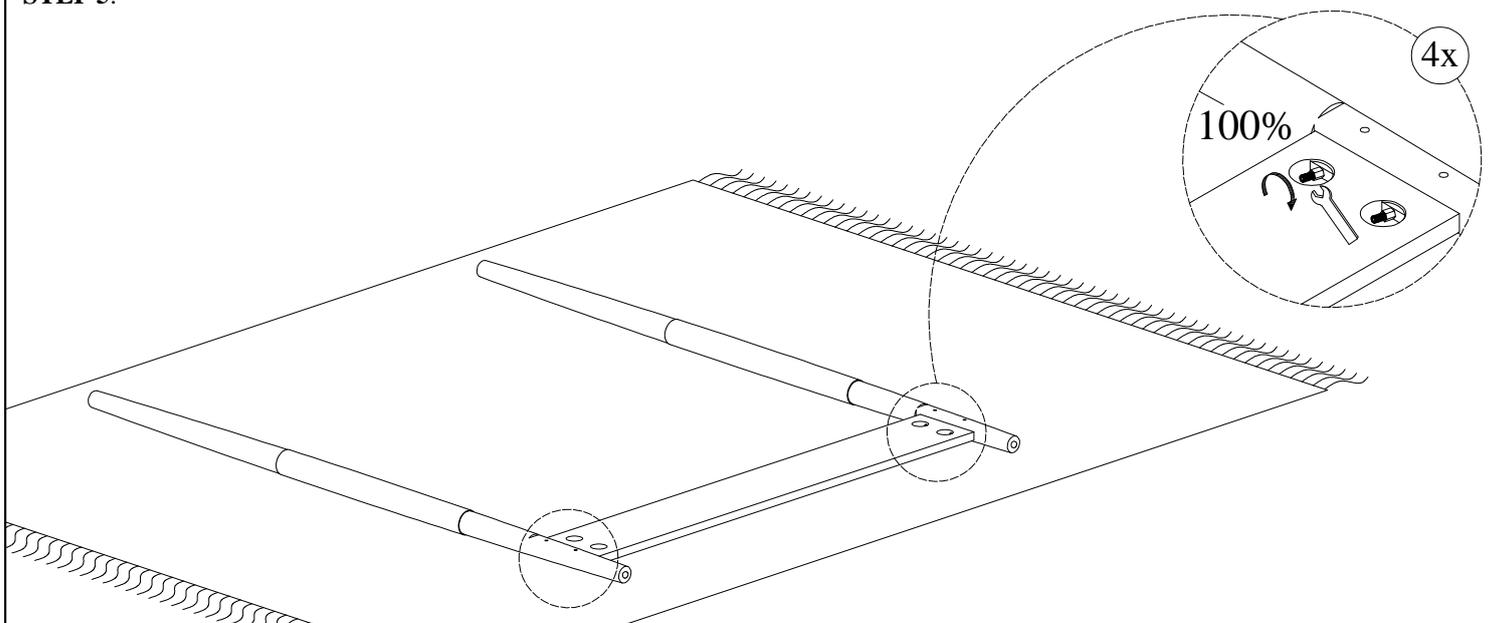

STEP 6:

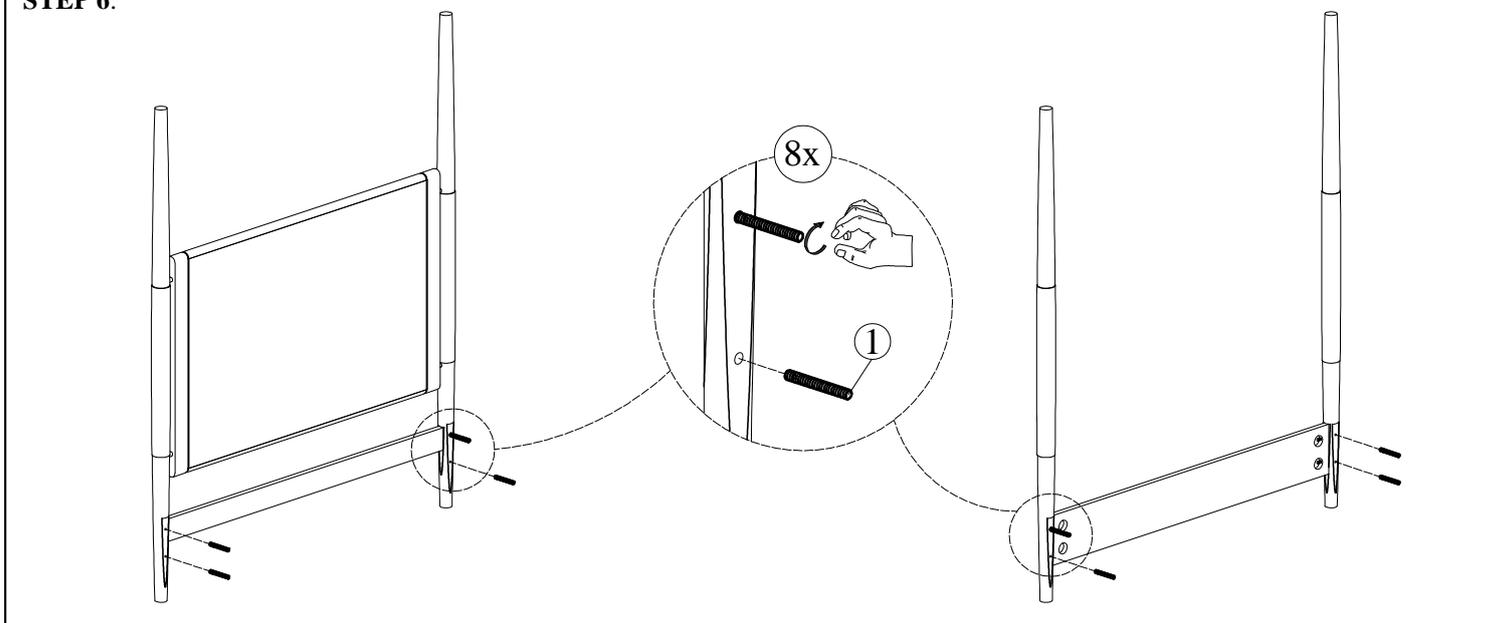


KOKO POSTER QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 7:

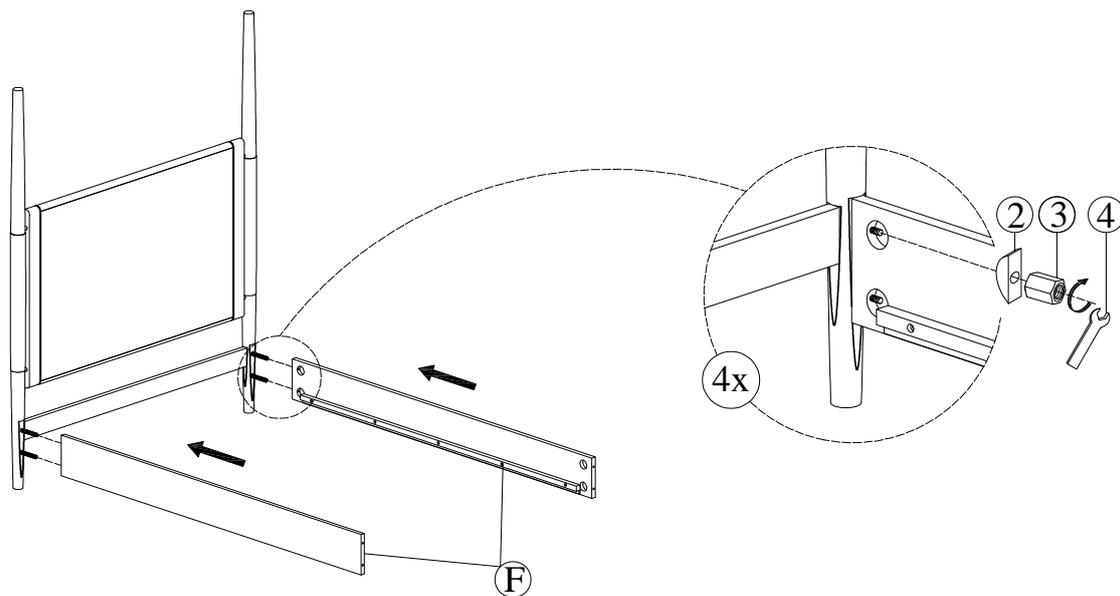


STEP 8:

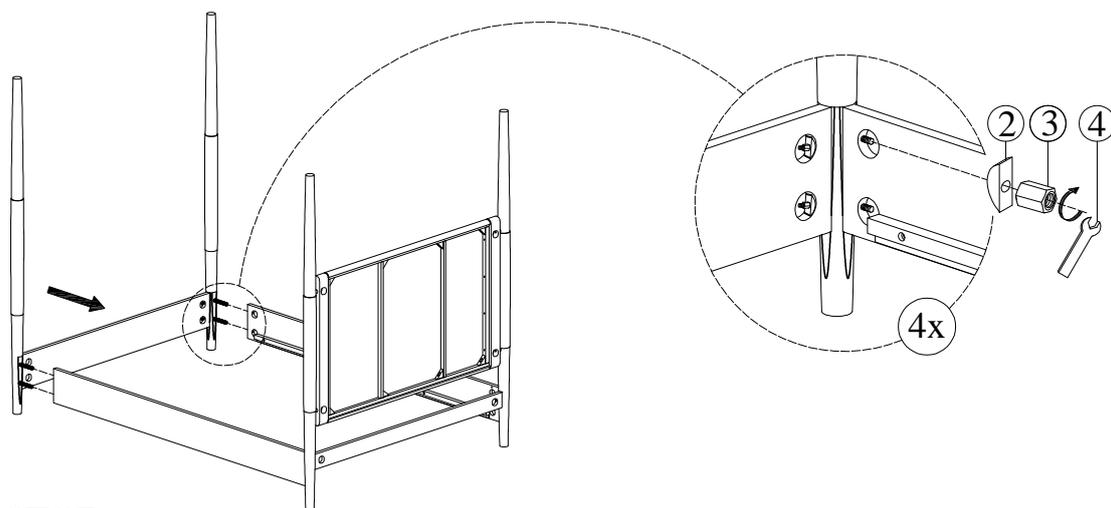

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 9, 10 & 11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 9

STEP 9:

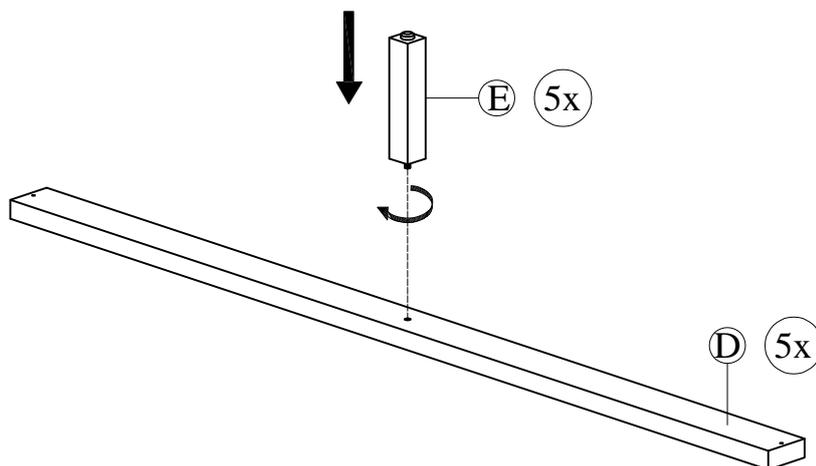


KOKO POSTER QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 10:

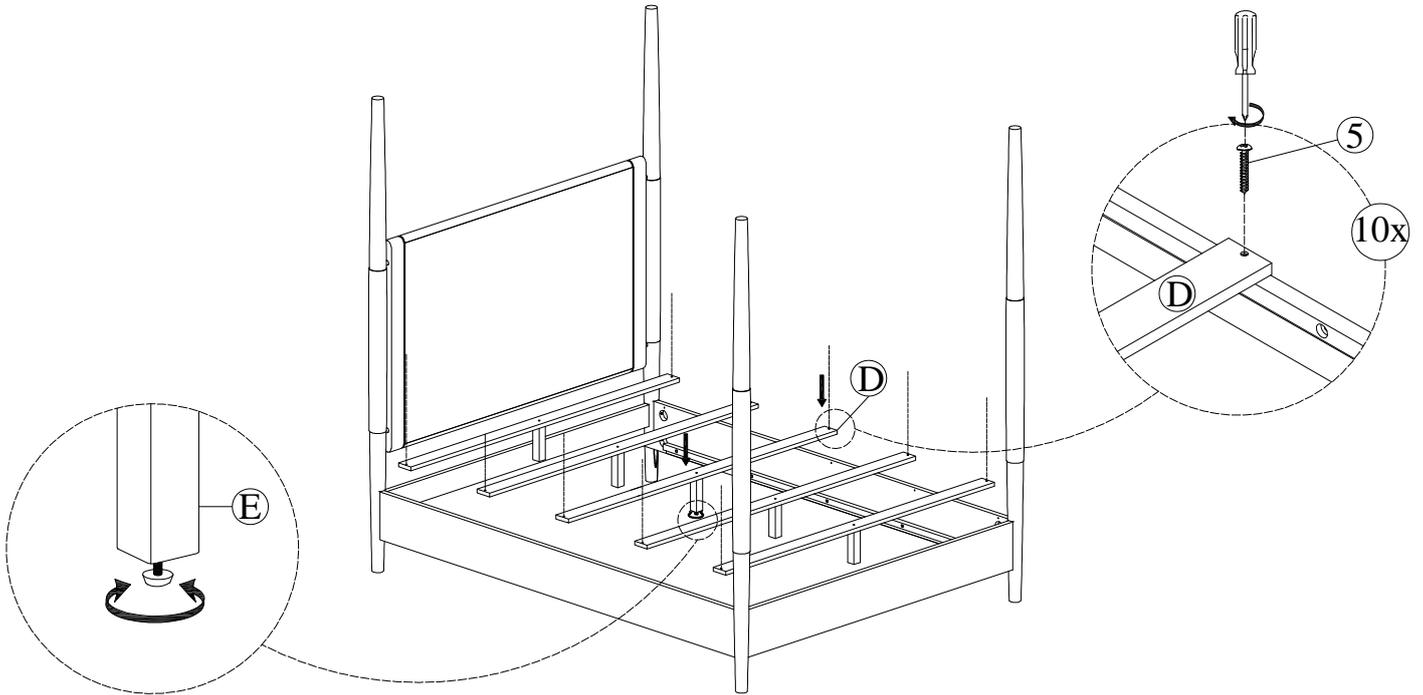

STEP 11:

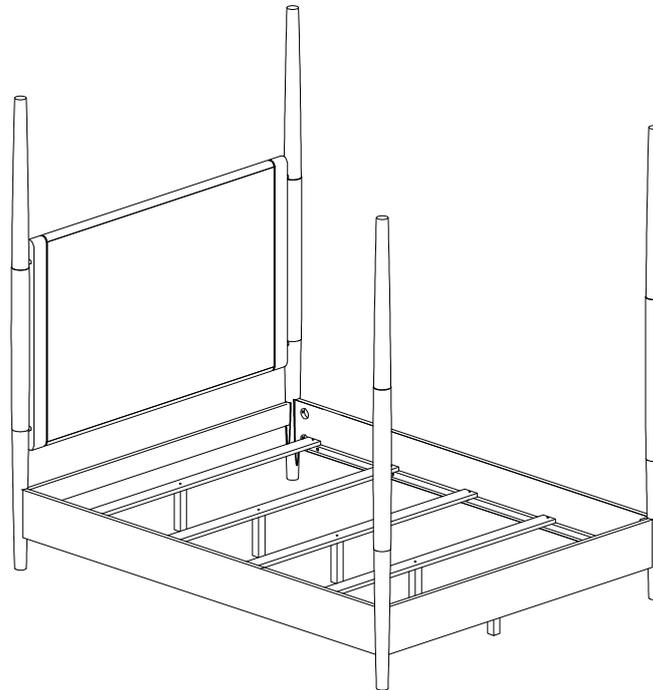


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

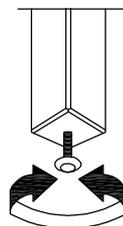

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

KOKO POSTER QUEEN BED

ASSEMBLY INSTRUCTIONS

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. SLAT	:5 PCS	5. WOOD SCREW (4x30mm)	:10 PCS
E. SLAT SUPPORT LEG	:5 PCS		

STEP 1:

USE ALLEN KEY (6) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

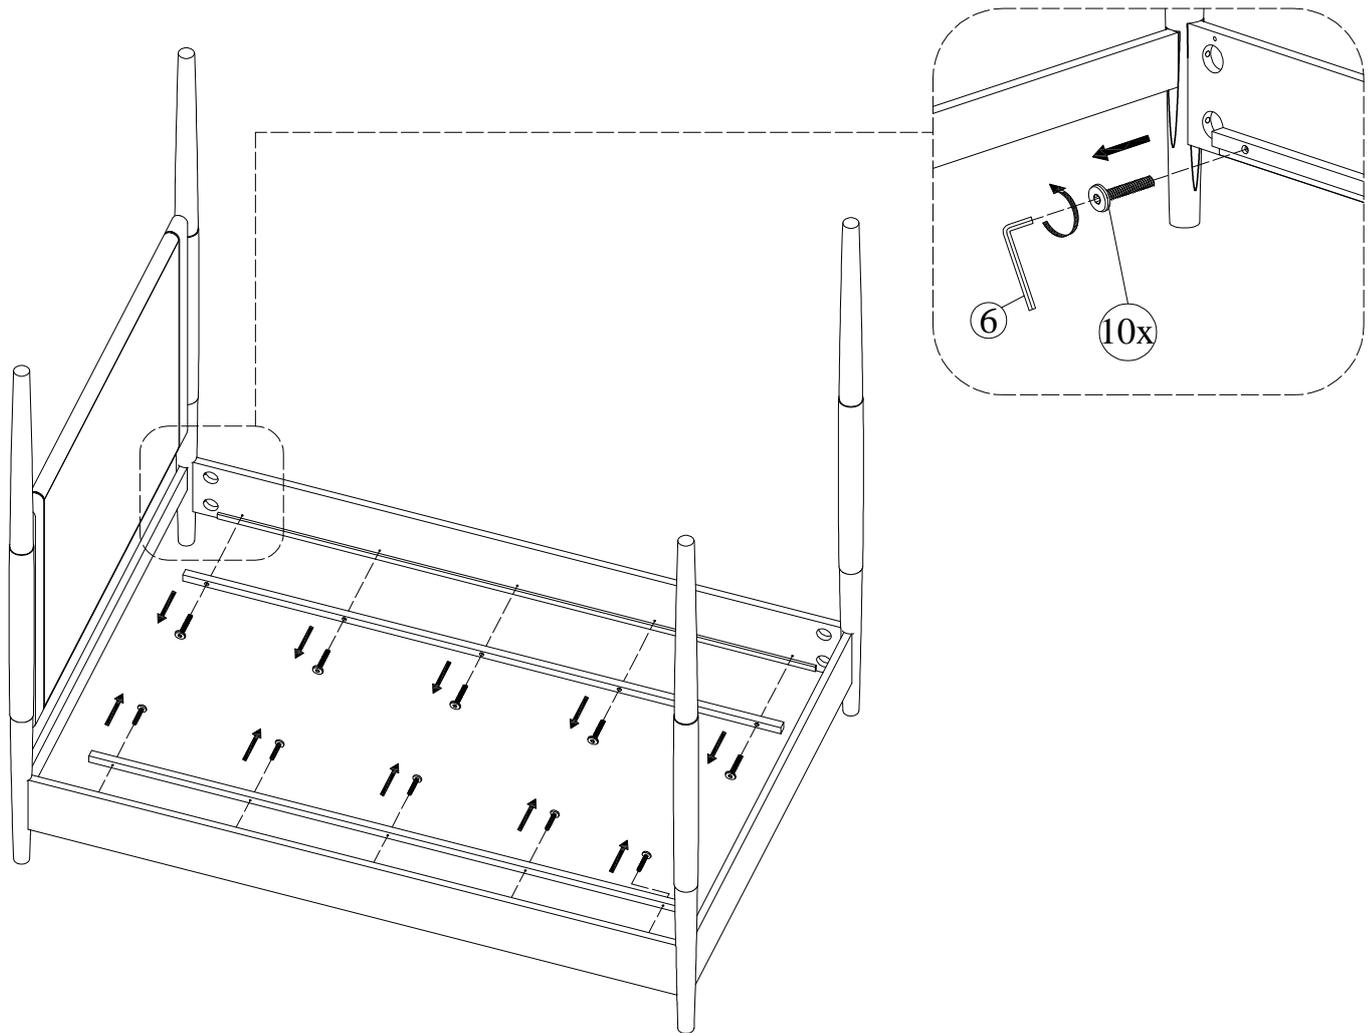

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.