
KINCAID
SOLID WOOD SINCE 1946


ASSEMBLY INSTRUCTION

269-304/305 SCHAFER 5/0 PANEL BED - HDBD - FTBD - W/RAILS
269-306/307 SCHAFER 6/6 PANEL BED - HDBD - FTBD - W/RAILS
269-306/308 SCHAFER 6/6 PANEL BED - HDBD - CAL FTBD - W/RLS

www.kincaidfurniture.com
Phone : 828-728-3261.

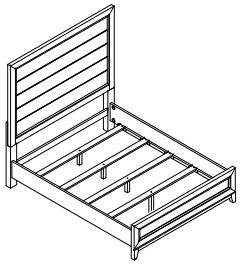

5/0 HDBD-FTBD W/RAILS

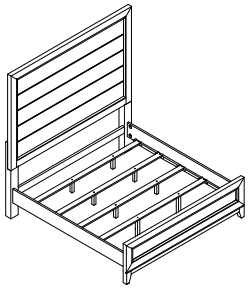

6/6 HDBD-FTBD W/RAILS
6/6 HDBD-CAL FTBD W/RLS

4) Assembly is completed.

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.

. Check to be sure that you have all parts and hardware.

. Remove all wrapping materials,including staples and packing straps before you start to assemble.

. Do not tighten all screws and bolts until completely assembled.

. Keep all hardware out of the reach of children.

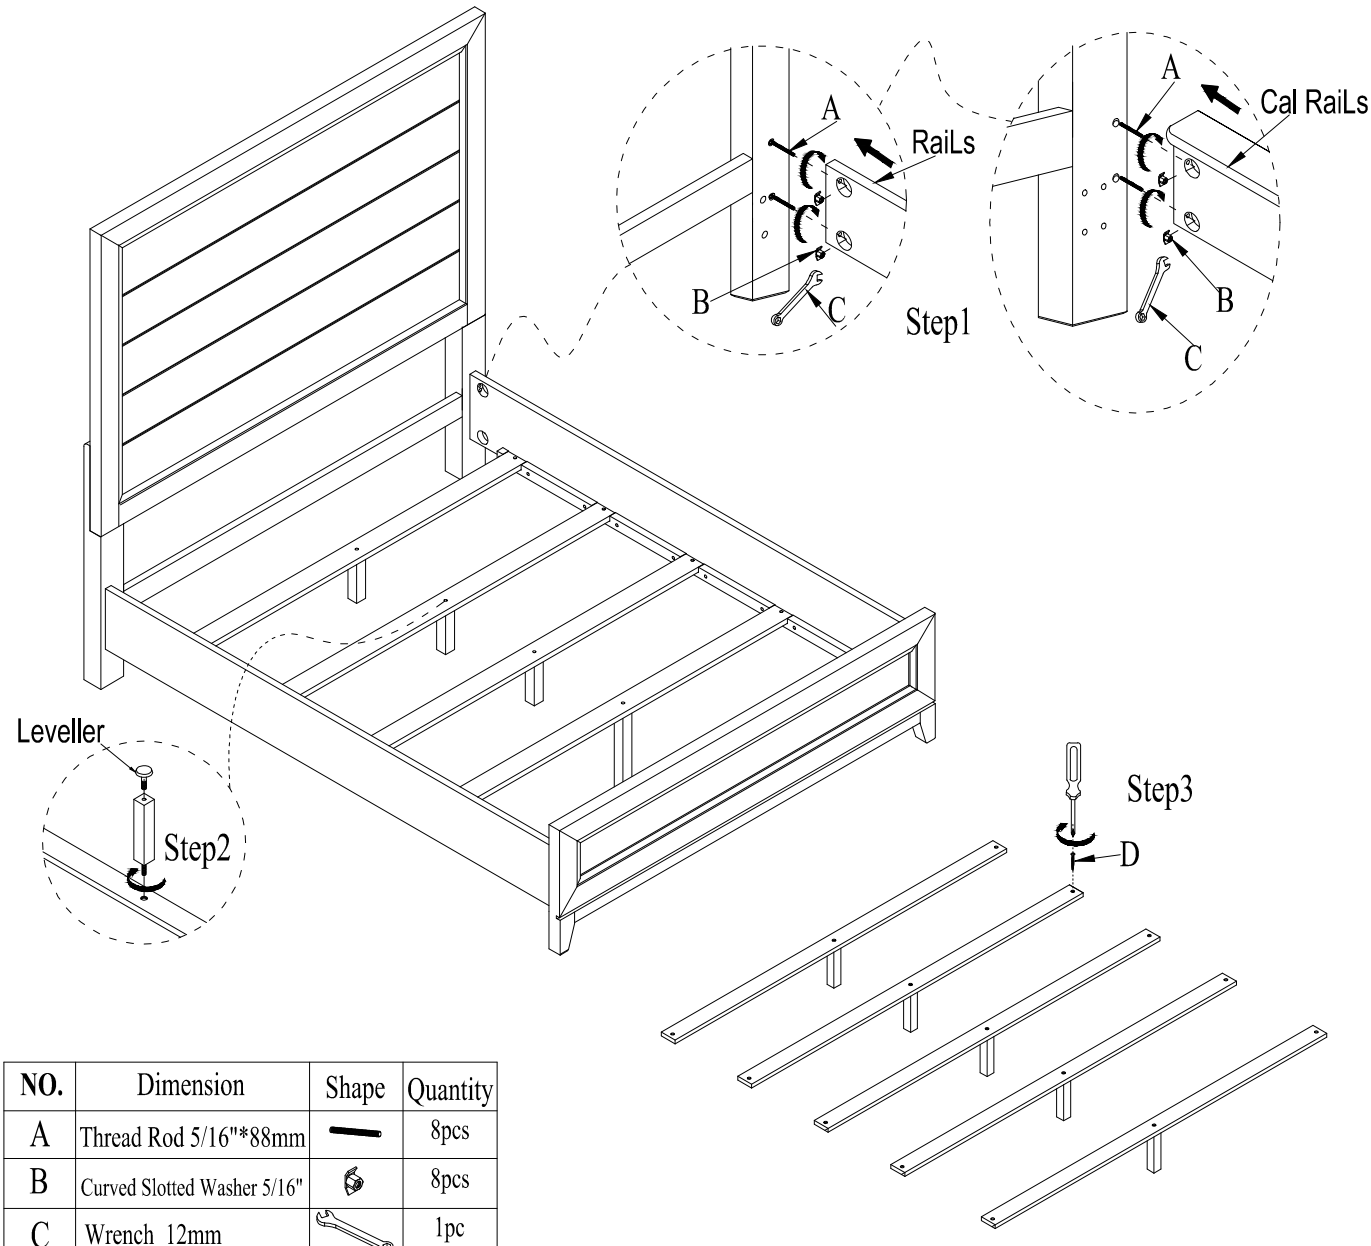

NO.	Dimension	Shape	Quantity
A	Thread Rod 5/16"*88mm		8pcs
B	Curved Slotted Washer 5/16"		8pcs
C	Wrench 12mm		1pc
D	Screw #8*25mm		10pcs