
a m e r i c a n d r e w
• i n s p i r e d d e s i g n •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

924-480

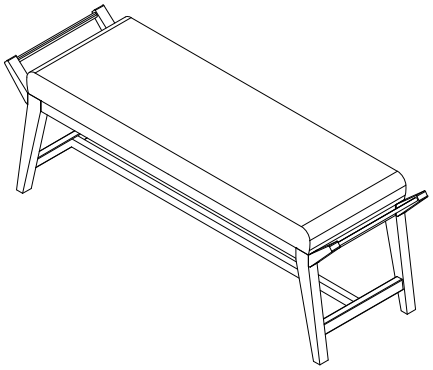

TOOLS REQUIRED:

Allen Key (supplied, part # I)

BEFORE YOU START:


1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Attach ballast bar with foot frame. Use Flat Washer (G), Lock Washer (F), Bolt(C) with Allen Key (I). (See Figure 1)

2. Attach foot frame with sitting frame . Use Flat Washer (E), Lock Washer (D), Bolt(B) with Allen Key (I). (See Figure 2)

3. Use Flat Washer (D), Lock Washer (E), Bolt (A) on each hanger bolt and tighten with Allen Key (I). (See Figure 3)

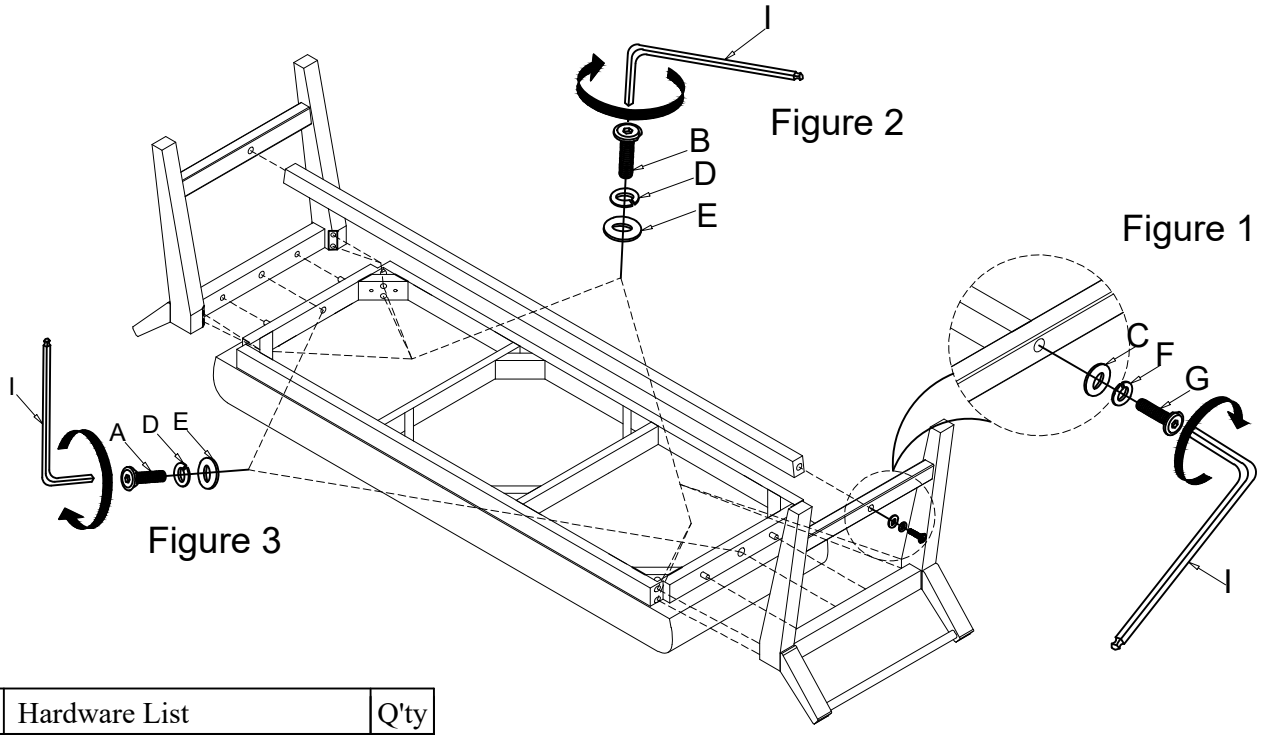

No.		Hardware List	Q'ty
A		Bolt Ø5/16"x1-1/2"	2
B		Bolt Ø5/16"x3"	8
C		Bolt Ø1/4"x1-1/2"	2
D		Lock Washer Ø5/16"	10
E		Flat Washer Ø5/16"	10
F		Lock Washer Ø1/4"	2
G		Flat Washer Ø1/4"	2
I		Allen Key 4mm	1

Thank you for purchasing furniture from american drew!