
KINCAID

SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

706 -304/306 JESSUP PANEL BED HDBD

www.kincaidfurniture.com
Phone : 828-728-3261.

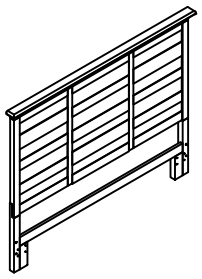

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.

. Check to be sure that you have all parts and hardware.

. Remove all wrapping materials,including staples and packing straps before you start to assemble.

. Do not tighten all screws and bolts until completely assembled.

. Keep all hardware out of the reach of children.

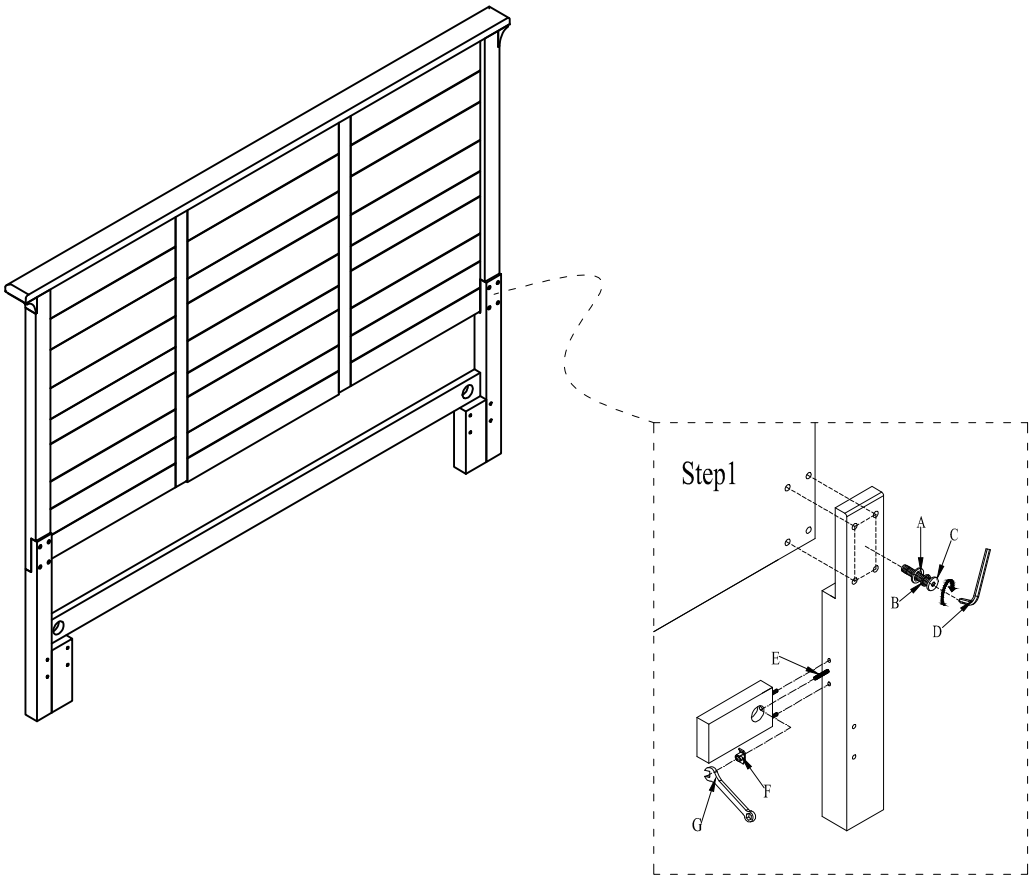

NO.	PART DESCIPTION	Q'TY
A	FLAT WASHER 5/16"*19	8
B	LOCK WASHER 5/16"	8
C	BOLT 5/16"*32mm	8
D	ALLEN KEY 4mm	1
E	THREAD ROD (5/16*88mm)	2
F	CURVED SLOTTED WASHER (5/16")	2
G	WRENCH (12mm)	1