

ASSEMBLY INSTRUCTION

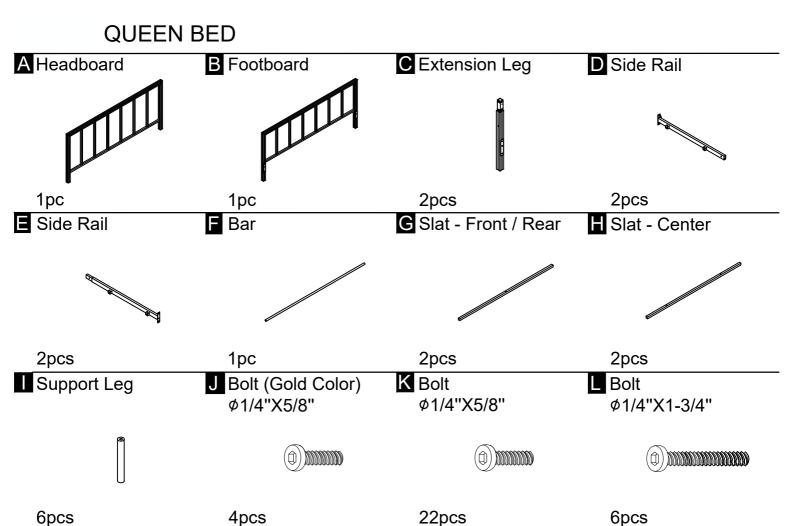

O Flat Washer

28pcs

\$\phi 1/4\"x16mm

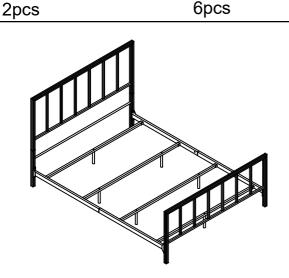

N Flat Washer

(Gold Color) $\phi 1/4$ "x16mm

M Bolt (Gold Color)

φ1/4"X2-1/4"


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

P Allen Key


M4


1pc

Assemble Bar (F) to the Extension Leg (C) with Bolt (M), Flat Washer (N) then fastened using Allen Key (P).

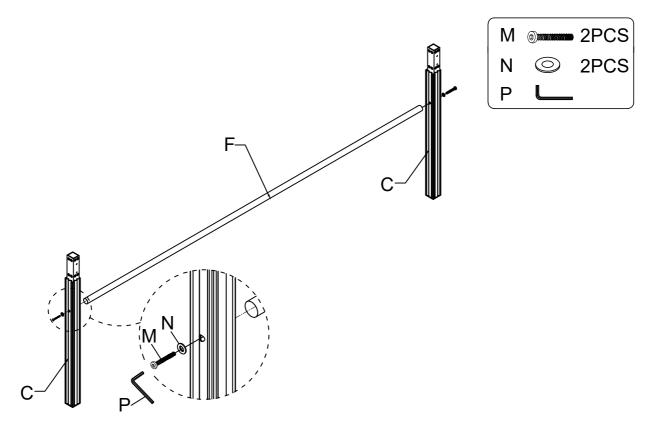


Assemble the Headboard (A) to the Extension Leg (C) with Bolt (J), Flat Washer (N) then fastened using Allen Key (P).

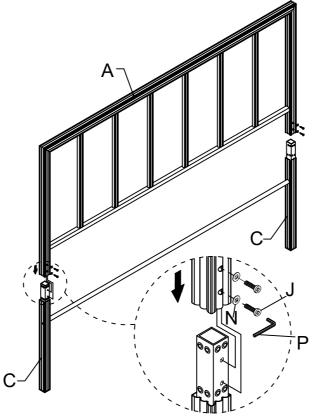





Connect both Side Rail (D) & Side Rail (E) using Bolt (K), Flat Washer (O) by Allen Key (P) as picture shown.

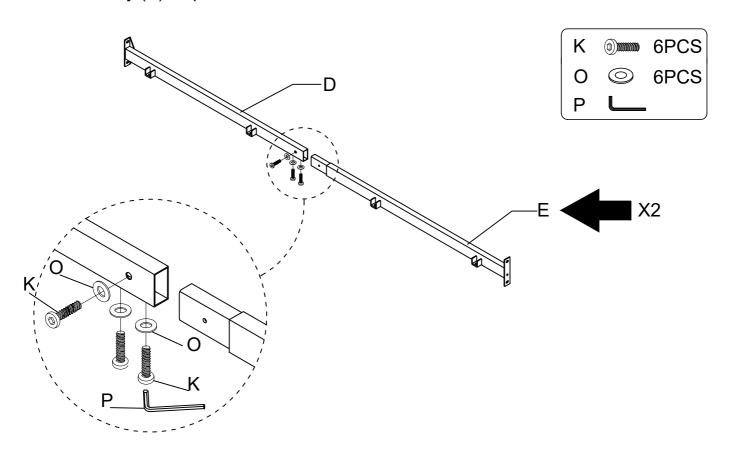


Attach the Side Rail (D) & Side Rail (E) to Extension Leg (C) and Footboard (B) using Bolt (K), Flat Washer (O) by Allen Key (P).

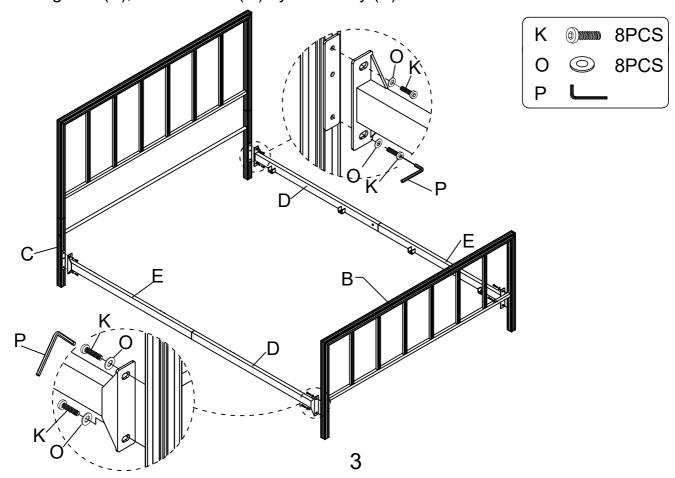

Attach the Support Leg (I) to Slat - Front / Rear (G) and Slat - Center (H) using Bolt (L), Flat Washer (O) by Allen Key (P) as picture shown.

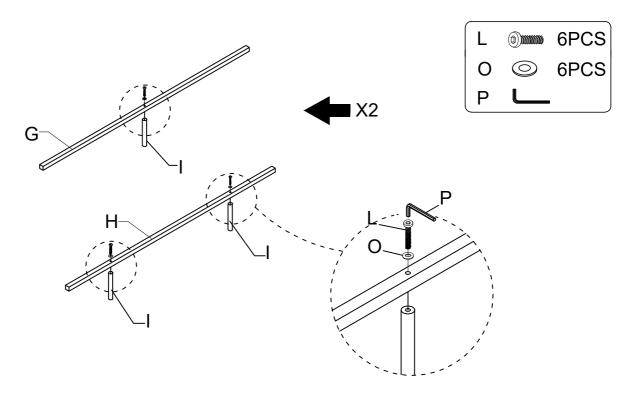

Attach the pre-assembled Slat - Front / Rear (G) and Slat - Center (H), Side Rail (D) & Side Rail (E) using Bolt (K), Flat Washer (O) by Allen Key (P) as picture shown.

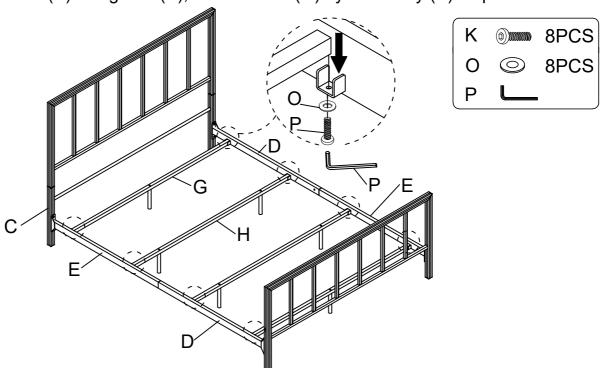

Adjust any parts out of alignment and tighten all bolts and screws from steps 1 through 6.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.