a m e r i c a n  d r e w
• i n s p i r e d  d e s i g n •

Tel: 828-728-3261
www.americandrew.com

# ASSEMBLY INSTRUCTIONS



929-911

## TOOLS REQUIRED:

Allen key (supplied, part # D)

## BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.


## INSTRUCTIONS:

1. Attach 4 legs to the iron frame. (see Figure 1)

2. Carefully lay table top upside down on a flat, soft surface. Attach the legs using flat washers (C), lock washers (B), and bolt (A).Tighten with Allen key (E). (see Figure 2).
   And use Nails decoration (D) to fix between iron frame and legs. (see Figure 3).

Figure 3

Figure 1

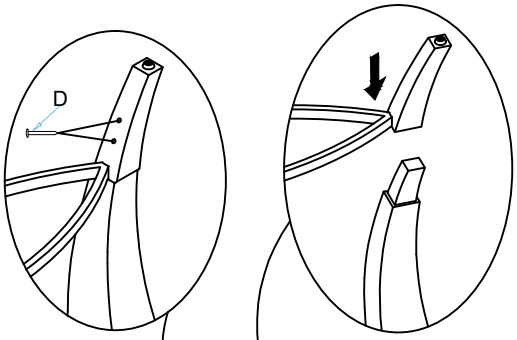

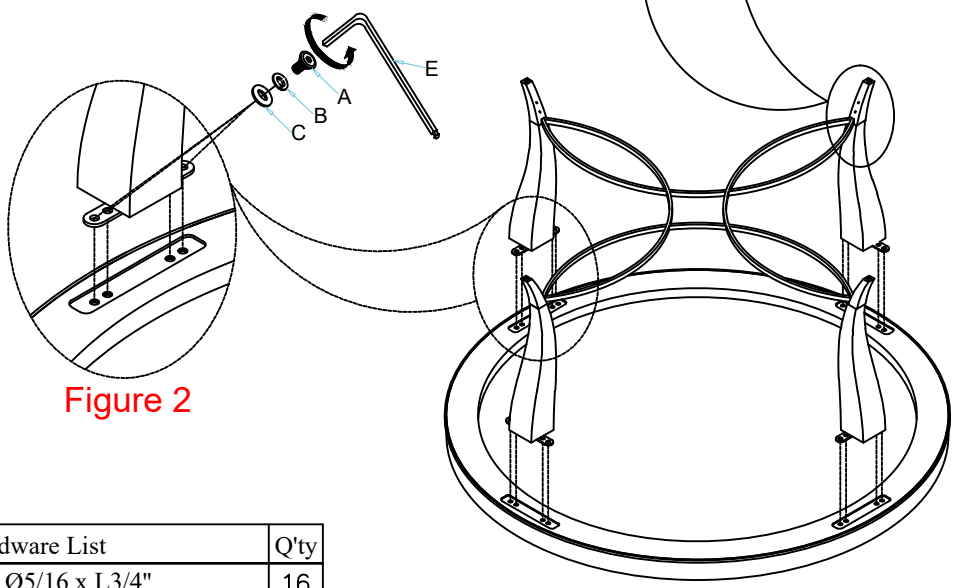




Figure 2

| No. | | Hardware List | Q'ty |
|---|---|---|---|
| A |  | Bolt Ø5/16 x L3/4" | 16 |
| B |  | Lock Washer Ø5/16" | 16 |
| C |  | Flat Washer Ø5/16" | 16 |
| D |  | Nail decoration Ø3 x L15mm | 8 |
| E |  | Allen Key 4mm | 1 |

Thank you for purchasing furniture from american drew!