
KINCAID
SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

269-581 WAGNER HUTCH
269-580 WAGNER CABINET

www.kincaidfurniture.com
Phone : 828-728-3261.

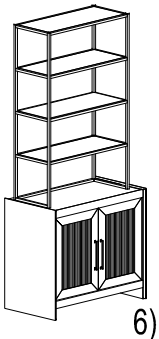

6) Assembly is completed.

IMPORTANT NOTES :

. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.


. Check to be sure that you have all parts and hardware.

. Remove all wrapping materials,including staples and packing straps before you start to assemble.


. Do not tighten all screws and bolts until completely assembled.

. Keep all hardware out of the reach of children.


Step1

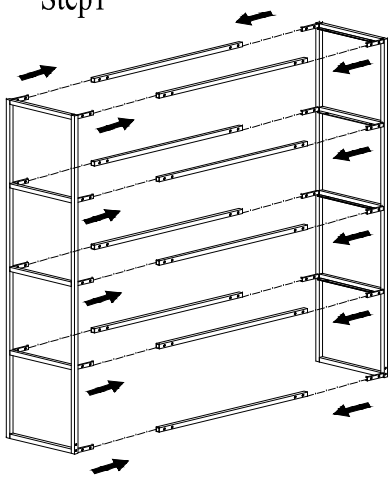


Step2

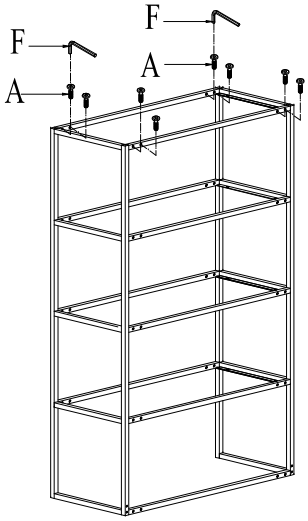


Step3

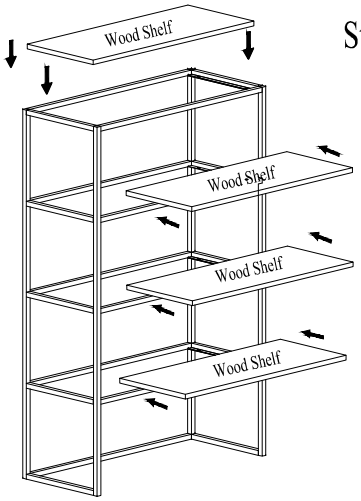

Step4

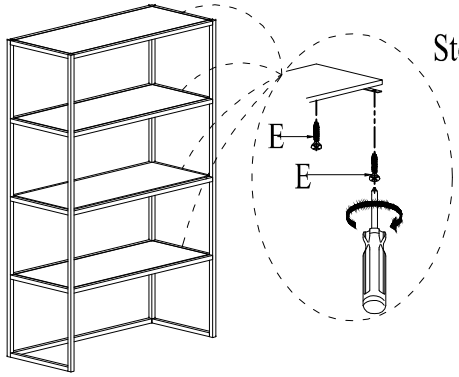

Step5

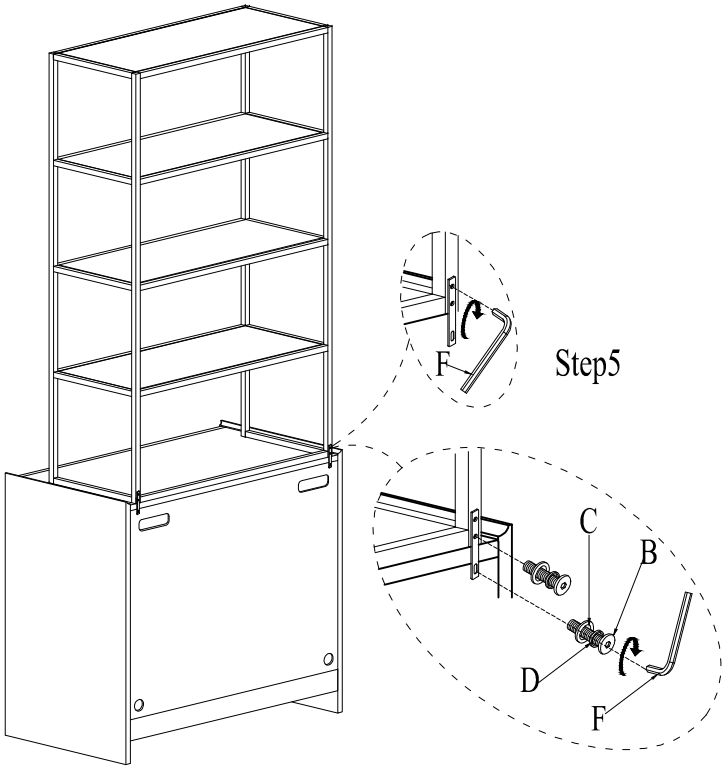

NO.	Dimension	Shape	Quantity
A	Hex Socket Flat Heap Oap Screw 1/4"*19mm		36pcs
B	Bolt 1/4"*19mm		4pcs
C	Flat Washer Ø1/4"*16		4pcs
D	Lock Washer Ø1/4"		4pcs
E	Screw #3.5*15mm		16pcs
F	Allen Key 4mm		1pc