


# PALERMO/VERONA BED FULL/QUEEN ASSEMBLY INSTRUCTIONS



## BOX#1

- A. HEADBOARD 1 PC  
B. HEADBOARD LEG 2 PCS

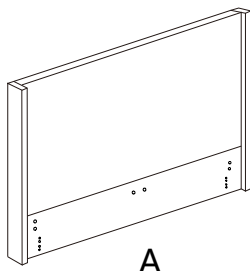

A



B

## HARDWARE PACKED IN BOX#1

1	ALLEN BOLT(1/4"x1")		8 PCS
2	ALLEN BOLT(5/16"x3-1/4")		4 PCS
3	FLAT WASHER(5/16")		12 PCS
4	LOCK WASHER(5/16")		12 PCS
5	ALLEN KEY(1/4")		1 PC
6	ALLEN KEY(5/16")		1 PC

## HARDWARE PACKED IN BOX#2

1	ALLEN BOLT(5/16"x1")		4 PCS
2	ALLEN BOLT(5/16"x2-1/2")		4 PCS
3	ALLEN BOLT(5/16"x3-1/4")		4 PCS
4	FLAT WASHER(5/16")		16 PCS
5	LOCK WASHER(5/16")		12 PCS
6	WRENCH(5/16")		1 PC
7	ALLEN KEY(5/16")		1 PC
8	HEX NUT(5/16"x12)		4 PCS

## BOX#2


- B. FOOTBOARD LEG 2 PCS  
C. SIDE RAIL 2 PCS  
D. FOOTBOARD 1 PC  
E. SLAT 26 PCS  
F. CENTER SLAT SUPPORT 1 PC  
G. SIDE RAIL SLAT CLIP 26 PCS  
H. CENTER SUPPORT SLAT CLIP 13 PCS  
I. SLAT SUPPORT LEG 2 PCS  
HARDWARE SET



B




C

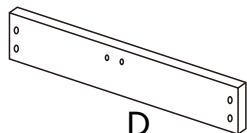


D




E

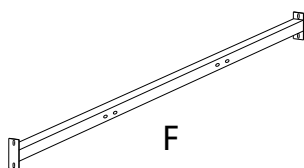


F




G





H



I

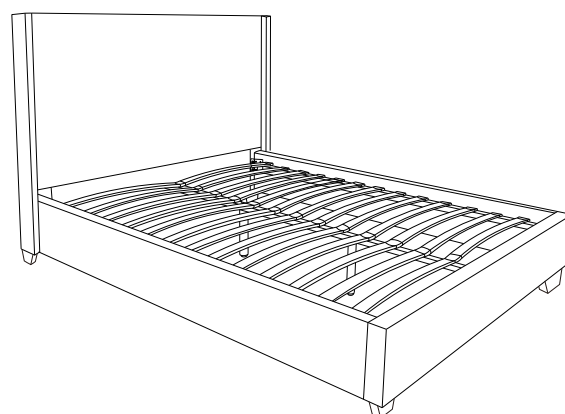


UPDATED:AUGUST 14TH, 2021

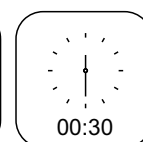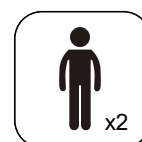


# PALERMO/VERONA BED FULL/QUEEN ASSEMBLY INSTRUCTIONS




## STEP 1

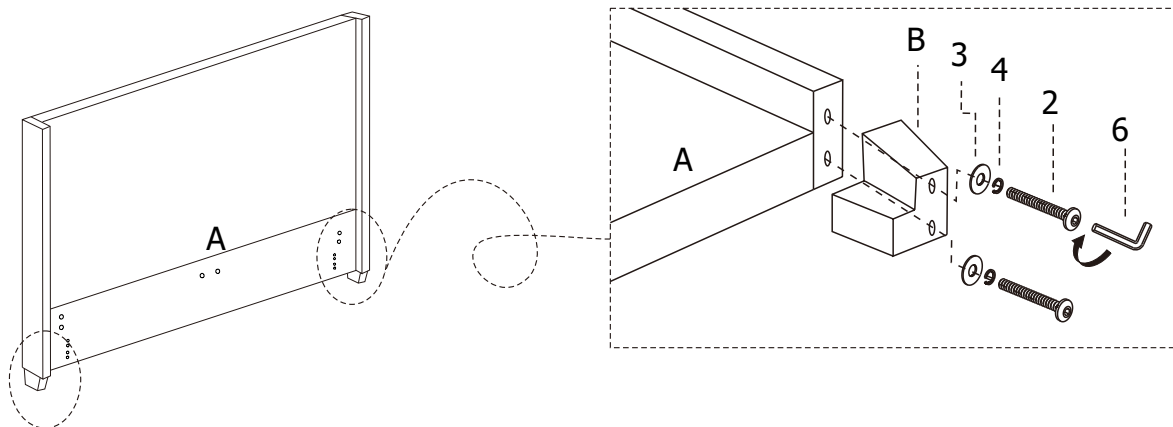

## STEP 2

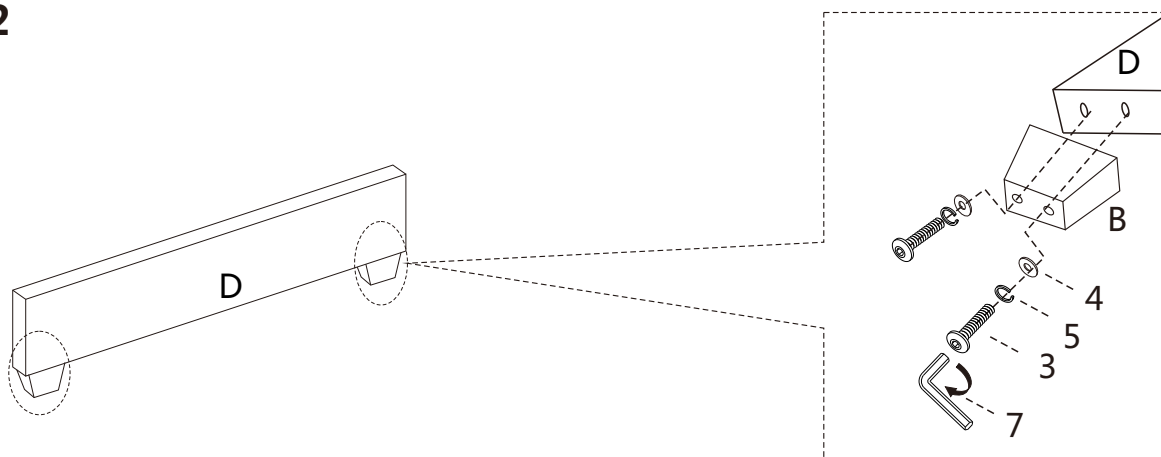

## STEP 3

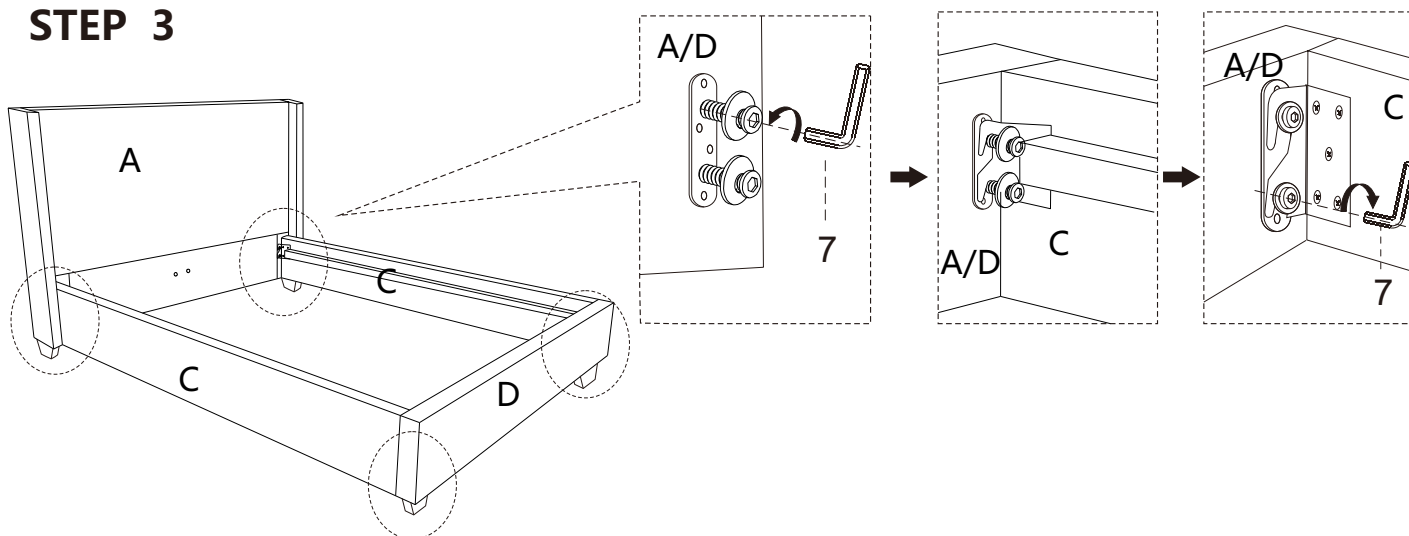


### STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4, 5, 6, & 7 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


# PALERMO/VERONA BED FULL/QUEEN ASSEMBLY INSTRUCTIONS




## STEP 4

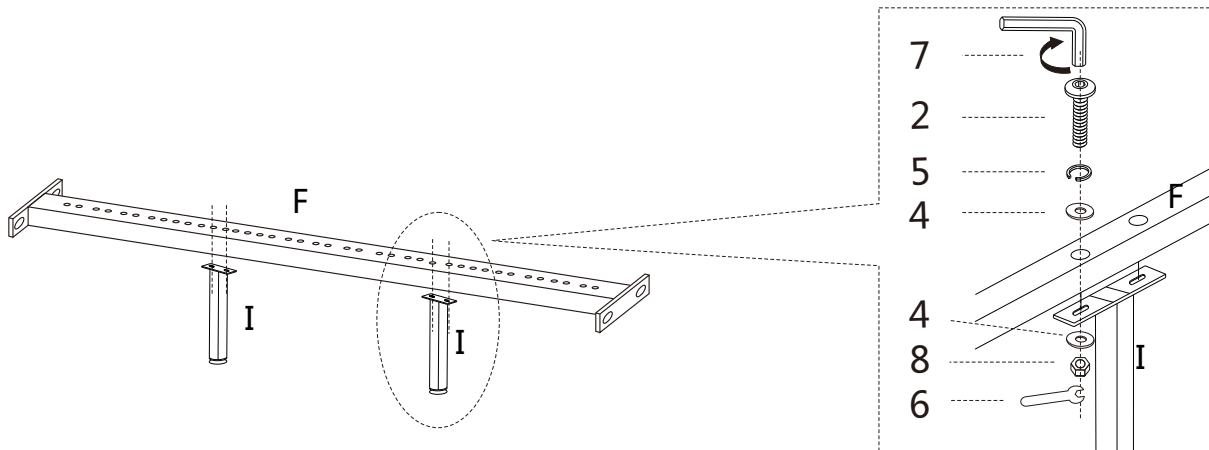

## STEP 5

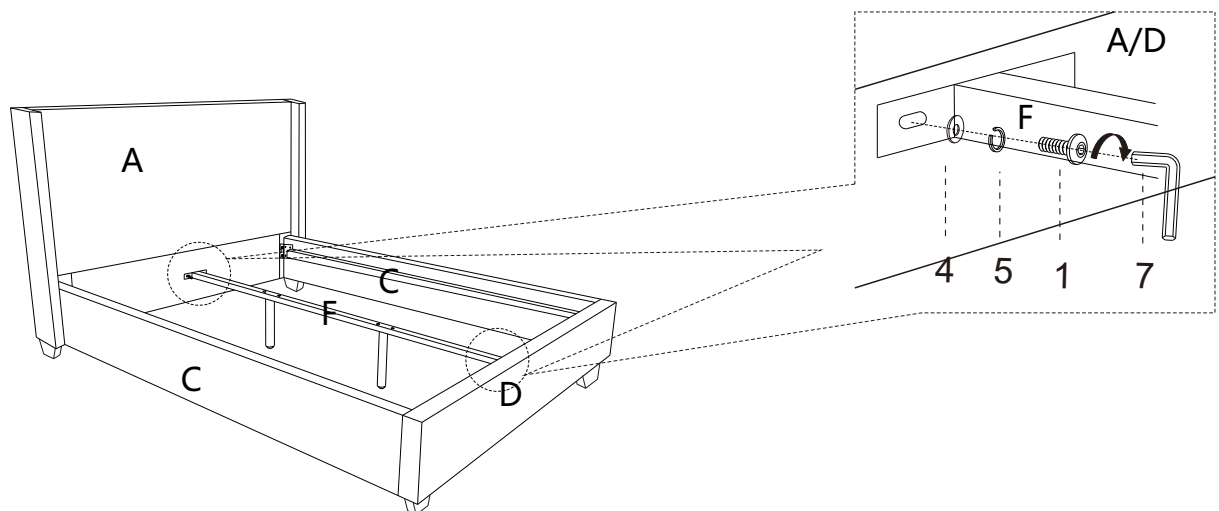




## STEP 6

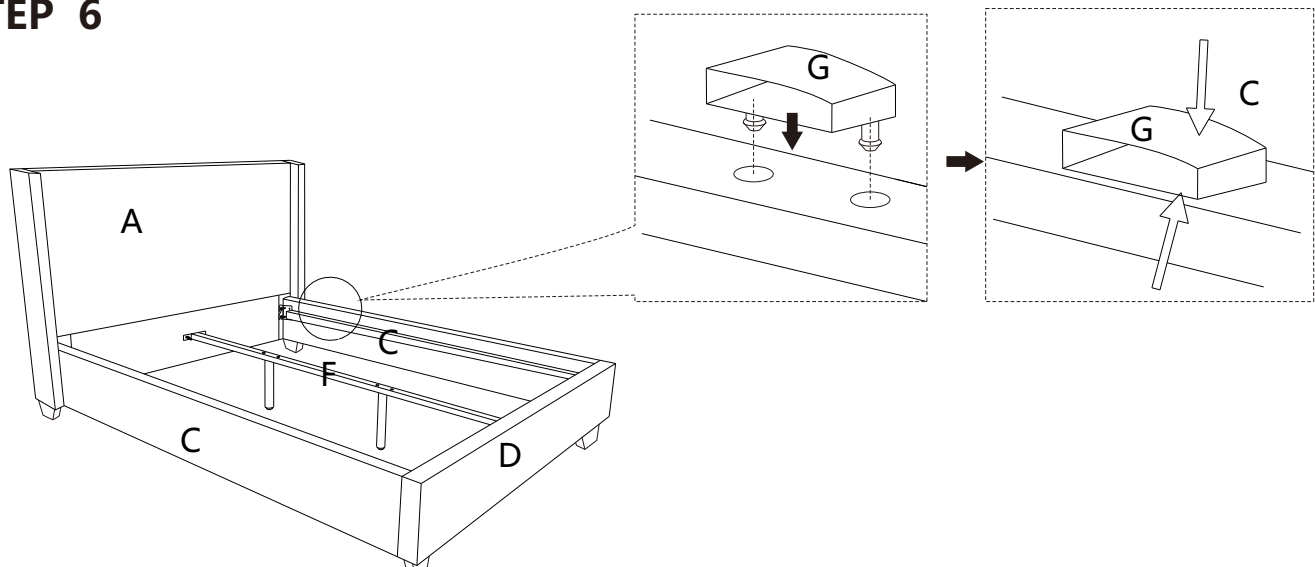

# PALERMO/VERONA BED FULL/QUEEN ASSEMBLY INSTRUCTIONS



## STEP 7

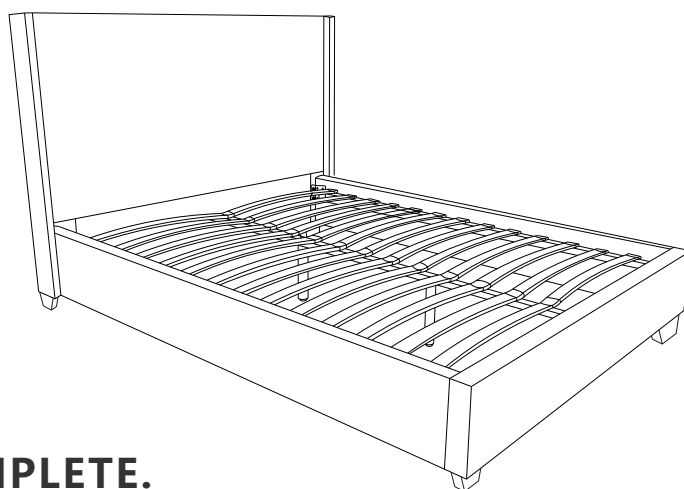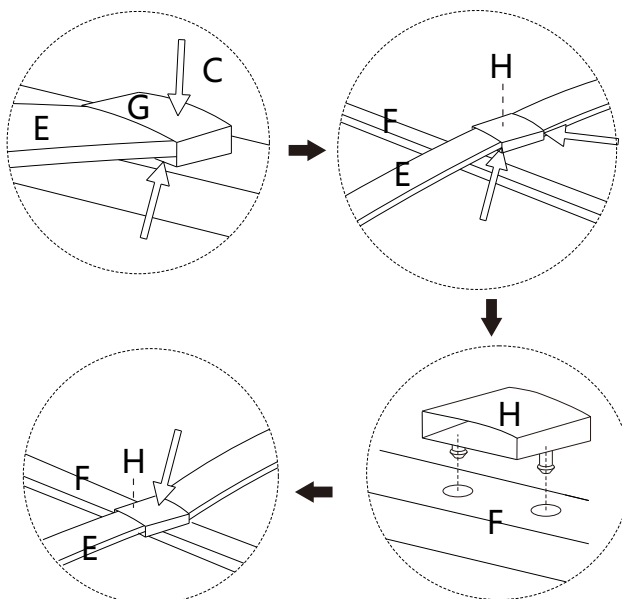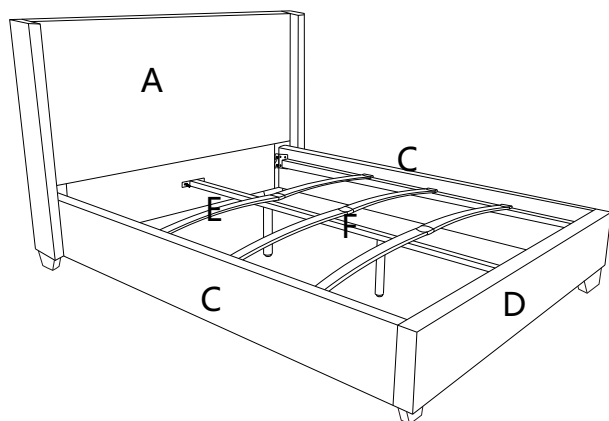


**ASSEMBLY COMPLETE.**

### INSTRUCTIONS FOR ADJUSTING LEVELERS:

POSITION THE BED IN YOUR ROOM.  
LOCATE LEVELERS UNDER EACH  
SUPPORT LEG ( I ).

TURN COUNTER-CLOCKWISE TO  
EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH LEG  
SUPPORT IS APPLYING EQUAL UPWARD  
PRESSURE ON THE CENTER SLAT.

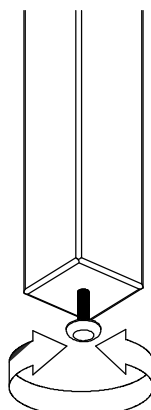

UPDATED:AUGUST 14TH, 2021

### MAINTENANCE INSTRUCTIONS:

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.

# PALERMO/VERONA BED FULL/QUEEN ASSEMBLY INSTRUCTIONS



## APPENDIX A:ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

### **WARNING!**

SIDE RAIL CLEATS ARE HELD IN PLACE USING PHILLIPS HEAD SCREWS. ONCE THEY ARE REMOVED THE USER WILL NOT BE ABLE TO SAFELY RE-INSTALL THE SIDE RAIL CLEATS FOR FUTURE USE WITH A STANDARD BOX SPRING OR FOUNDATION.

### **THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:**

E. SLAT	26 PCS
F. CENTER SLAT SUPPORT	1 PC
G. SIDE RAIL SLAT CLIP	26 PCS
H. CENTER SUPPORT SLAT CLIP	13 PCS
I. SLAT SUPPORT LEG	2 PCS

### **STEP 1 :**

USE A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) TO UNSCREW THE PHILLIPS SCREWS AND REMOVE THE PRE-ASSEMBLED SIDE RAIL CLEATS.

