ASSEMBLY INSTRUCTION


KINCAID
SOLID WOOD SINCE 1946

www.kincaidfurniture.com
Phone :828-728-3261.

UPHOLSTERED BED
863-323 ROSS QUEEN UPH PANEL BED HB 5/0
863-305 KLINE QUEEN PANEL BED FTBD 5/0
863-R42 BOLT ON BEDRAILS 5/0-6/6

I M P O R T A N T N O T E S :

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched .
- Check to be sure that you have all parts and hardware .
- Remove all wrapping materials, including staples and packing straps before you start to assemble .
- Do not tighten all screws and bolts until completely assembled .
- Keep all hardware out of the reach of children .

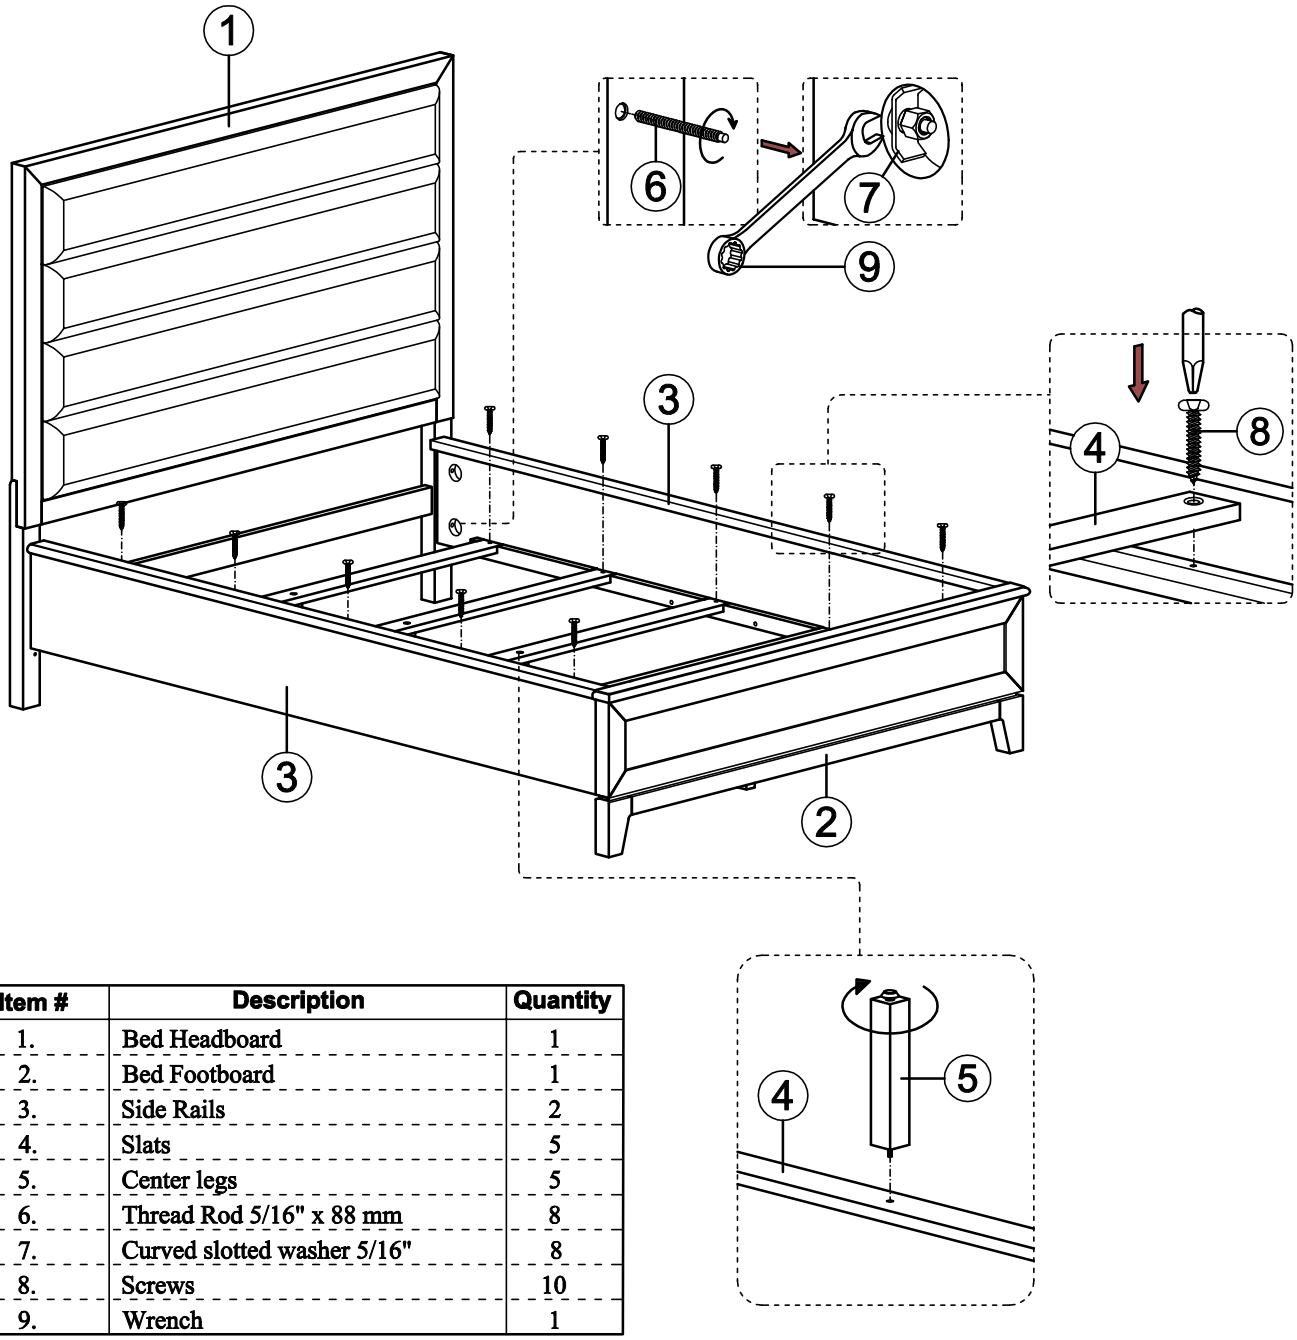

Item #	Description	Quantity
1.	Bed Headboard	1
2.	Bed Footboard	1
3.	Side Rails	2
4.	Slats	5
5.	Center legs	5
6.	Thread Rod 5/16" x 88 mm	8
7.	Curved slotted washer 5/16"	8
8.	Screws	10
9.	Wrench	1

MADE IN VIETNAM