


## FIXING DARTBOARD INSIDE CABINET

1. ATTACH BRACKET TO CENTRE OF CABINET BACKBOARD WITH THE 2 NUTS AND BOLTS (FIG.1)

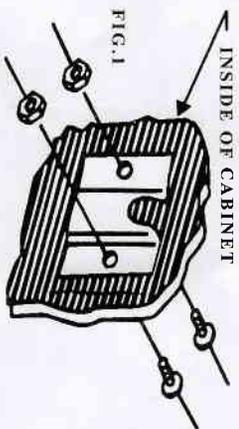

3/4" - 20mm SCREW

CUSHIONS

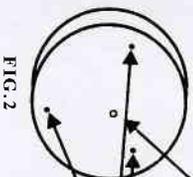


FIG.2

2. ATTACH 3/4" 20 mm WOOD SCREW TO THE BACK OF THE BRISTLE DARTBOARD IN THE CENTRE. ALLOW THE HEAD OF THE SCREW TO STICK OUT APPROX. 3/8" - 10mm (FIG.2).

FRONT OF BRISTLE DARTBOARD

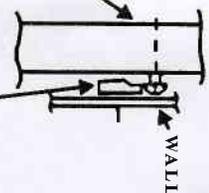


FIG.3.

3. ATTACH 3 CUSHIONS SPACED ON THE BACK AS SHOWN. (FIG.2) AS SHOWN

4. HANG DARTBOARD ON BRACKET BY INSERTING SCREW HEAD IN BRACKET AND LOWERING THE DARTBOARD UNTIL SECURED IN PLACE (FIG.3). ADJUST TO FIT.


5. ATTACH CABINET TO THE MOUNTING SURFACE WITH THE 2 X 1 1/4" - 25mm SCREWS. HANG OFF THE 2 KEY HOLE CORNER BRACKETS. IF MOUNTING TO PLASTER OR CAVITY SURFACE AWL PLUGS OR CAVITY TOGGLES (NOT PROVIDED) WILL NEED TO BE USED.

### PARTS LIST

3 X RUBBER CUSHIONS  
3 X SMALL NAILS  
1 X 3/4" - 20mm WOOD SCREW

2 X SMALL BOLTS  
2 X SMALL NUTS  
1 X BRACKET  
2 X 1 1/4" - 25mm SCREWS

## MOUNTING CABINET AND PLAYING MEASUREMENTS

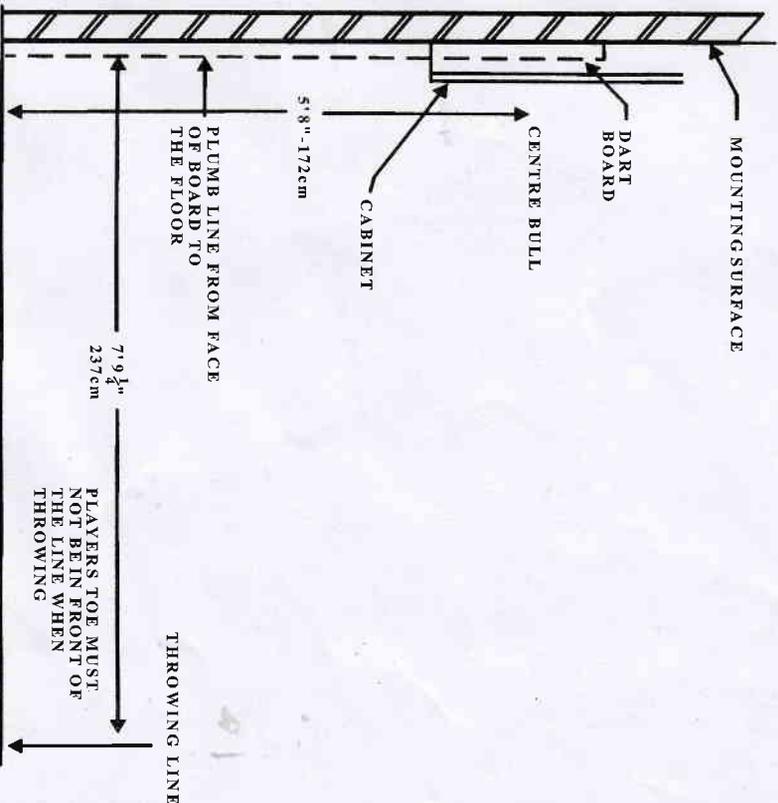

CAUTION: THIS PRODUCT IS HEAVY AND CARE SHOULD BE TAKEN IN MOUNTING THE DARTBOARD IN THE CABINET AND IN ATTACHING THE CABINET TO THE MOUNTING SURFACE