

88 5180 307 Hutch

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home Styles



Hutch Unit Part List

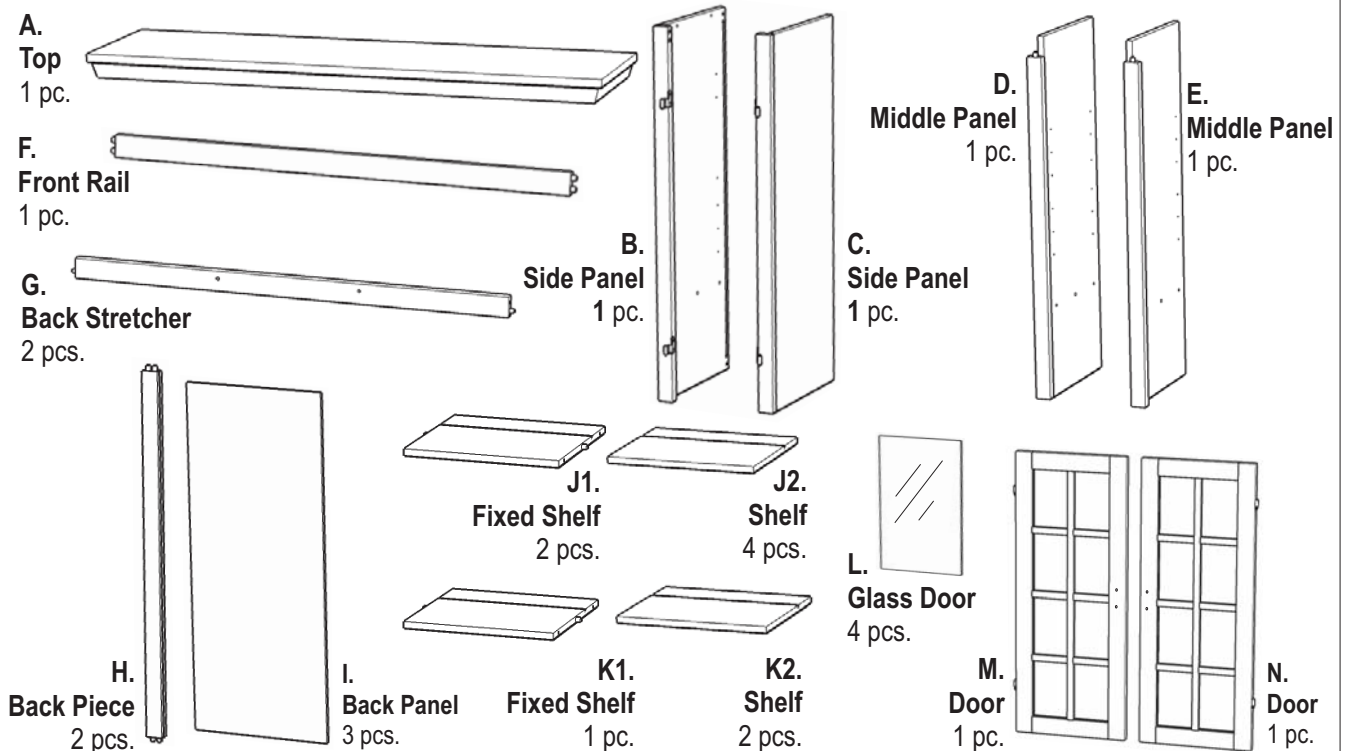

Hardware List

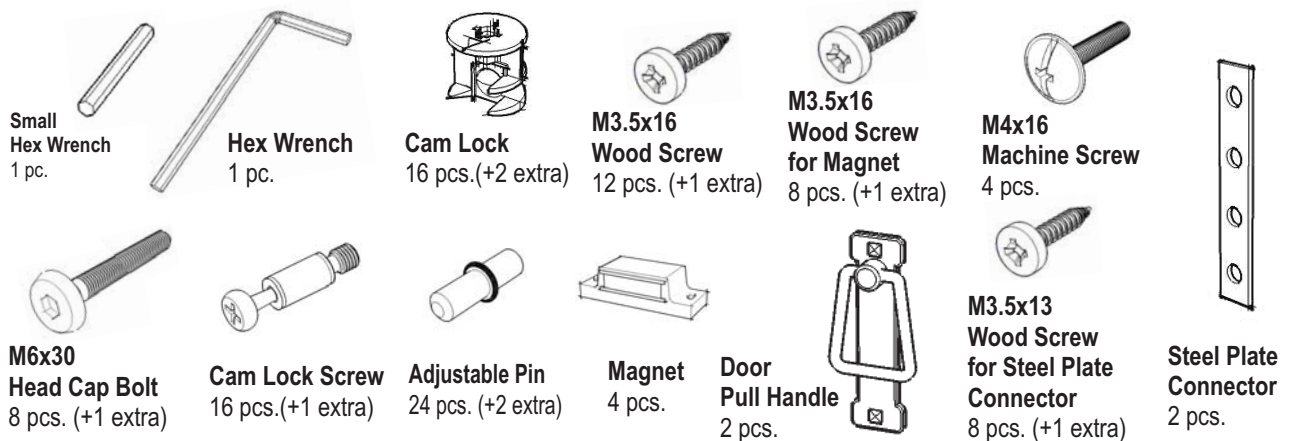

Tools required for assembly : Phillips screwdriver, Drill, 3/8"

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319
servicedesk@homestyles-furniture.com

Assembly Instructions 2/4

IMPORTANT

Do not tighten up all the screws until each part is properly assembled.


You should keep Hex Wrench in the safe place as you may need to tighten up the Head Cap Bolts in the future.

STEP 1

Put Cam Lock Screws into the pre-drilled holes of Side Panel (B),(C), Middle Panel (D),(E) and tighten.

Remove Wood Screw from Door (M) and (N).

Slide Glass (L) into the door frame as shown Tighten Wood Screws .

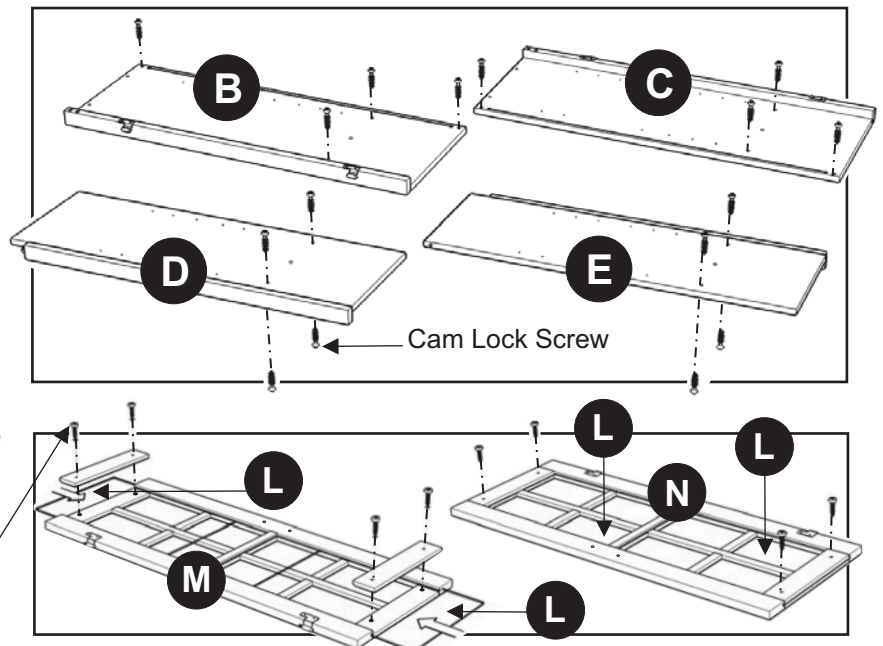


STEP 2

Attach Back Stretcher (G) to Side Panel (B) with Cam Lock.

Attach Back Piece (H) to Back Stretcher (G) and slide Back Panel (I) into place.


Attach second Back Stretcher (G) to the unit with Cam Locks.

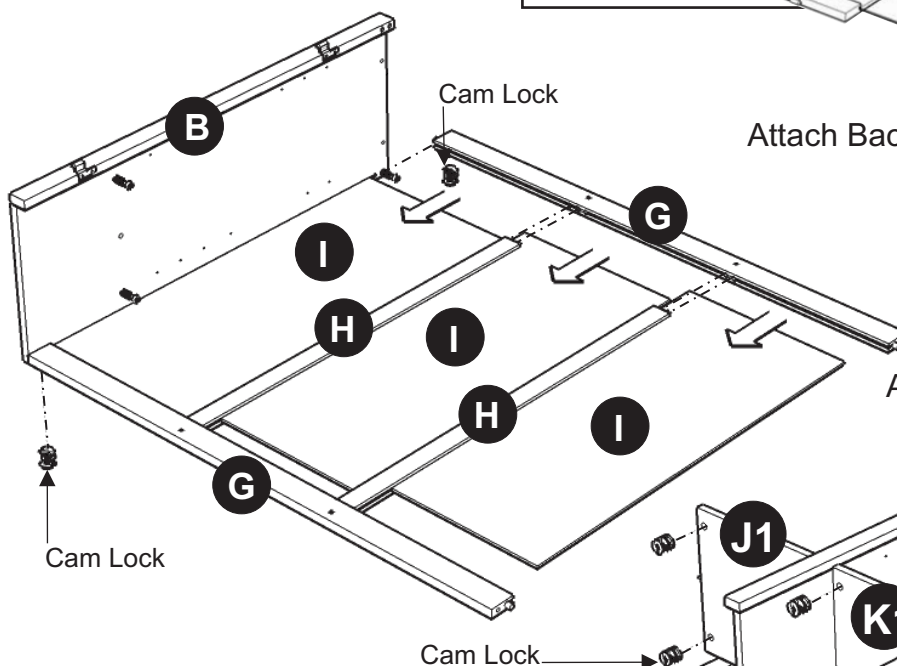

STEP 3

Assemble Fixed Shelf (J1),(K1) Middle Panel (D) and (E) using Cam Locks.


Attach assembled part to the unit with Head Cap Bolts and Cam Locks.

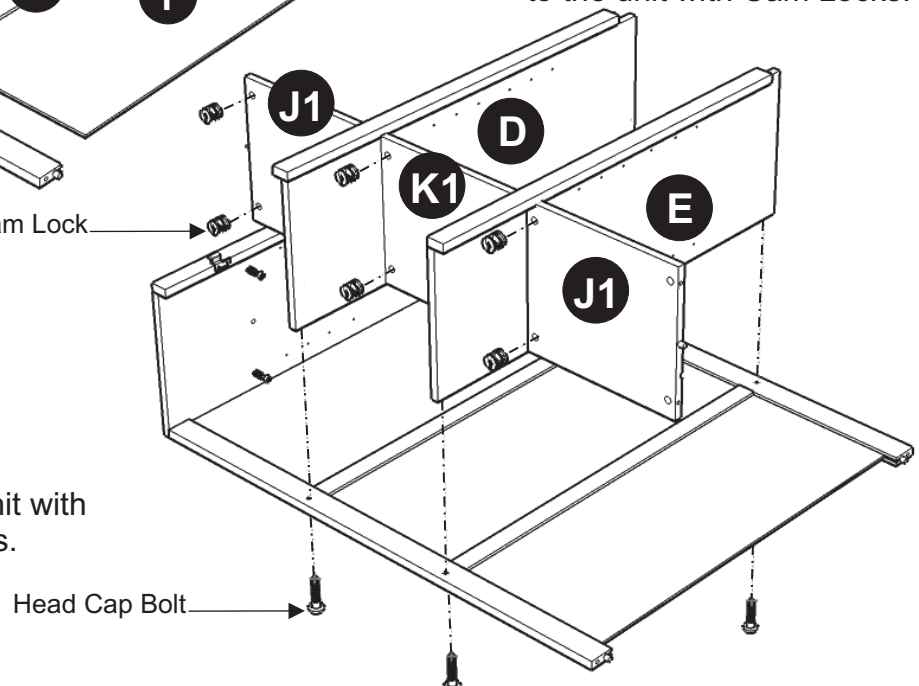

STEP 4

Attach Front Rail (F) to the unit.

Attach Side Panel (C) to the unit with Cam Locks.

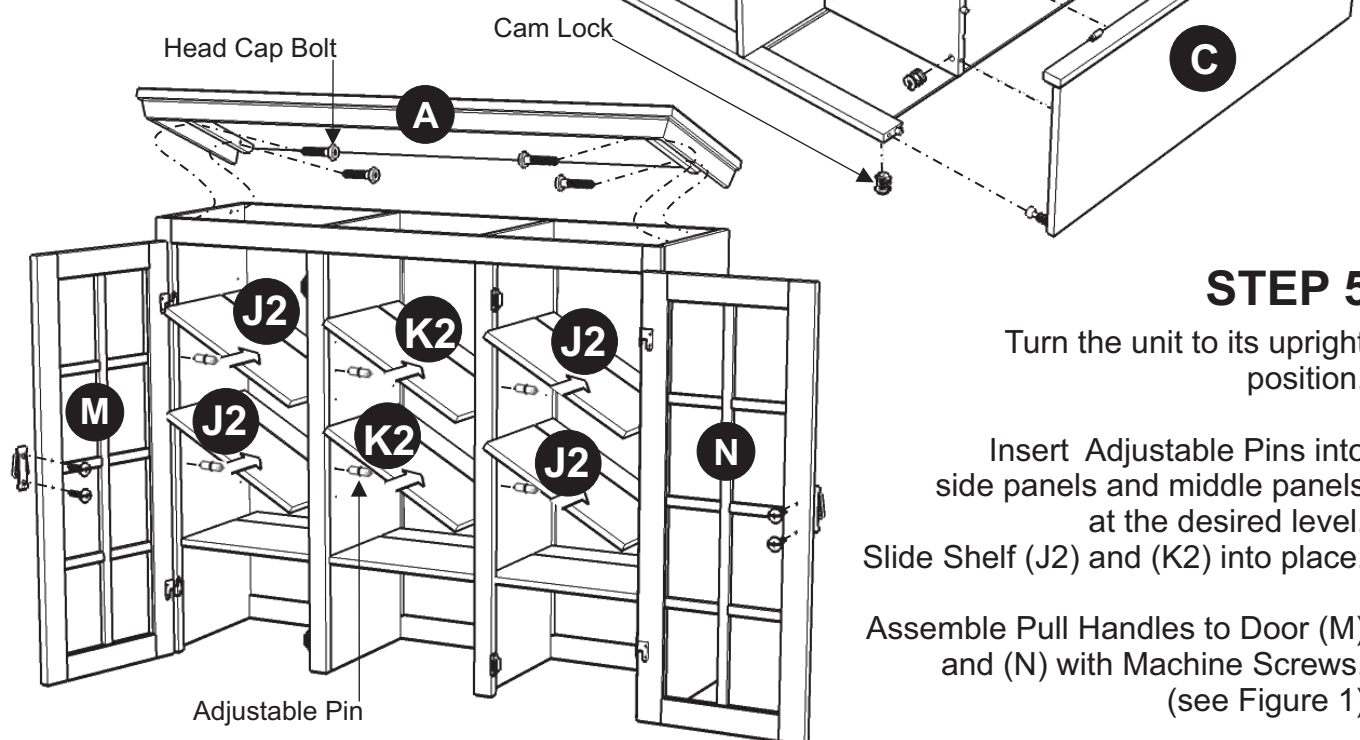


STEP 5

Turn the unit to its upright position.


Insert Adjustable Pins into side panels and middle panels at the desired level. Slide Shelf (J2) and (K2) into place.

Assemble Pull Handles to Door (M) and (N) with Machine Screws. (see Figure 1)

Attach Door (M) and (N) to the side panels by sliding the door lift hinges into the side panel lift hinges. (see Figure 2)

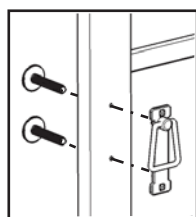

(Figure 1)

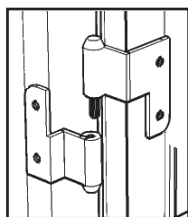


(Figure 2)

Place Top (A) onto the unit with Head Cap Bolts.

Wood Screw

Wood Screw

Steel Plate Connector

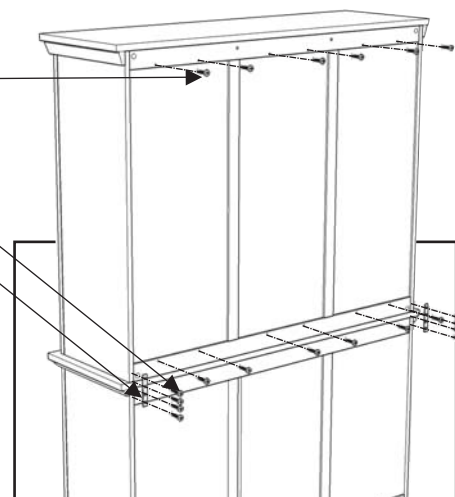


STEP 6

Insert Wood Screws from the back and tighten.

Place the Hutch unit onto the Buffet unit.

Attach Steel Plate Connectors by inserting Wood Screws and tighten. (see Figure 3)

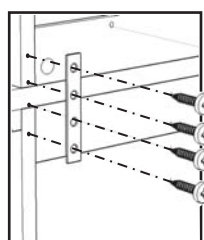

(Figure 3)

Assembly Instructions 4/4

Attention!

To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly!

Place unit at desired location.

Drill a 3/8" hole in wall at the appropriate location.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at pre-drilled hole at top of unit with Wood Screw.

Use Tipover Restraint to secure Bracket on unit to Bracket on wall.
(See Figure X)

Put tie end of Tipover Restraint into loop end of Tipover Restraint and pull until tight.



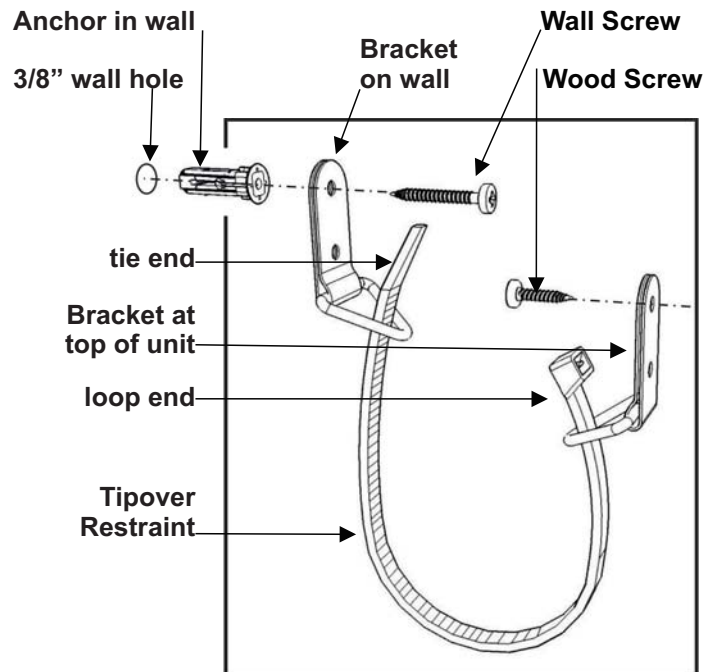



Figure X

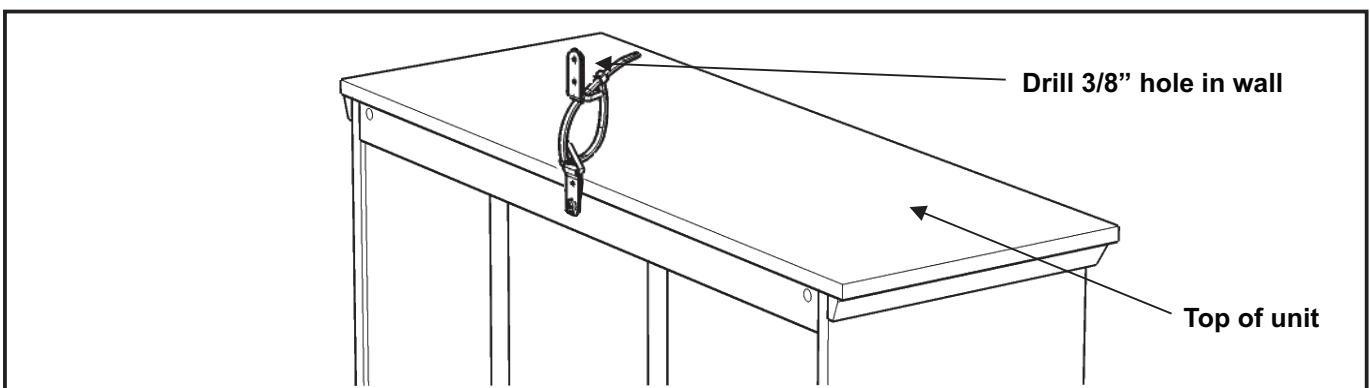


Hardware List

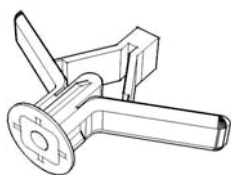


Anchor
1 pc.(+1 extra)

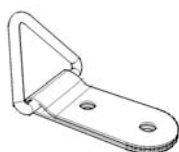


Bracket
2 pcs.(+1 extra)

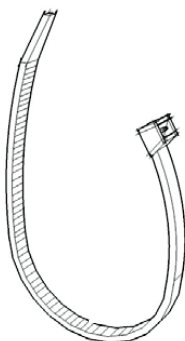

Tipover Restraint
1 pc.(+1 extra)

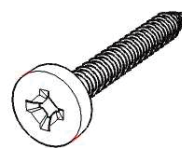

**M3.5x40
Wall Screw**
1 pc.(+1 extra)



**M3.5x13
Wood Screw**
1 pc.(+1 extra)