
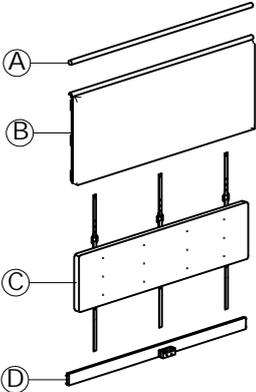

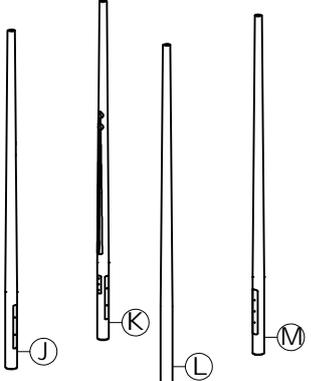


ROCKPORT UPH POSTER QUEEN BED


ASSEMBLY INSTRUCTIONS

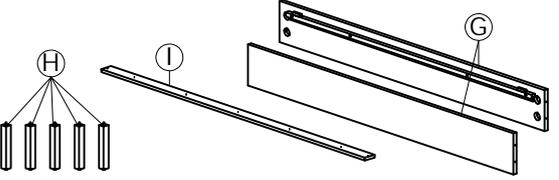

PARTS PACKING CONFIGURATIONS

BOX #1: A. TOP STRETCHER 1 PC B. UPH HEADBOARD PANEL 1 PC C. UPH HEADBOARD CUSHION 1 PC D. BOTTOM STRETCHER 1 PC 	BOX #2: E. FOOTBOARD 1 PC F. SLAT ROLL 1 SET 	BOX #4: J. HEADBOARD LEFT POST 1 PC K. HEADBOARD RIGHT POST 1 PC L. FOOTBOARD LEFT POST 1 PC M. FOOTBOARD RIGHT POST 1 PC 
BOX #3: G. SIDE RAILS 2 PCS H. SLAT SUPPORT LEG 5 PCS I. CENTER SLAT SUPPORT 1 PC 		

FULLY ASSEMBLED

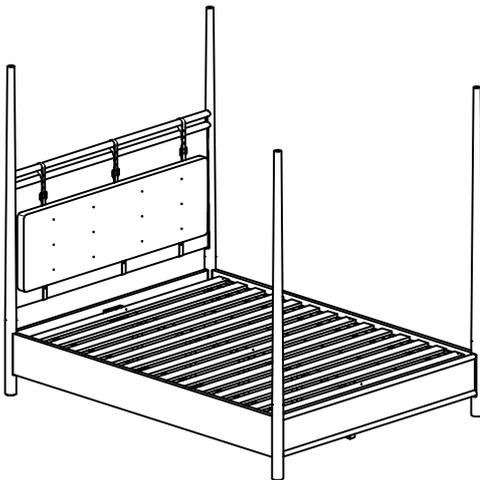


HARDWARE KIT PACKED IN BOX #2


No.	Description	Image	Quantity
1	THREADED BOLT (8x90mm)		20 PCS
2	HALF MOON WASHER (7x14x27mm)		20 PCS
3	HEX NUT (M8)		20 PCS
4	WOOD SCREW (4x30mm)		11 PCS
5	WRENCH (13mm)		1 PC
6	WOOD SCREW (4x50mm)		2 PCS
7	ALLEN KEY (4mm)		1 PC



STEP 1:

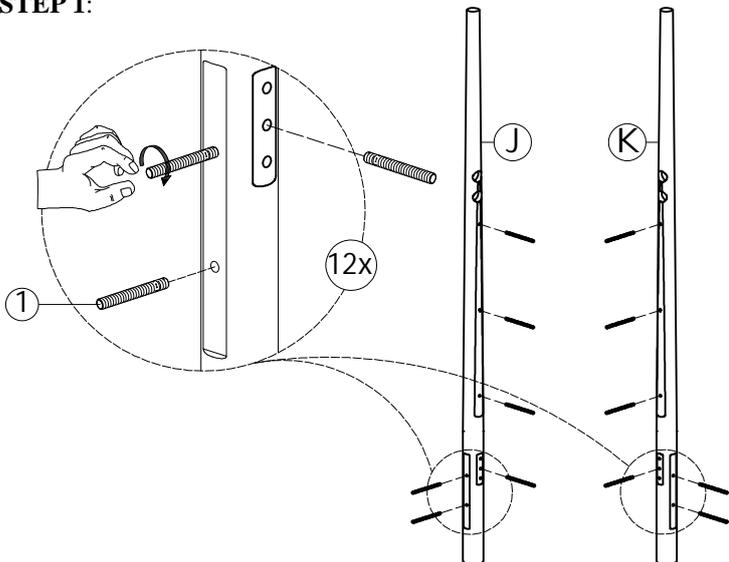

STEP 2:

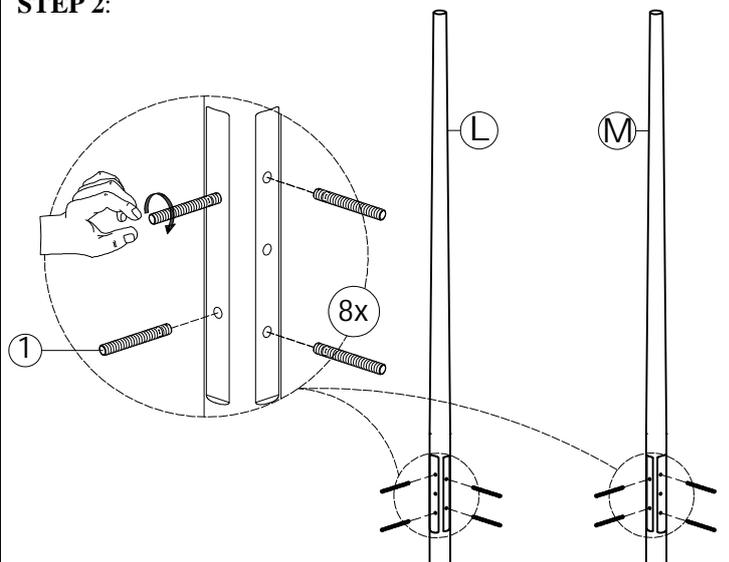


ROCKPORT UPH POSTER QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 3:

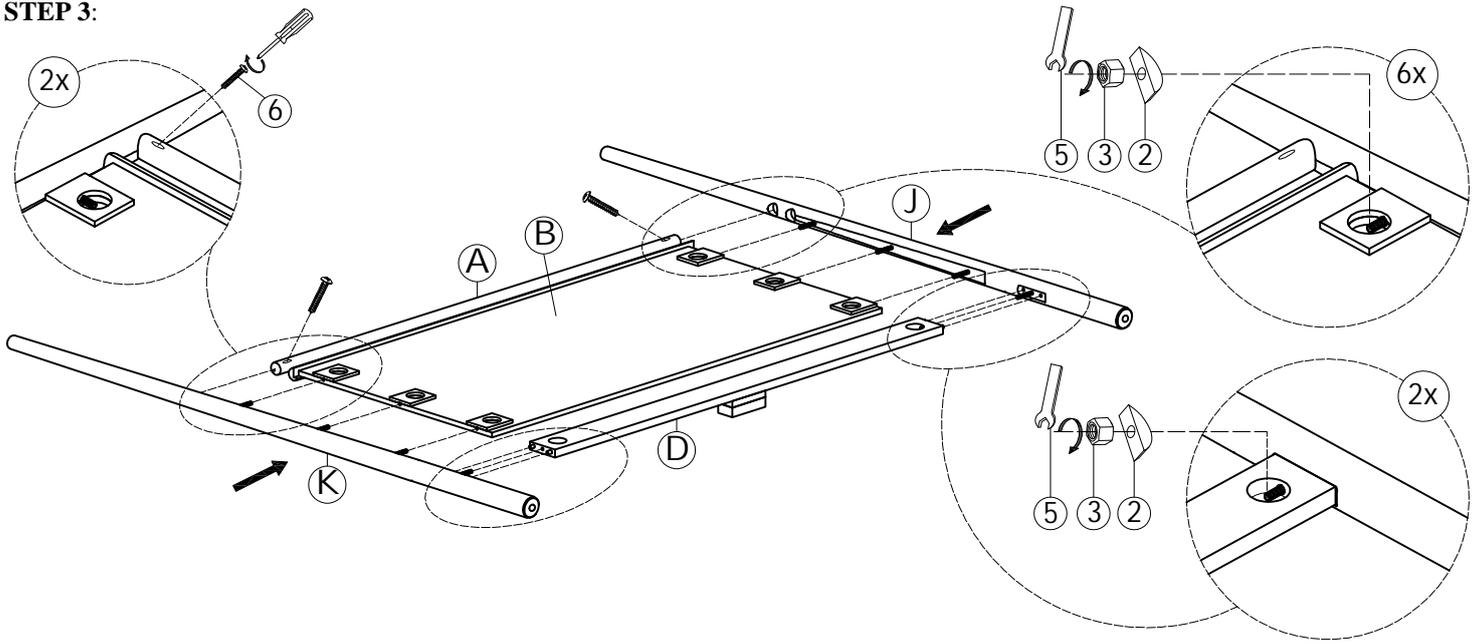


STEP 4:

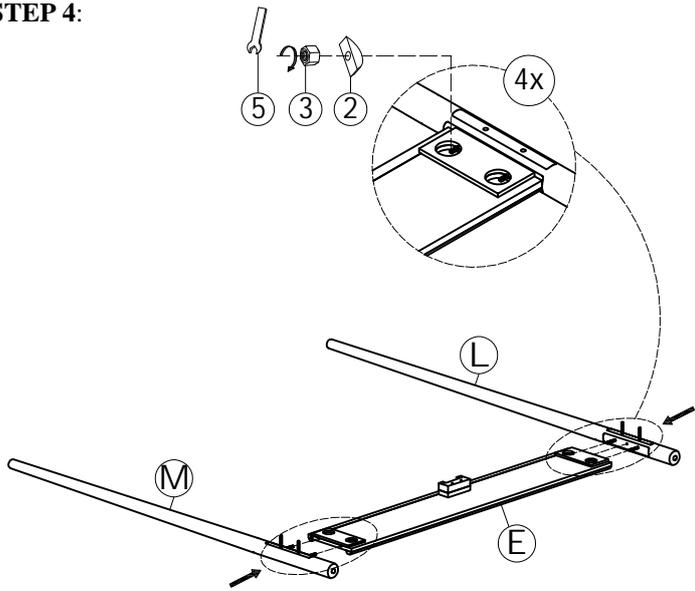

STEP 5:

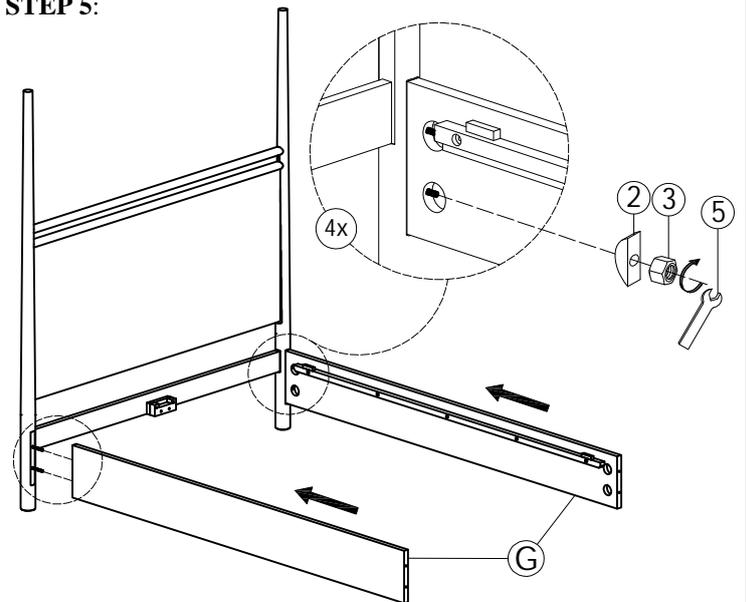

STEP 6:

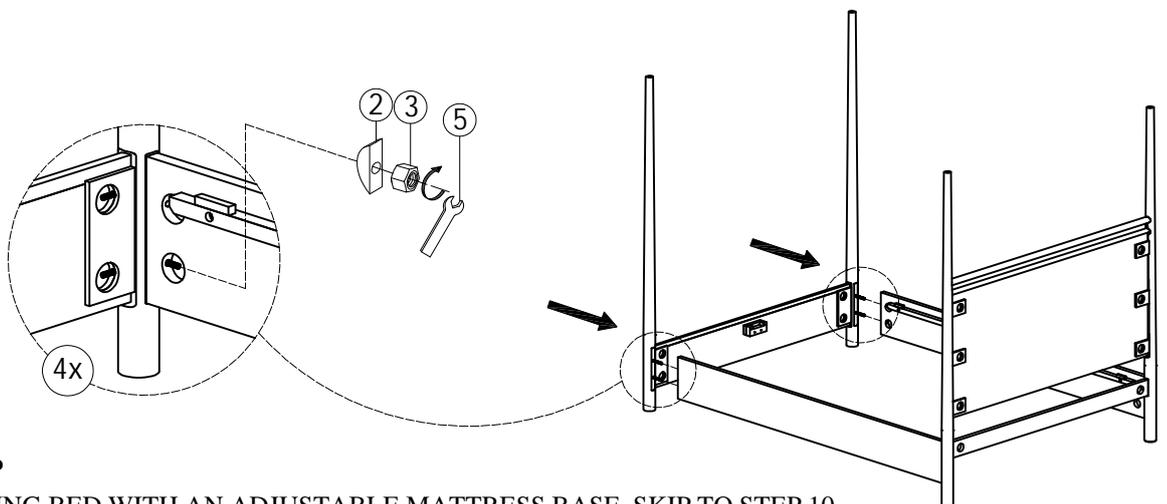

STOP


- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP TO STEP 10 AND THEN APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 7

ROCKPORT UPH POSTER QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 7:

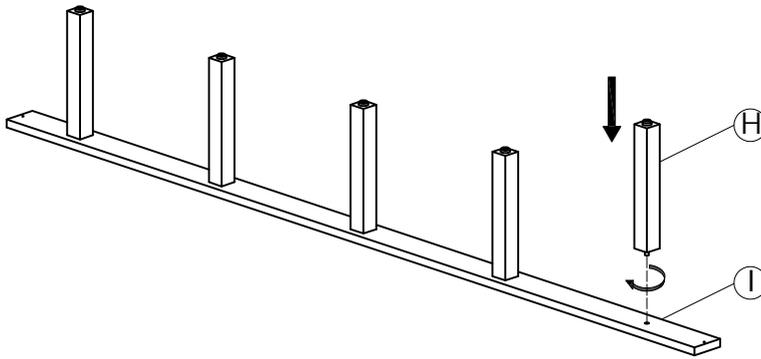


STEP 8:

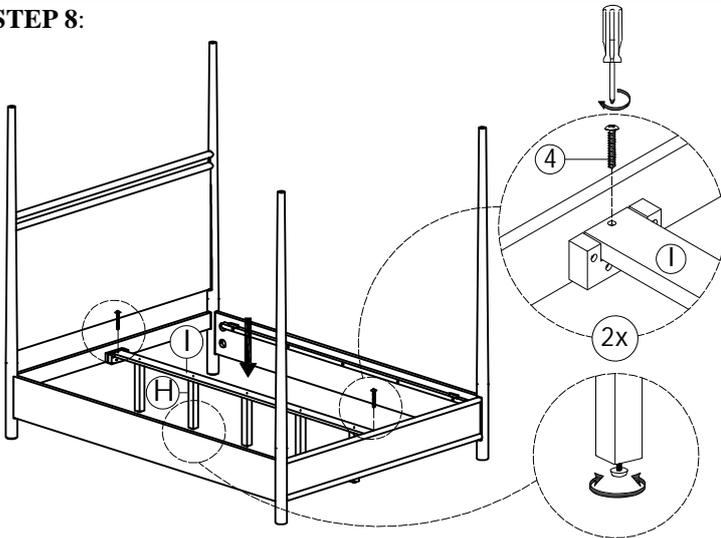


STEP 9:

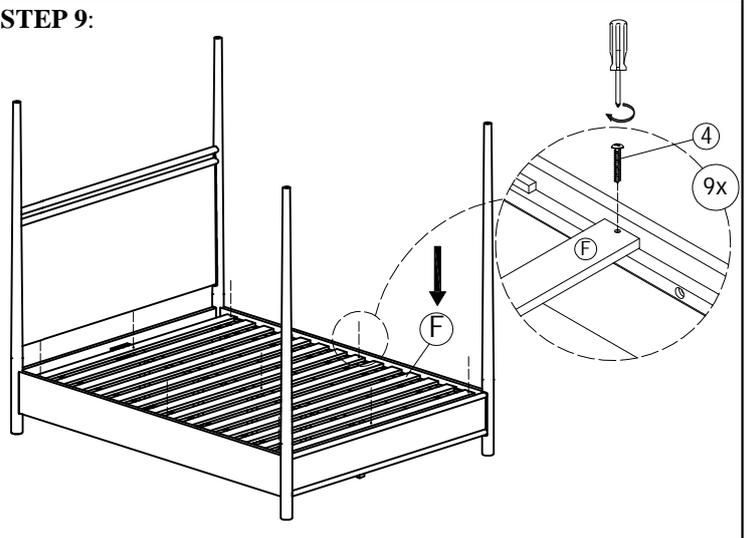

STEP 10:

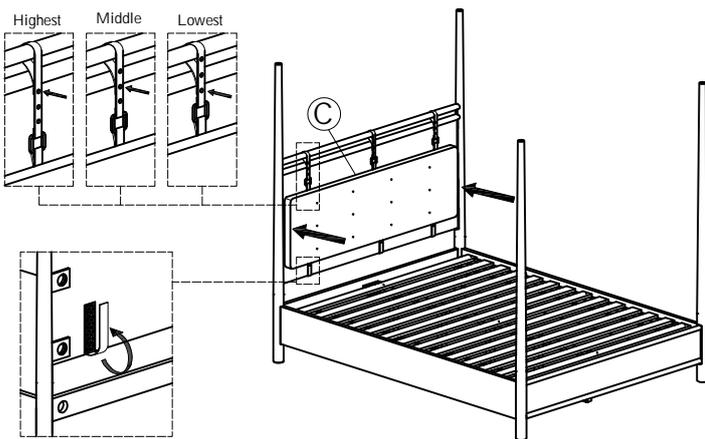

STEP 11:

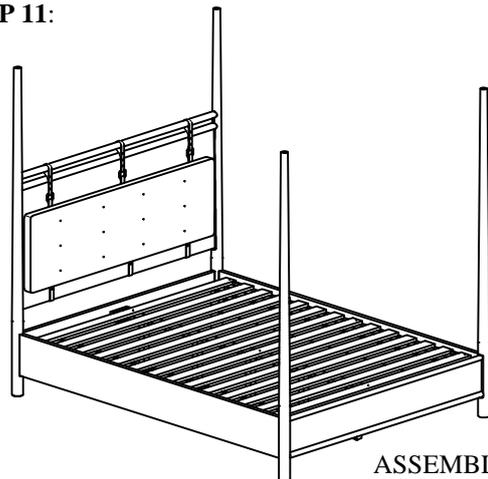


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

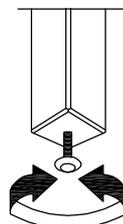

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ROCKPORT UPH POSTER QUEEN BED

ASSEMBLY INSTRUCTIONS

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL	:1 SET	4. WOOD SCREW (4x30mm)	:11 PCS
H. SLAT SUPPORT LEG	:5 PCS		
I. CENTER SLAT SUPPORT	:1 PC		

STEP 1:

USE ALLEN KEY (7) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

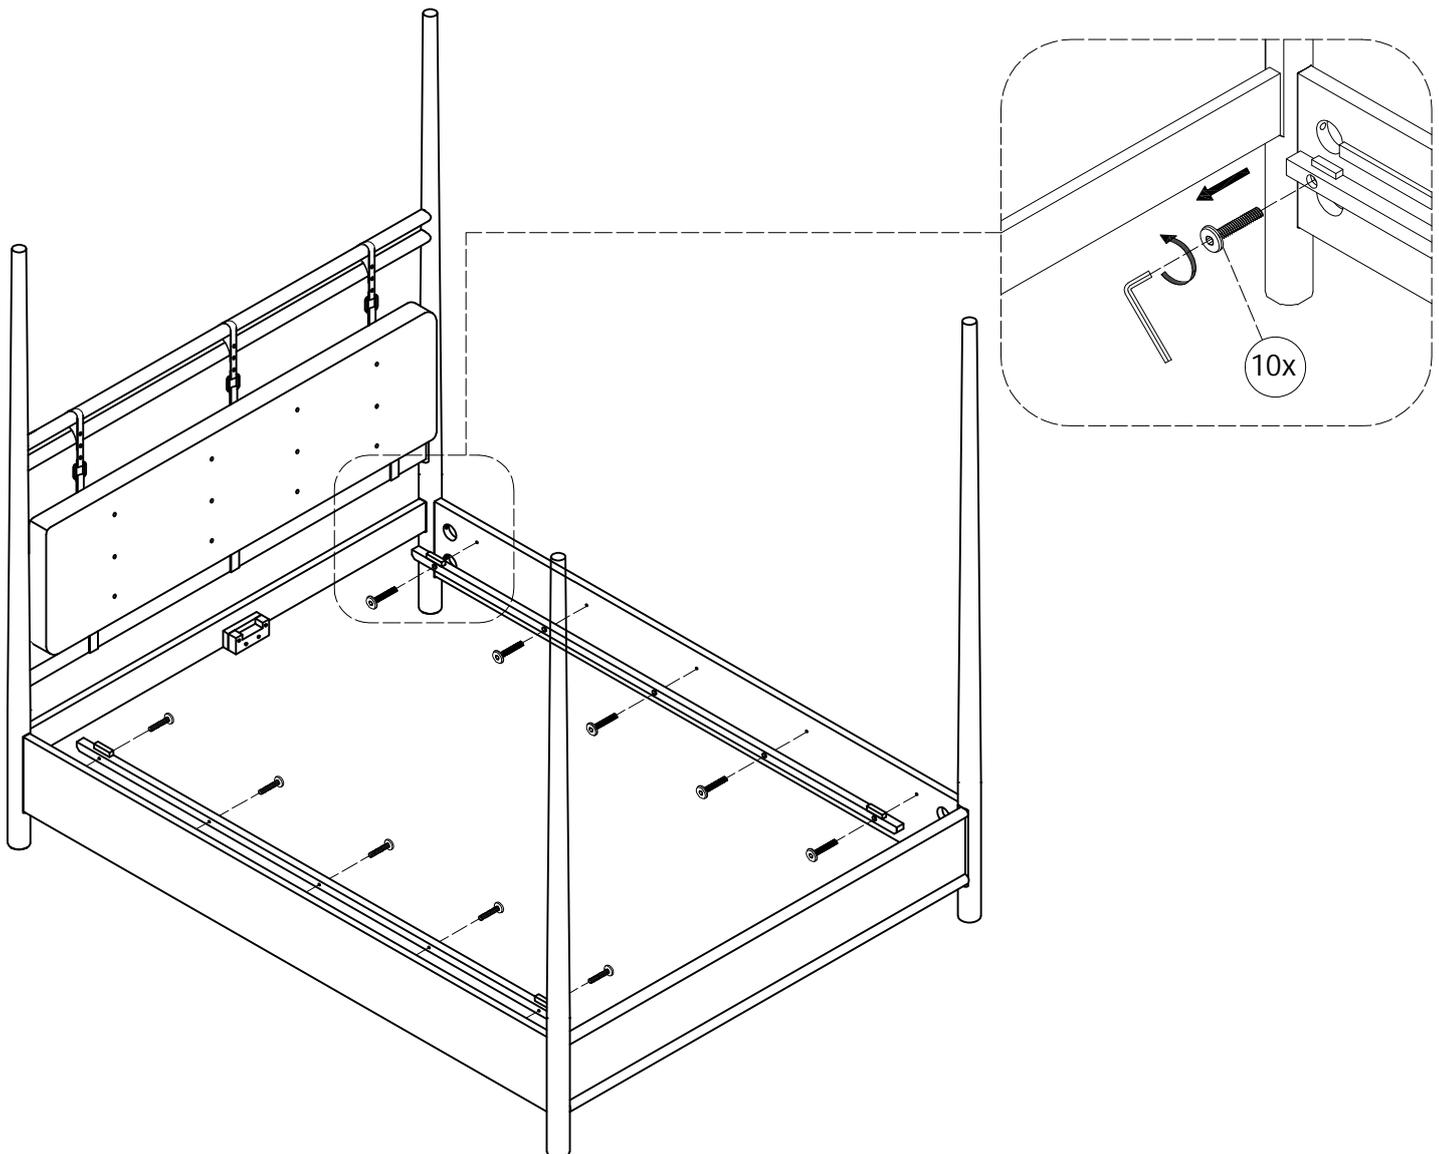

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

ROCKPORT UPH POSTER C. KING BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS


BOX #1:	BOX #2:	BOX #4:
A. TOP STRETCHER 1 PC B. UPH HEADBOARD PANEL 1 PC C. UPH HEADBOARD CUSHION 1 PC D. BOTTOM STRETCHER 1 PC	E. FOOTBOARD 1 PC F. SLAT ROLL 1 SET	J. HEADBOARD LEFT POST 1 PC K. HEADBOARD RIGHT POST 1 PC L. FOOTBOARD LEFT POST 1 PC M. FOOTBOARD RIGHT POST 1 PC
	G. SIDE RAILS 2 PCS H. SLAT SUPPORT LEG 10 PCS I. CENTER SLAT SUPPORT 2 PCS N. MATTRESS SPACER 2 PCS	

FULLY ASSEMBLED

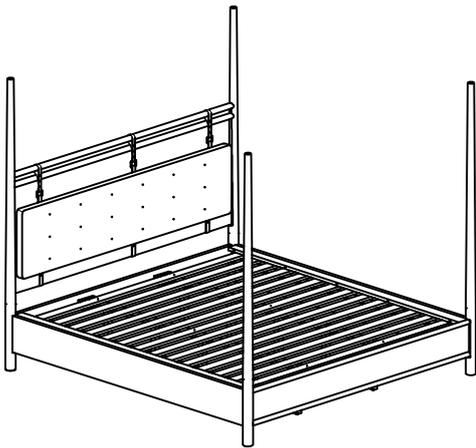


HARDWARE KIT PACKED IN BOX #2


No.	Description	Image	Quantity
1	THREADED BOLT (8x90mm)		20 PCS
2	HALF MOON WASHER (7x14x27mm)		20 PCS
3	HEX NUT (M8)		20 PCS
4	WOOD SCREW (4x30mm)		16 PCS
5	WRENCH (13mm)		1 PC
6	ALLEN KEY (4mm)		1 PC
7	ALLEN BOLT (6x60mm)		10 PCS
8	SPRING WASHER (M6)		10 PCS
9	FLAT WASHER (M6)		10 PCS
10	WOOD SCREW (4x50mm)		2 PCS



STEP 1:

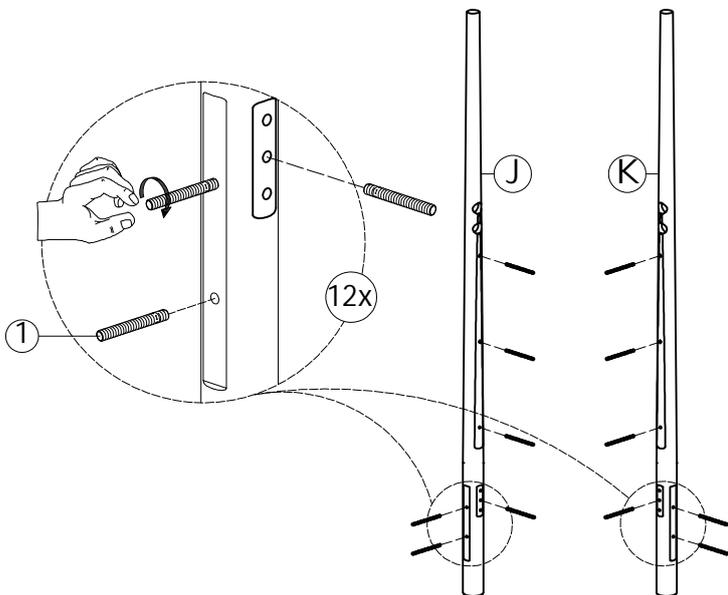

STEP 2:

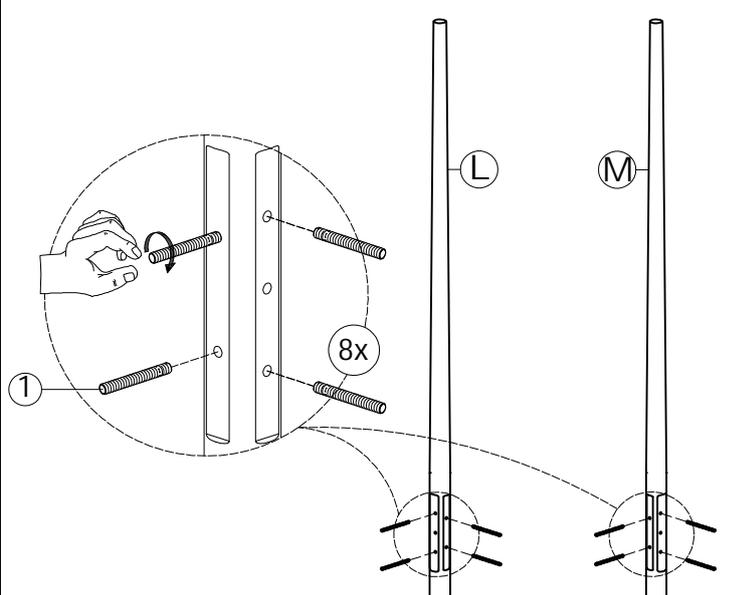


ROCKPORT UPH POSTER C. KING BED


ASSEMBLY INSTRUCTIONS




STEP 3:

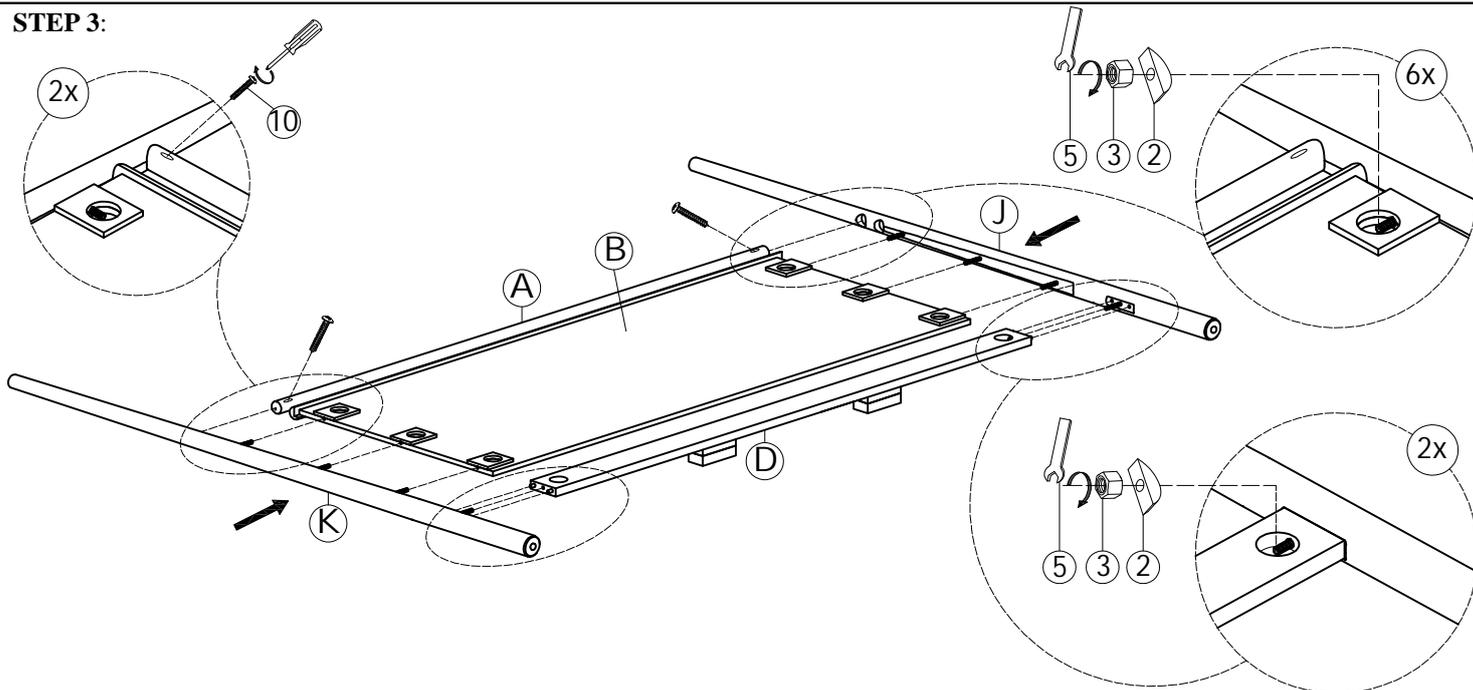


STEP 4:

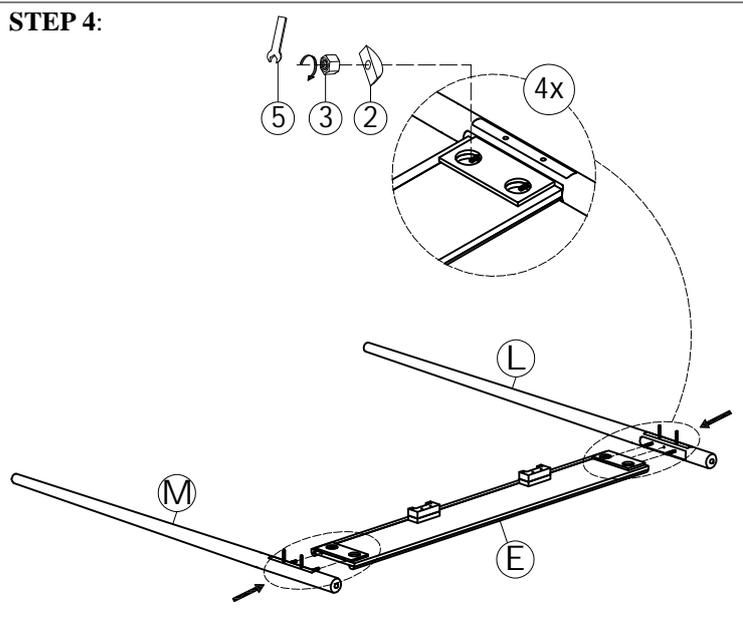

STEP 5:

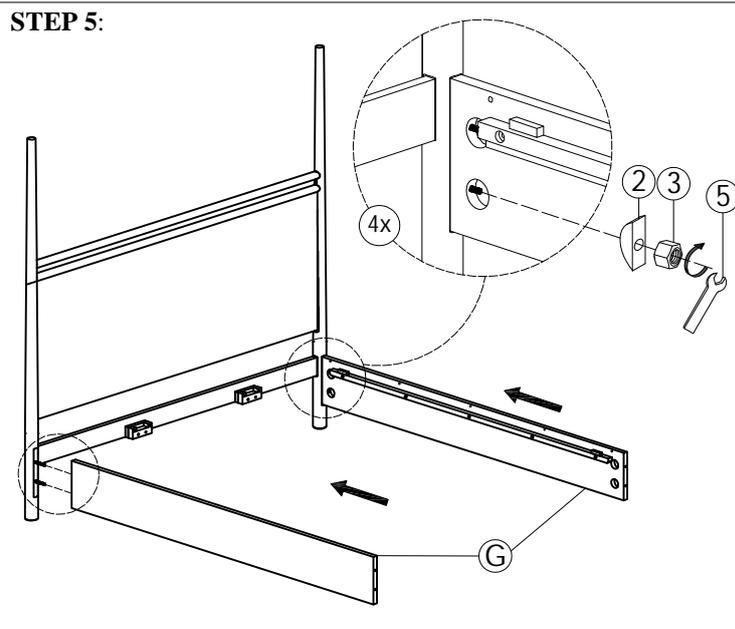

STEP 6:

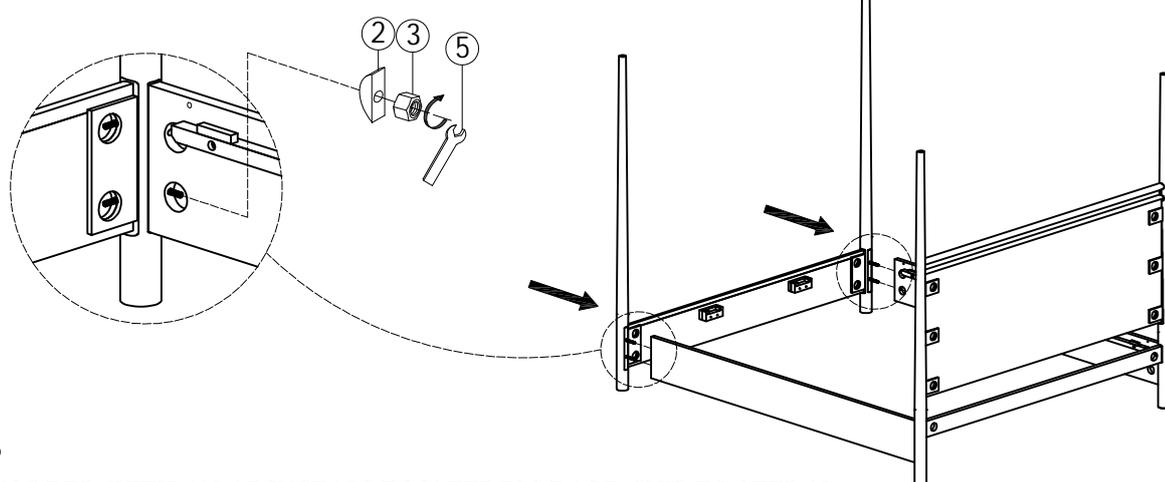

STOP


- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP TO STEP 10 AND THEN APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 7

ROCKPORT UPH POSTER C. KING BED


ASSEMBLY INSTRUCTIONS




STEP 7:

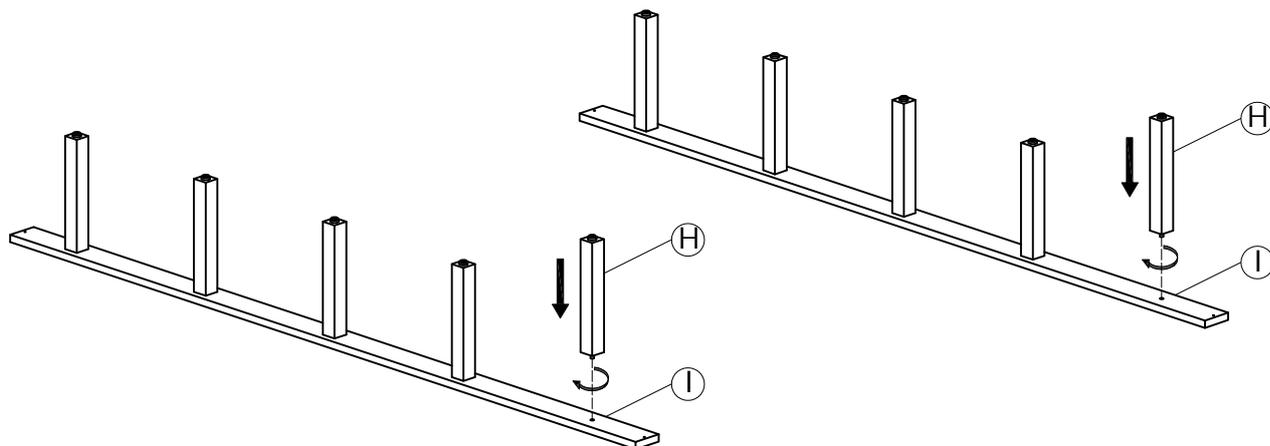


STEP 8:

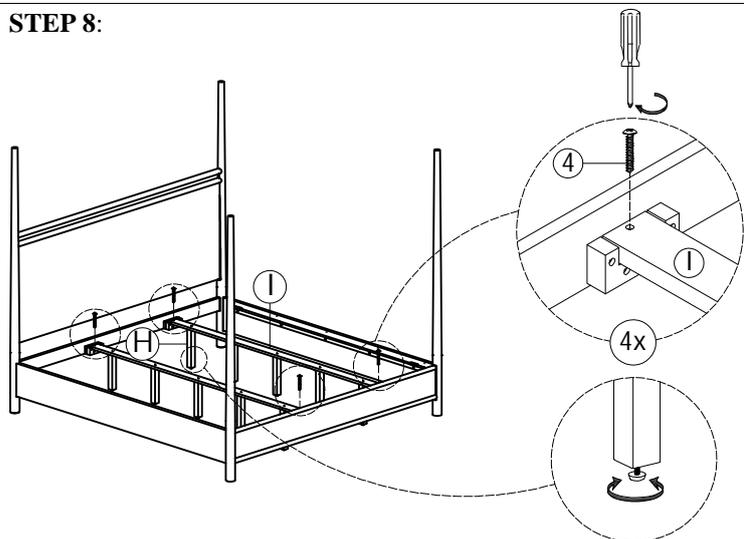


STEP 9:

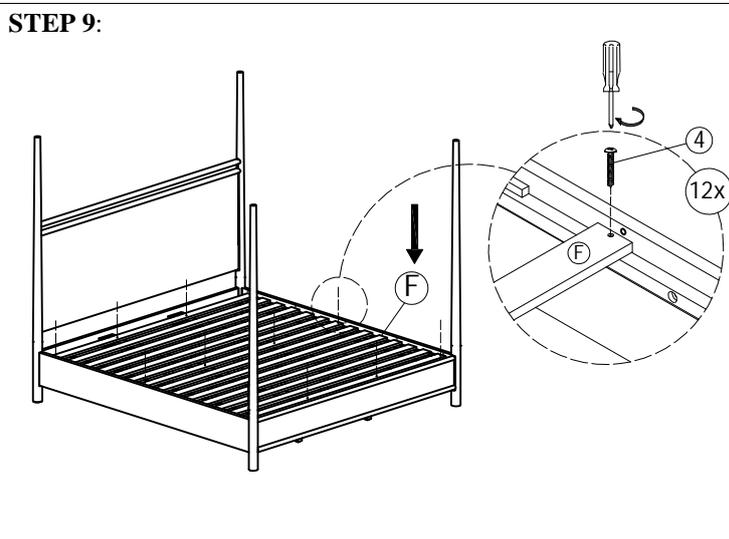

STEP 10:

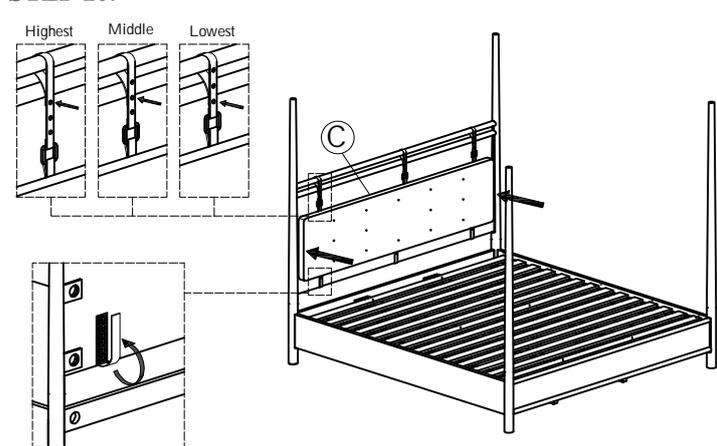

STEP 11:

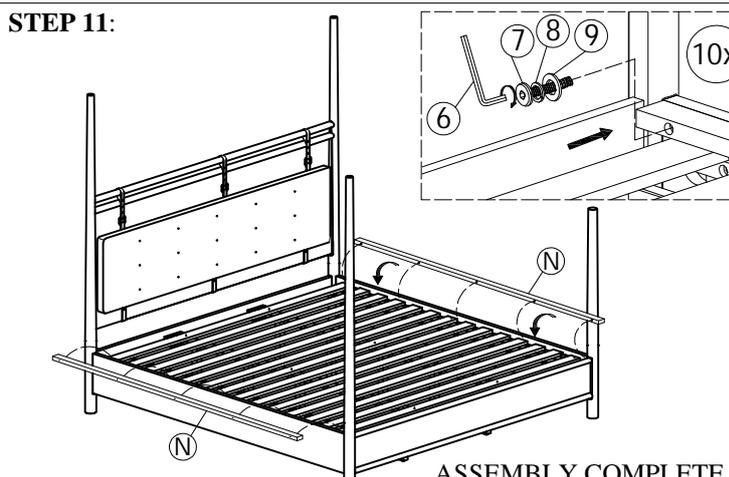


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

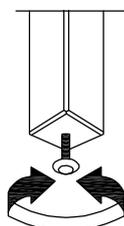

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ROCKPORT UPH POSTER C. KING BED

ASSEMBLY INSTRUCTIONS

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL	:1 SET	4. WOOD SCREW (4x30mm)	:16 PCS
H. SLAT SUPPORT LEG	:10 PCS	7. ALLEN BOLT (6x60mm)	:10 PCS
I. CENTER SLAT SUPPORT	:2 PCS	8. SPRING WASHER (M6)	:10 PCS
N. MATTRESS SPACER	:2 PCS	9. FLAT WASHER (M6)	:10 PCS

STEP 1:

USE ALLEN KEY (6) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

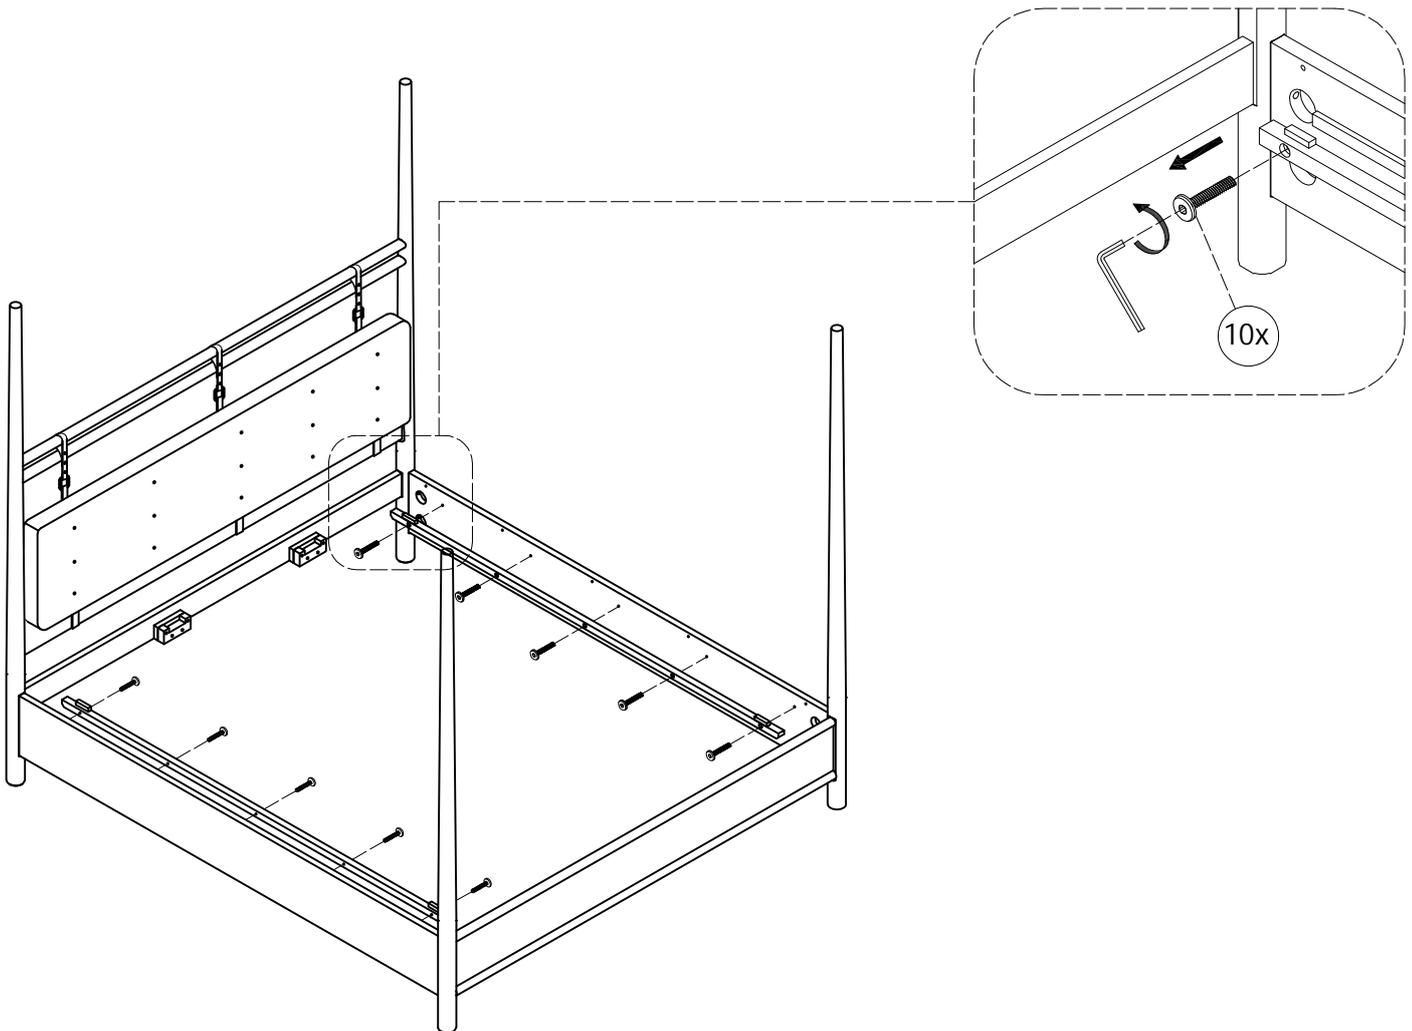

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

ROCKPORT UPH POSTER KING BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS

BOX #1: A. TOP STRETCHER 1 PC B. UPH HEADBOARD PANEL 1 PC C. UPH HEADBOARD CUSHION 1 PC D. BOTTOM STRETCHER 1 PC	BOX #2: E. FOOTBOARD 1 PC F. SLAT ROLL 1 SET	BOX #4: J. HEADBOARD LEFT POST 1 PC K. HEADBOARD RIGHT POST 1 PC L. FOOTBOARD LEFT POST 1 PC M. FOOTBOARD RIGHT POST 1 PC
	BOX #3: G. SIDE RAILS 2 PCS H. SLAT SUPPORT LEG 10 PCS I. CENTER SLAT SUPPORT 2 PCS	

FULLY ASSEMBLED

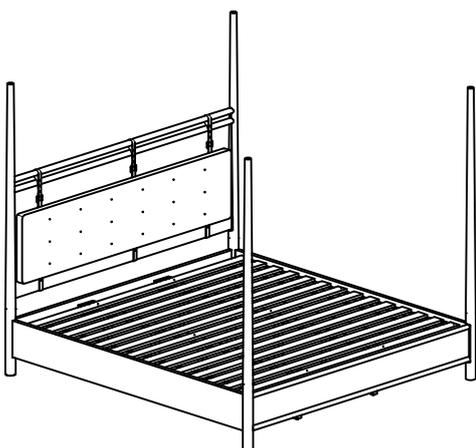


HARDWARE KIT PACKED IN BOX #2


No.	Description	Image	Quantity
1	THREADED BOLT (8x90mm)		20 PCS
2	HALF MOON WASHER (7x14x27mm)		20 PCS
3	HEX NUT (M8)		20 PCS
4	WOOD SCREW (4x30mm)		16 PCS
5	WRENCH (13mm)		1 PC
6	WOOD SCREW (4x50mm)		2 PCS
7	ALLEN KEY (4mm)		1 PC



STEP 1:

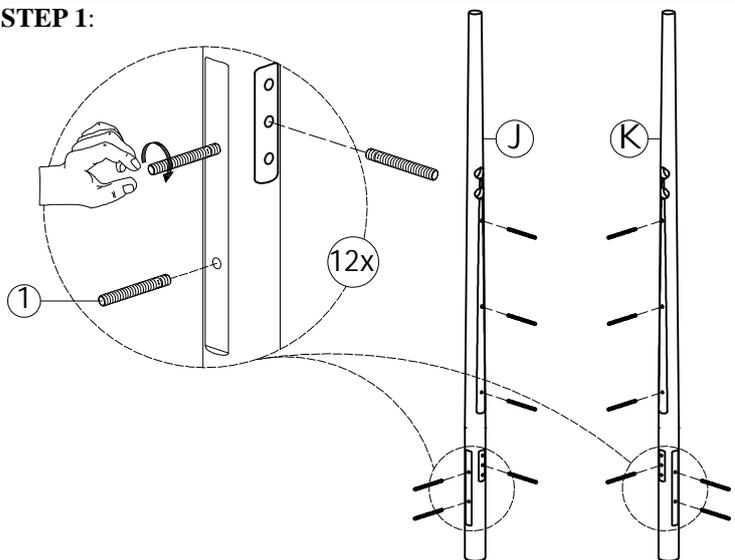

STEP 2:

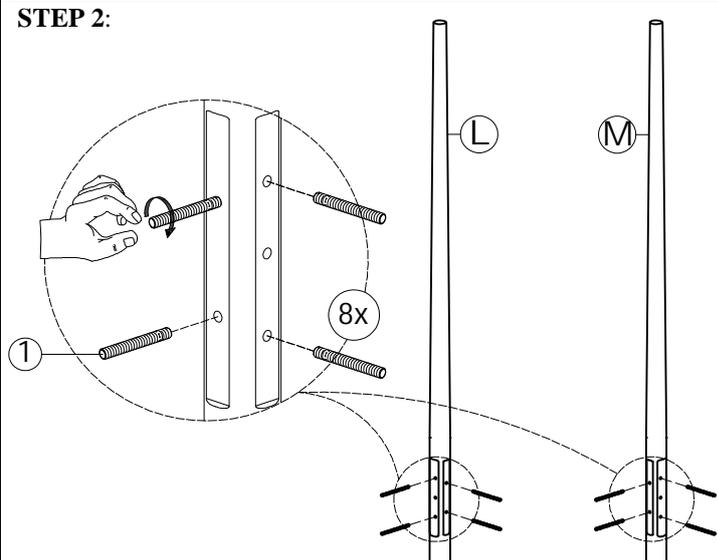


ROCKPORT UPH POSTER KING BED


ASSEMBLY INSTRUCTIONS




STEP 3:

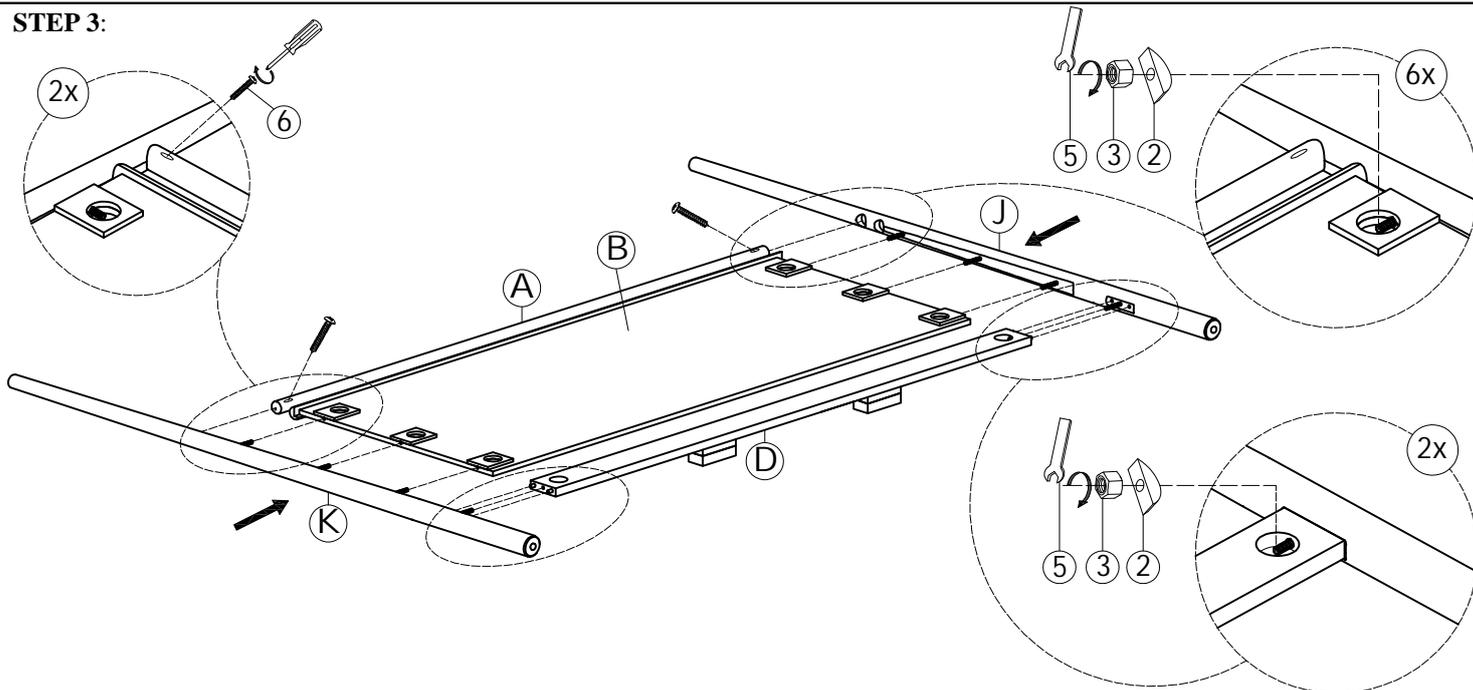


STEP 4:

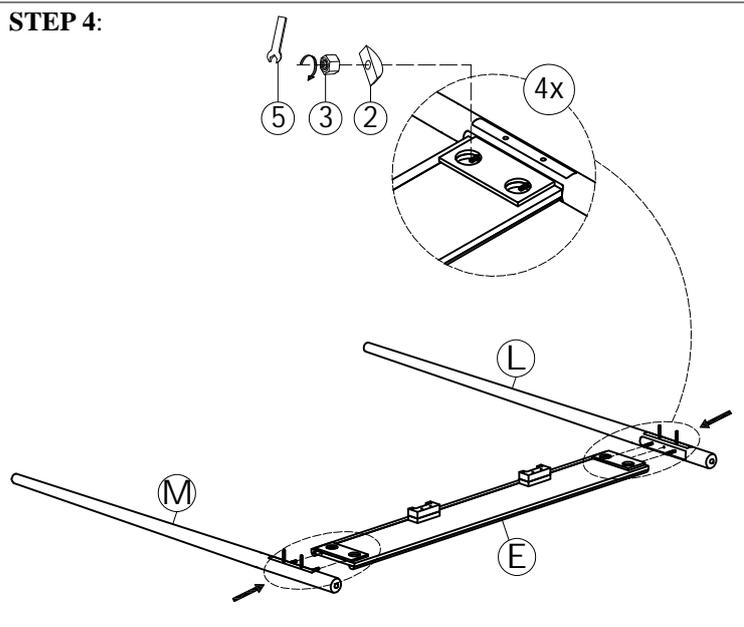

STEP 5:

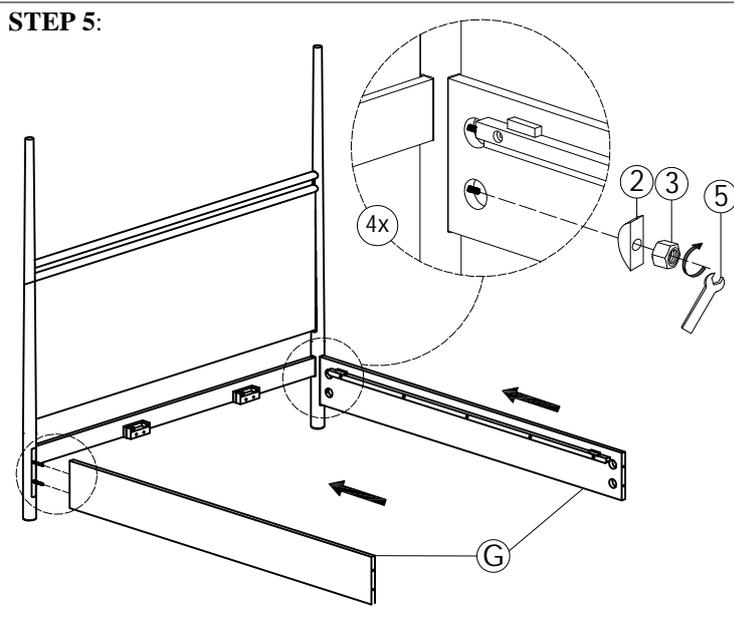

STEP 6:

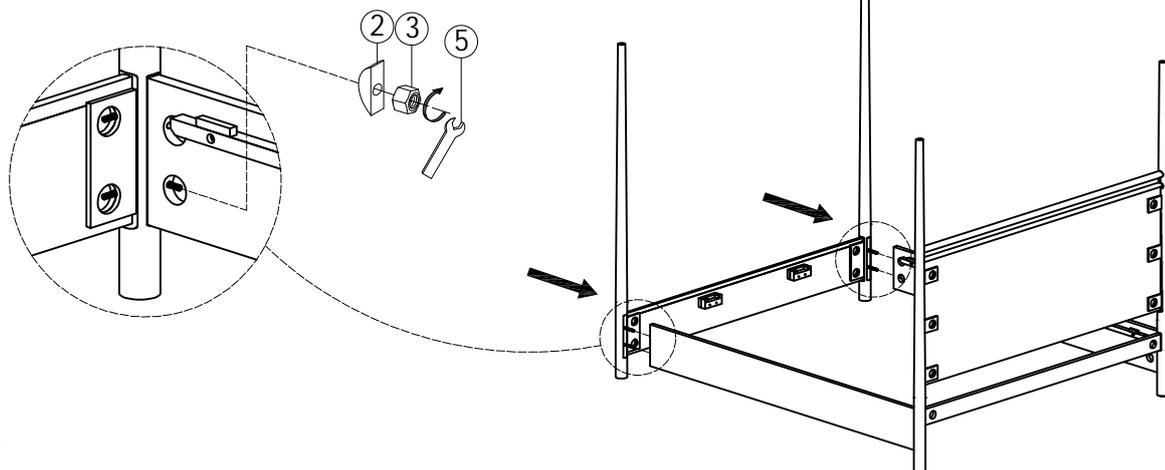

STOP


- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP TO STEP 10 AND THEN APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 7

ROCKPORT UPH POSTER KING BED


ASSEMBLY INSTRUCTIONS




STEP 7:

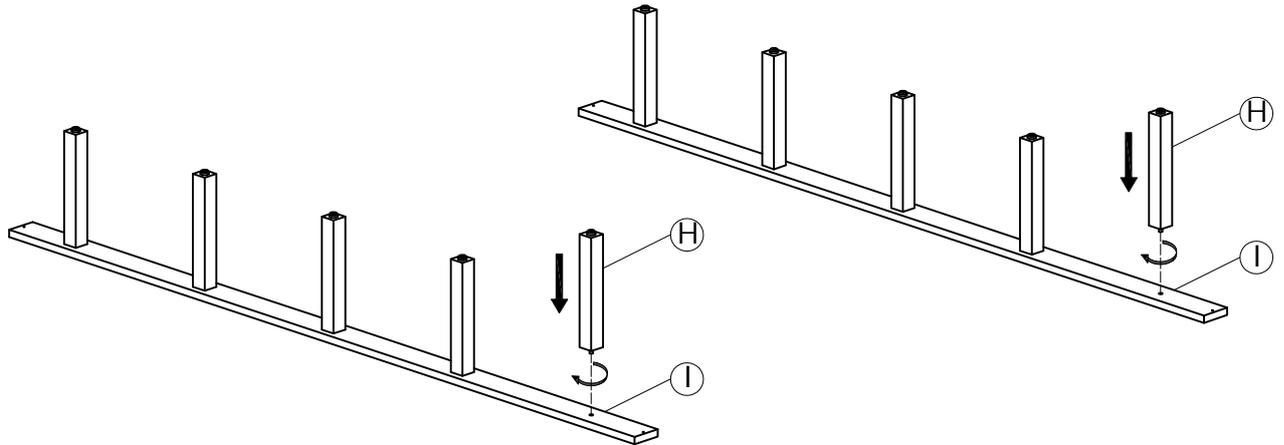


STEP 8:

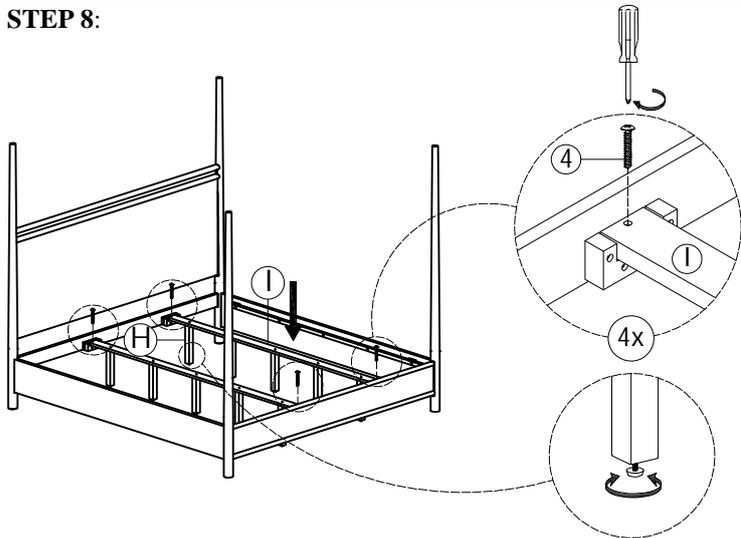


STEP 9:

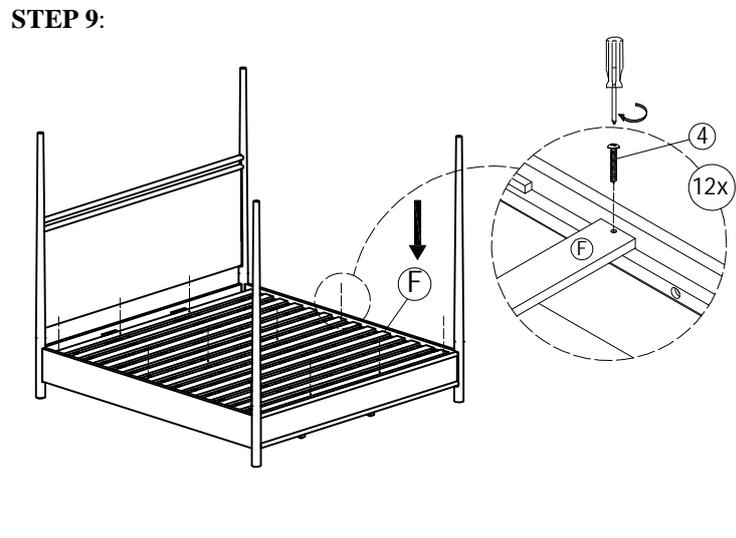

STEP 10:

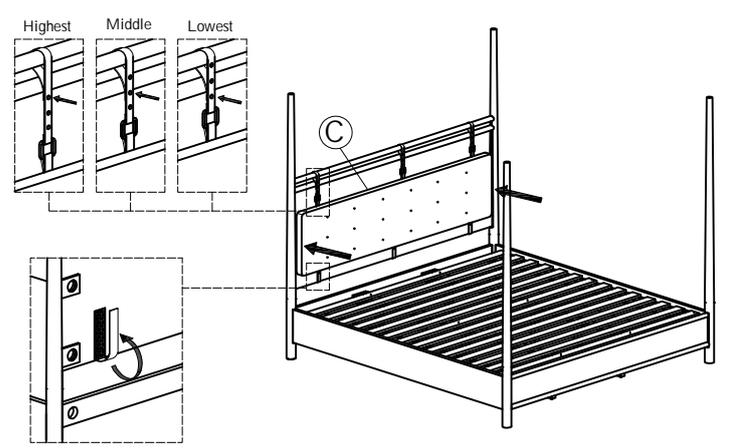

STEP 11:

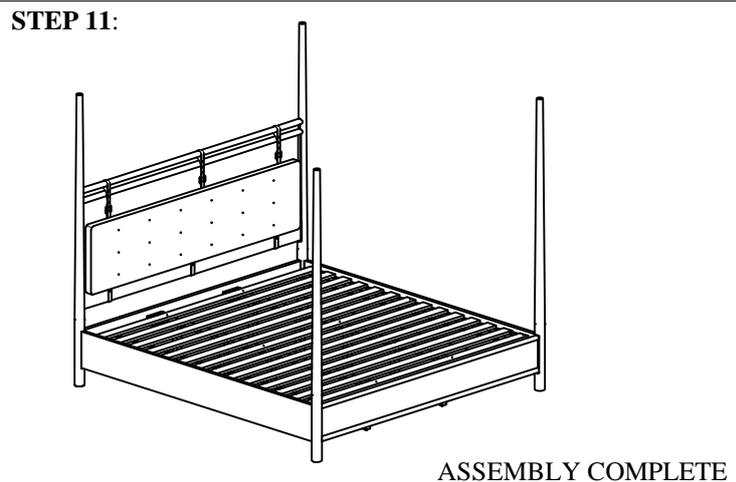


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

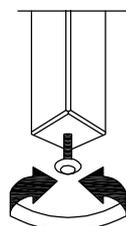

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ROCKPORT UPH POSTER KING BED

ASSEMBLY INSTRUCTIONS

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL	:1 SET	4. WOOD SCREW (4x30mm)	:16 PCS
H. SLAT SUPPORT LEG	:10 PCS		
I. CENTER SLAT SUPPORT	:2 PCS		

STEP 1:

USE ALLEN KEY (7) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

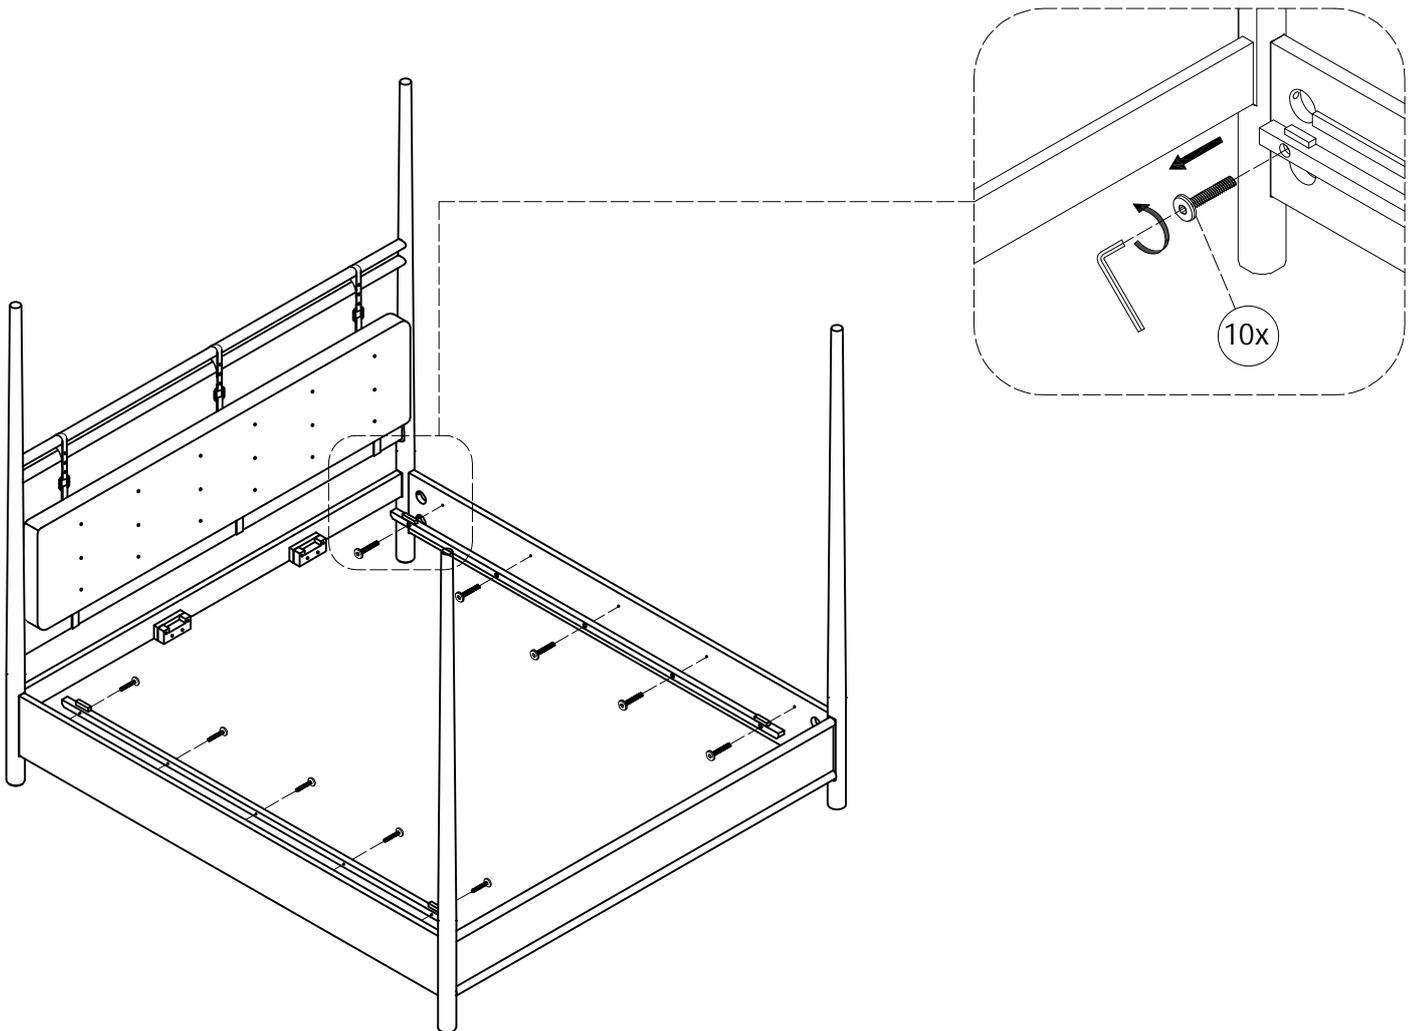

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.