
ASSEMBLY INSTRUCTION

KINCAID
SOLID WOOD SINCE 1946


www.kincaidfurniture.com
Phone :828-728-3261.


863 - 637 HYDE ARM CHAIR

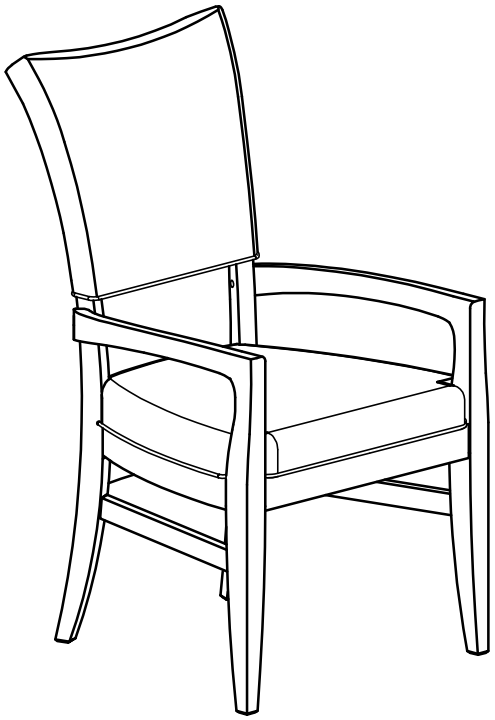

IMPORTANT NOTES :

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched .
- Check to be sure that you have all parts and hardware .
- Remove all wrapping materials, including staples and packing straps before you start to assemble .
- Do not tighten all screws and bolts until completely assembled .
- Keep all hardware out of the reach of children .

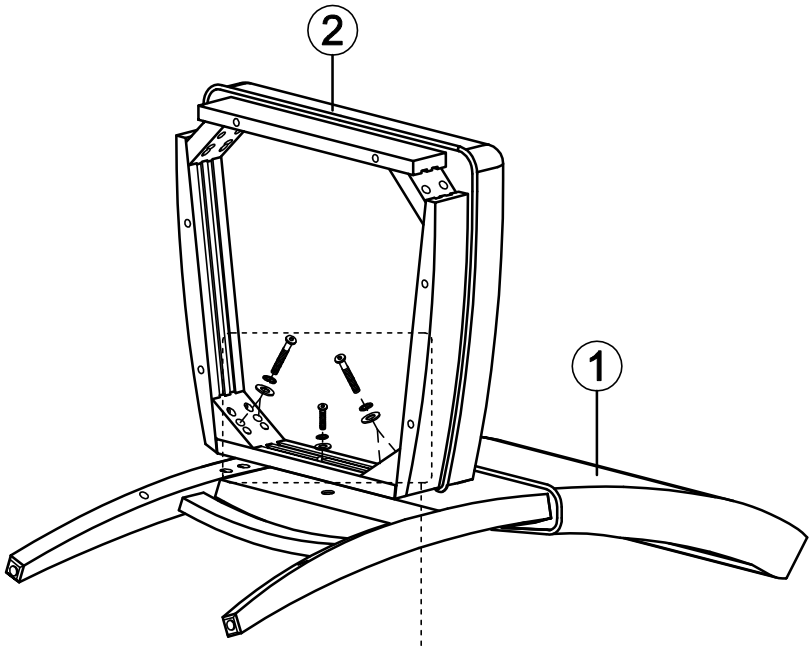

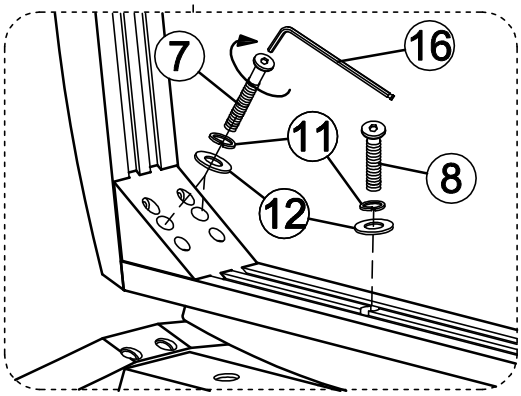

Item #	Description	Q'ty
1.	Backrest	1
2.	Seat frame with cushion	1
3.	Left Front leg	1
4.	Right Front leg	1
5.	Left Stretcher	1
6.	Right Stretcher	1
7.	Long Bolts 5/16" x 80mm	4
8.	Short Bolts 5/16" x 38mm	1
9.	Smal Bolts 1/4" x 40mm	2
10.	Hex Nuts 5/16"	4
11.	Lock Washers 5/16"	11
12.	Large Washers 5/16"	9
13.	Small Washers 1/4"	2
14.	Wood Plug	2
15.	Screws	4
16.	Allen Key	1
17.	Wrench	1


MADE IN VIETNAM

ASSEMBLY INSTRUCTION

KINCAID
SOLID WOOD SINCE 1946

www.kincaidfurniture.com
Phone :828-728-3261.

863 - 637 HYDE ARM CHAIR

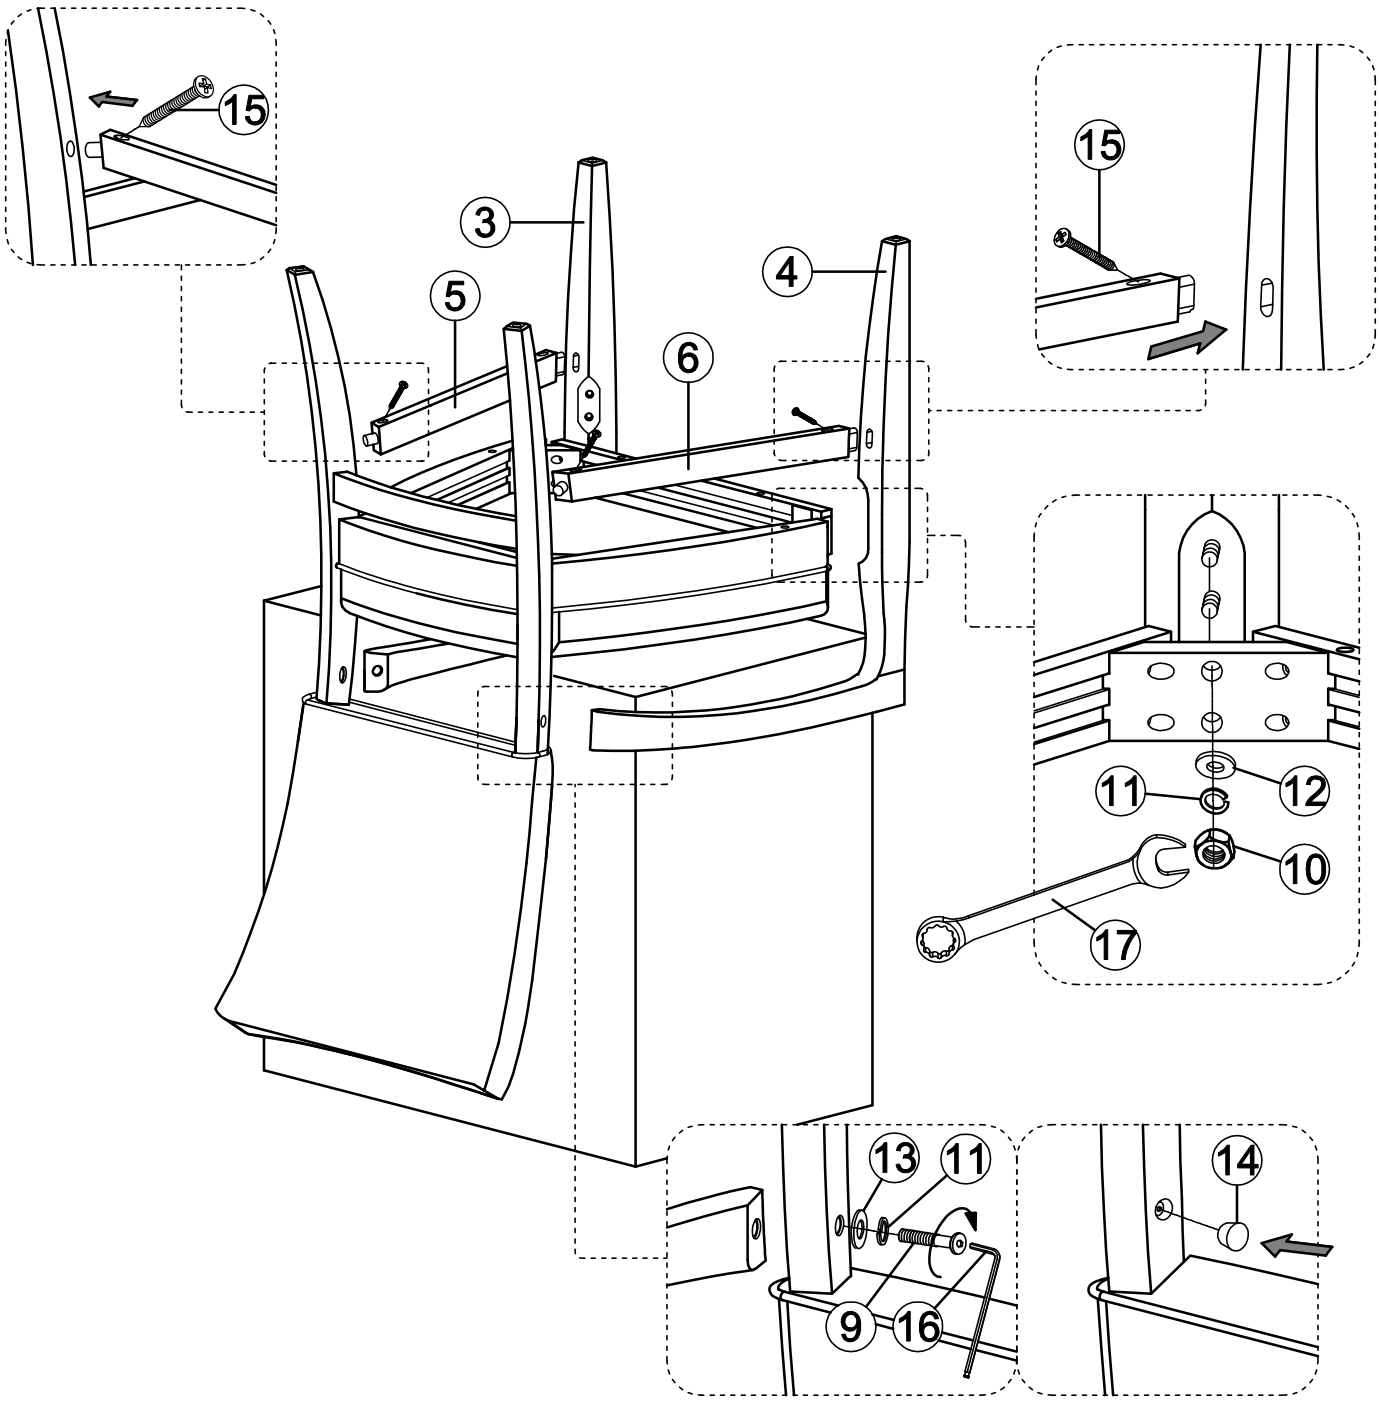

MADE IN VIETNAM