

Dear Customer!

**If hardware is missing or parts
get damaged in shipping,
DO NOT RETURN ENTIRE ITEM.
We can replace hardware and any parts.**

**For best Customer Service experience,
visit our web site at www.boltonfurniture.com
click on Replacement Parts Tab
at top of page to order replacement
hardware or parts.
We will ship replacements directly to you.**



ASSEMBLY INSTRUCTIONS




FSC
www.fsc.org

MIX

Wood | Supporting
responsible forestry


FSC® C030485

DAYBED WITH KING CONVERSION

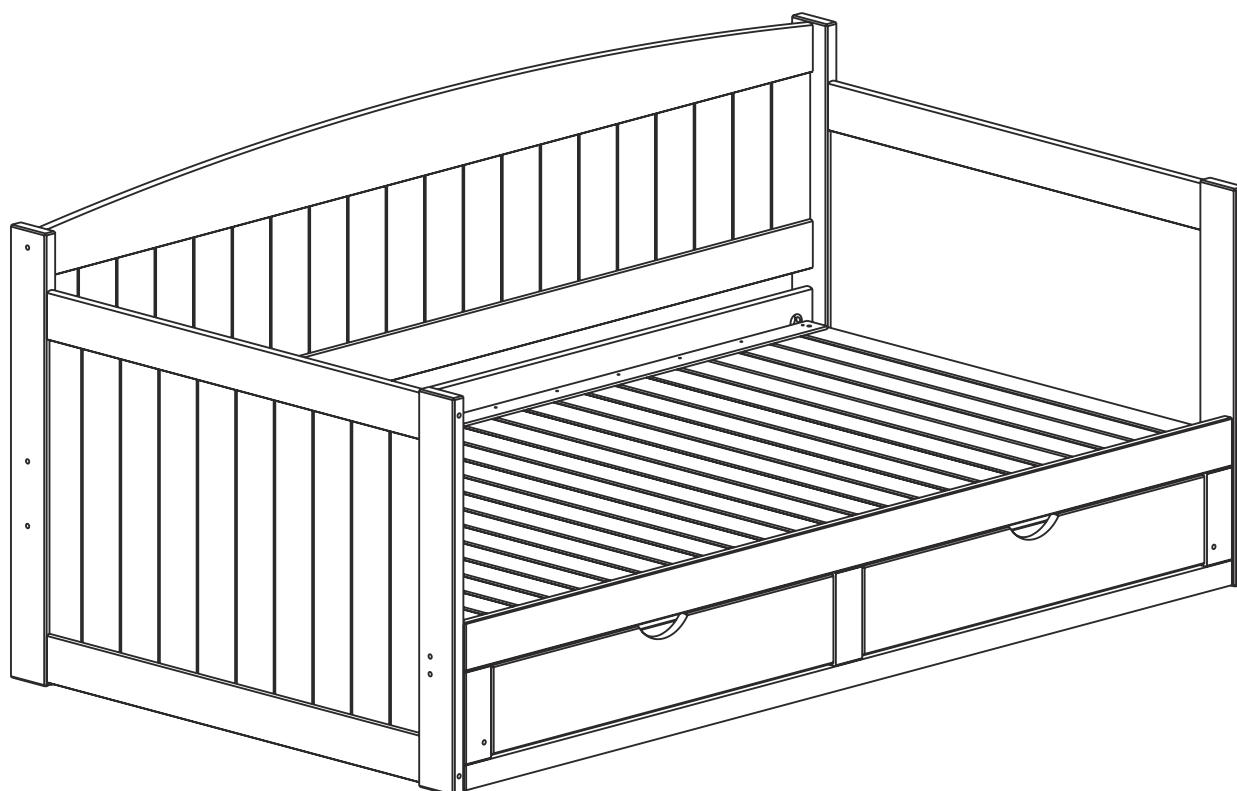


REPLACEMENT PARTS


Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at "boltonfurniture.com"

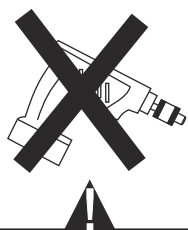


* Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

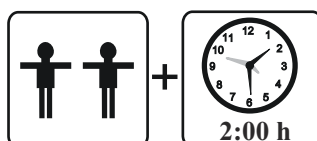

Tools Required



(Not included)




(Not included)

AJHO11WH/ AJHO1180












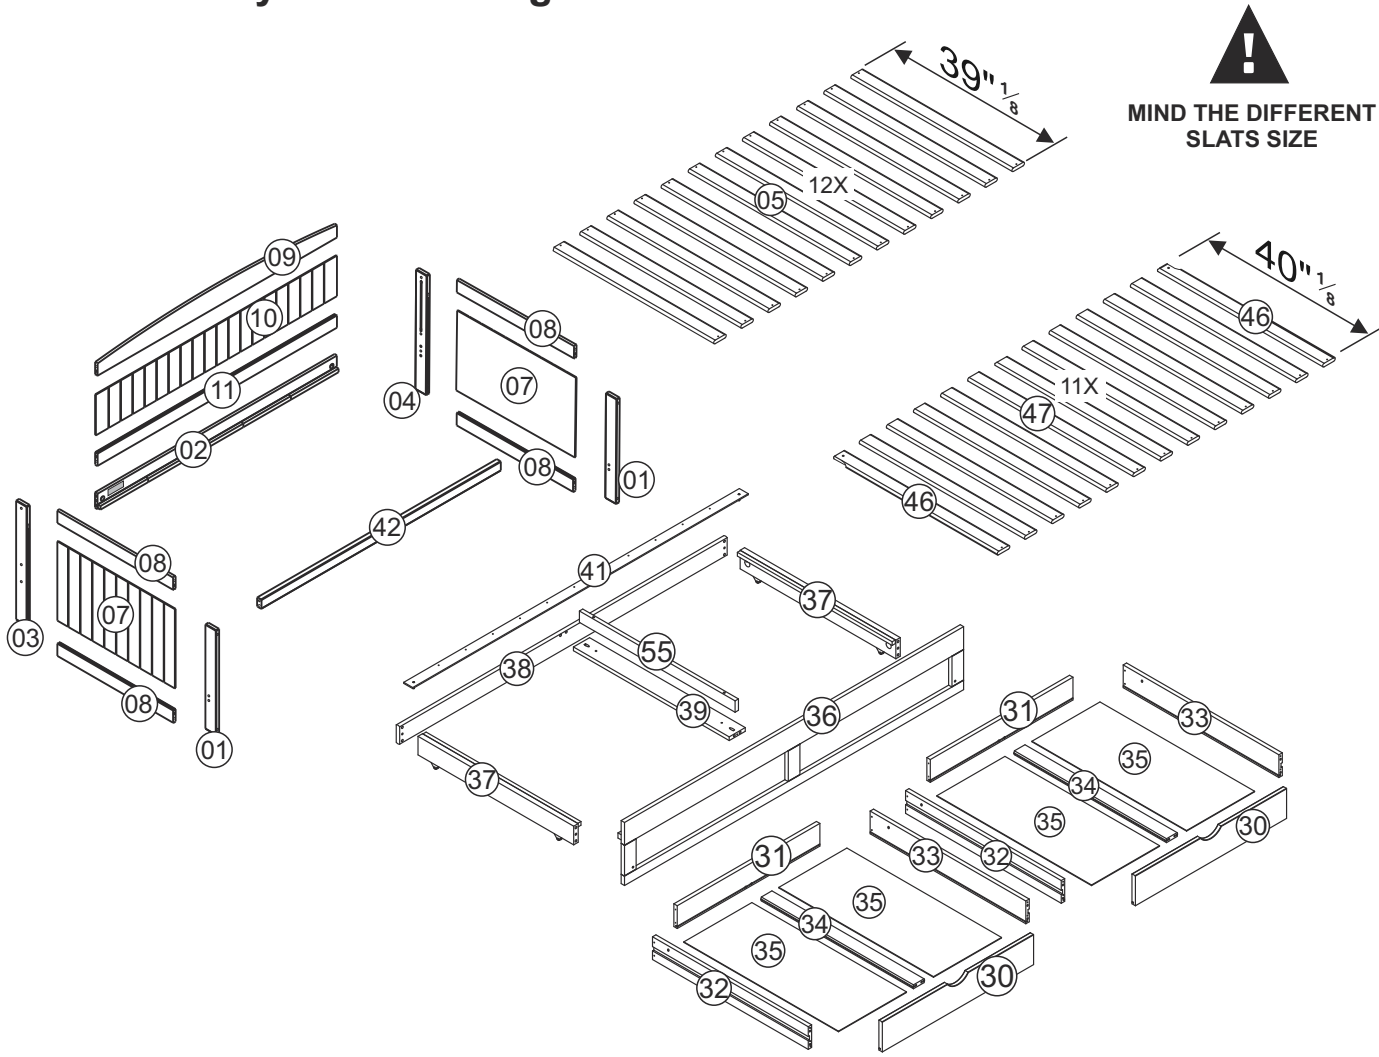






boltonfurniture.com

2 Of 17

Part List - Daybed With King Conversion




Identifying the Hardware-Identify the hardware using the illustrations below.

A  1/4 x 70 x 17mm 08	B  06	C  4,0 x 35 47
D  RD 20 04	E  10X50 16	F  10X40 16
G  7 x 70 x 17mm 06	H  02	I  3" 1/4 02
K  1/4 02	L  8X35 16	M  4,5 x 60 02
N  08	O  4,0 x 16 21	P  6,0 x 45 02
Q  7,0 x 120 X 17 08	R  02	S  08

01

E







10X50

16

R



01

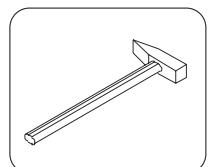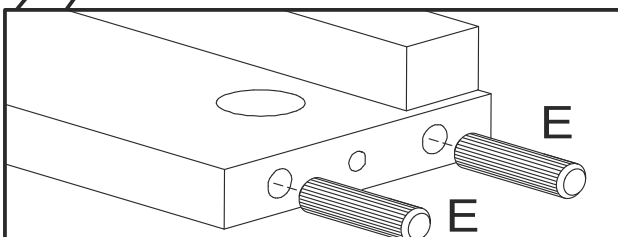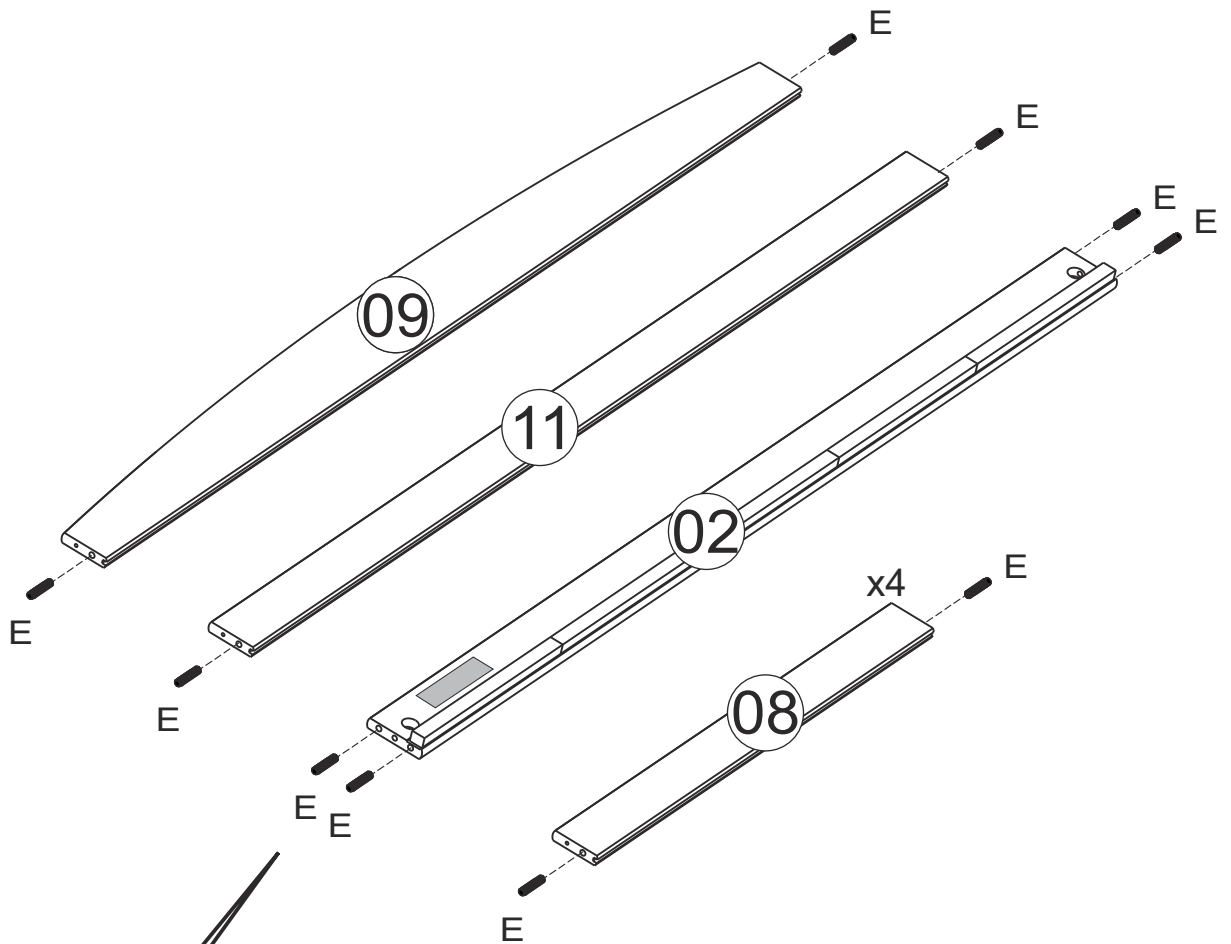


Q




04

H

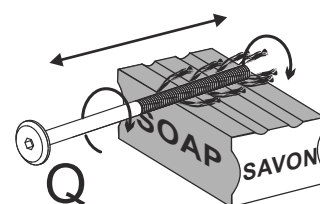

03


Q




04

7,0 x 120 X 17



H



01

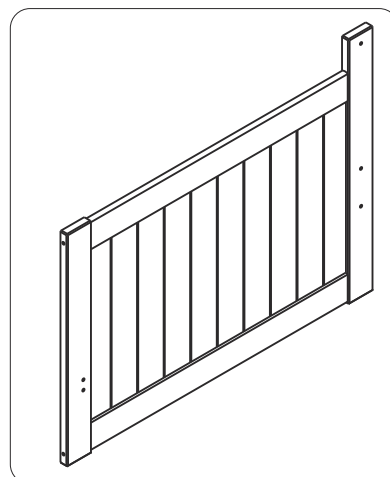


**GROOVED SIDE
MUST FACE OUTWARDS**

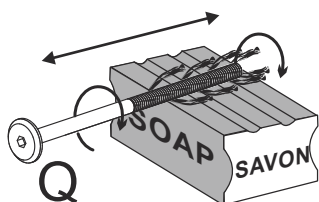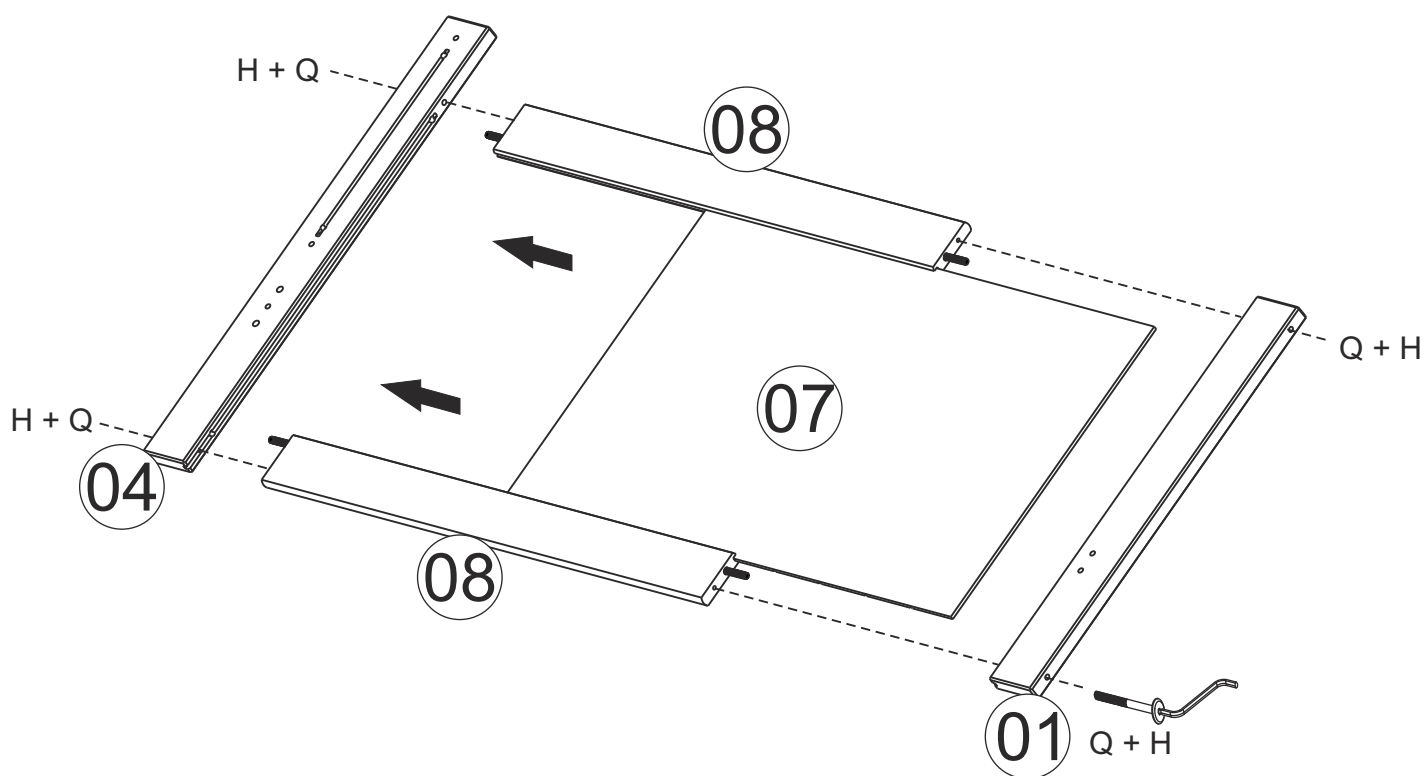

04

A



1/4 x 70 x 17mm


01

B



01


G







7 x 70 x 17mm

02



H



01

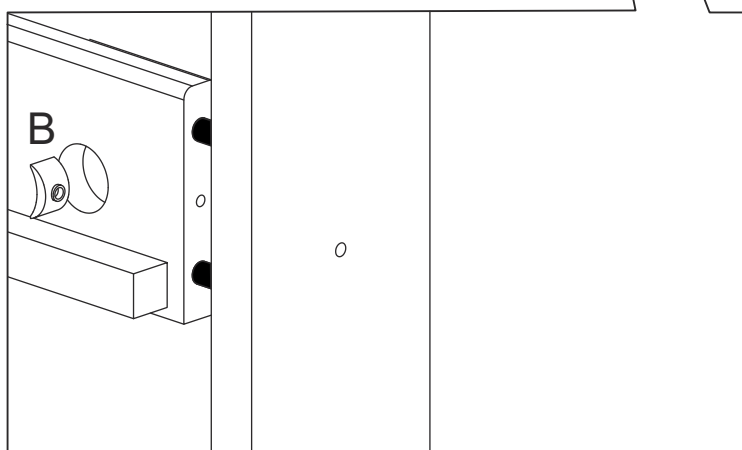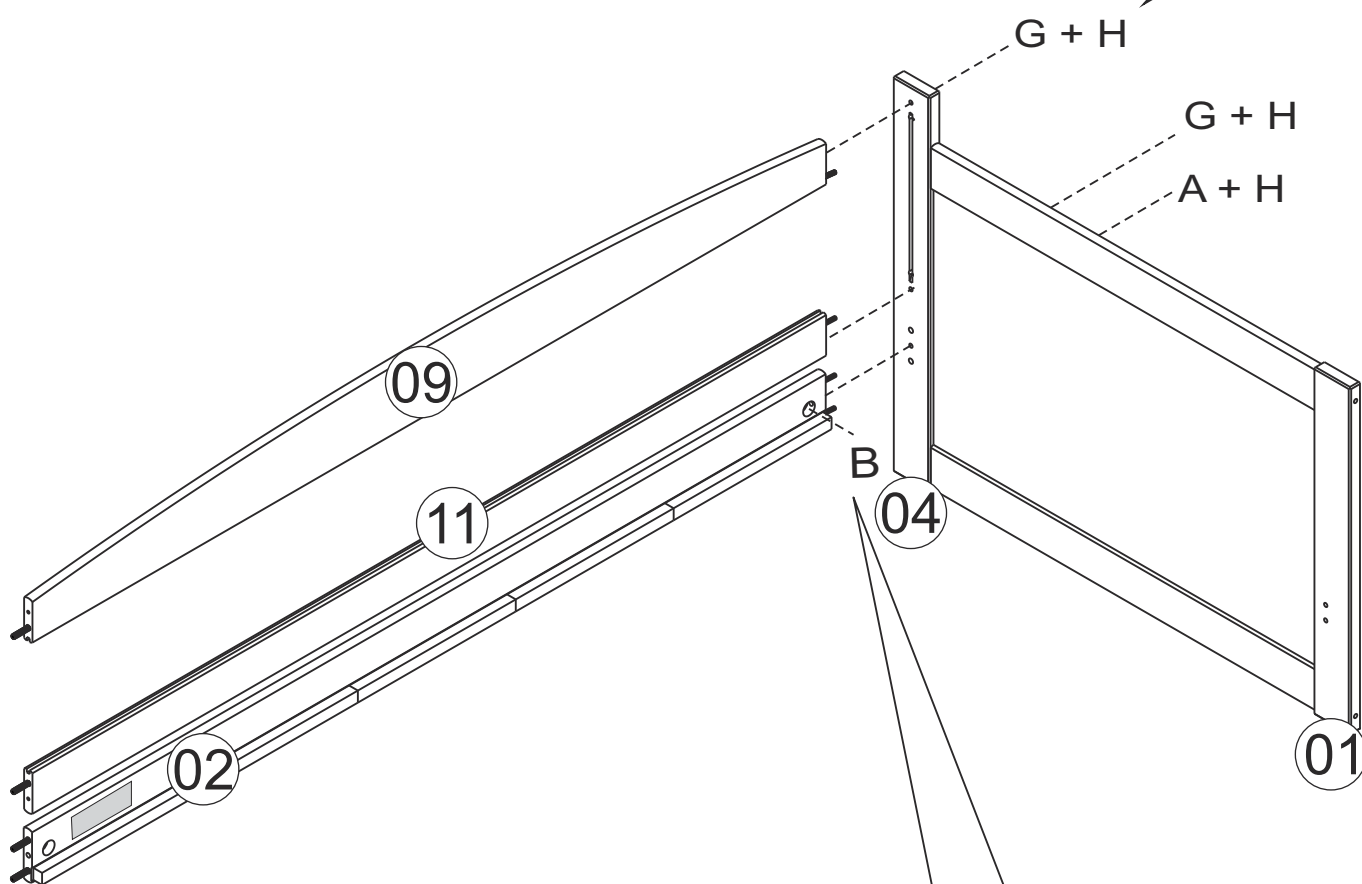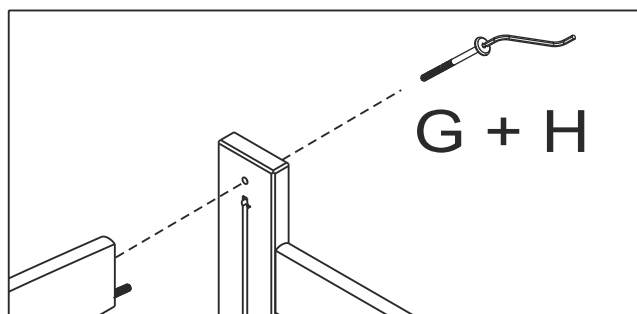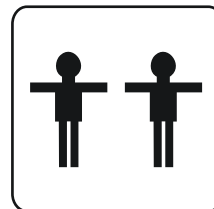


05

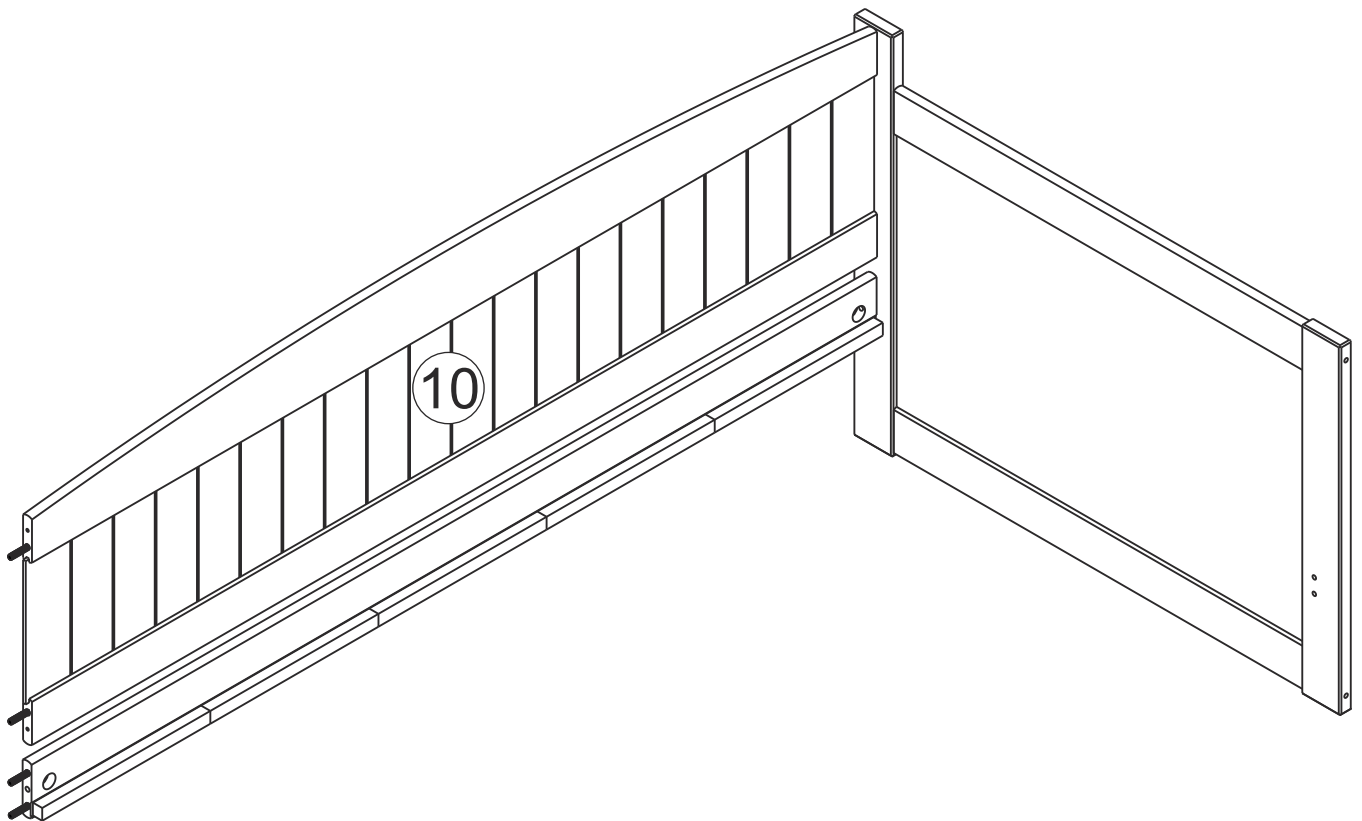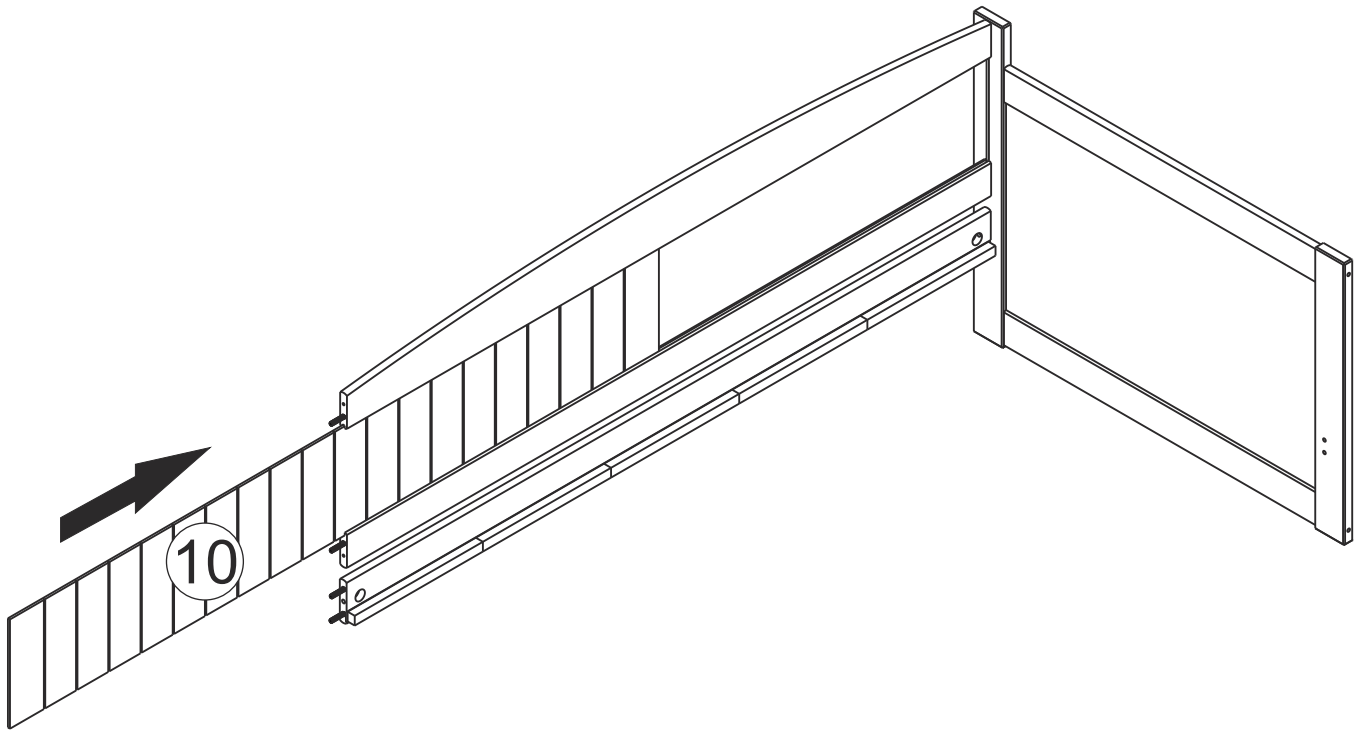

06

A



1/4 x 70 x 17mm


01

B



01


G





7 x 70 x 17mm

02


H





01

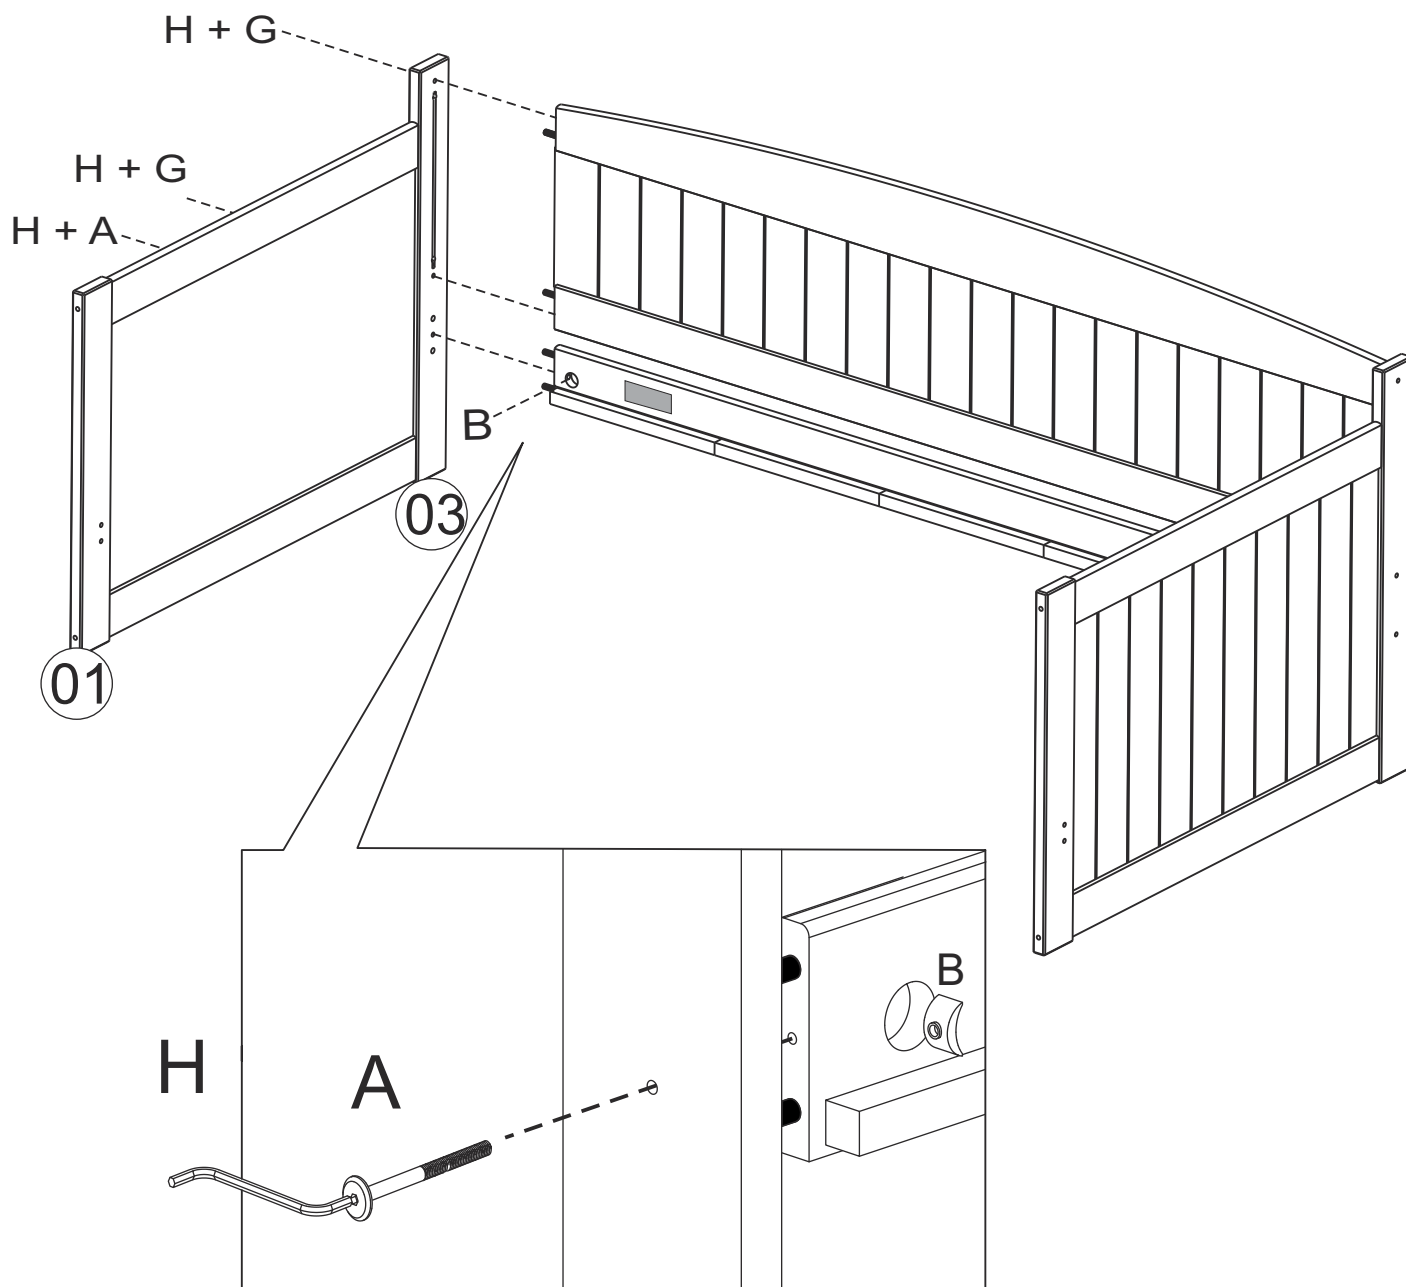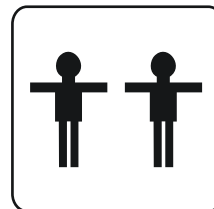



07

A  02
1/4 x 70 x 17mm

G  02
7 x 70 x 17mm

H  01

K  02
1/4

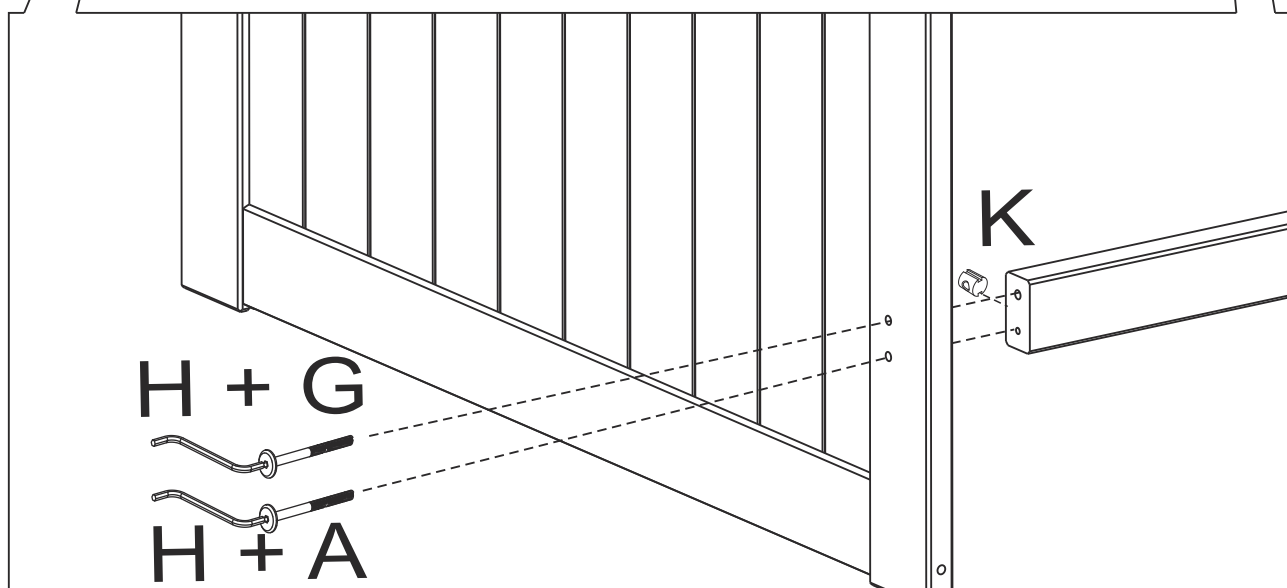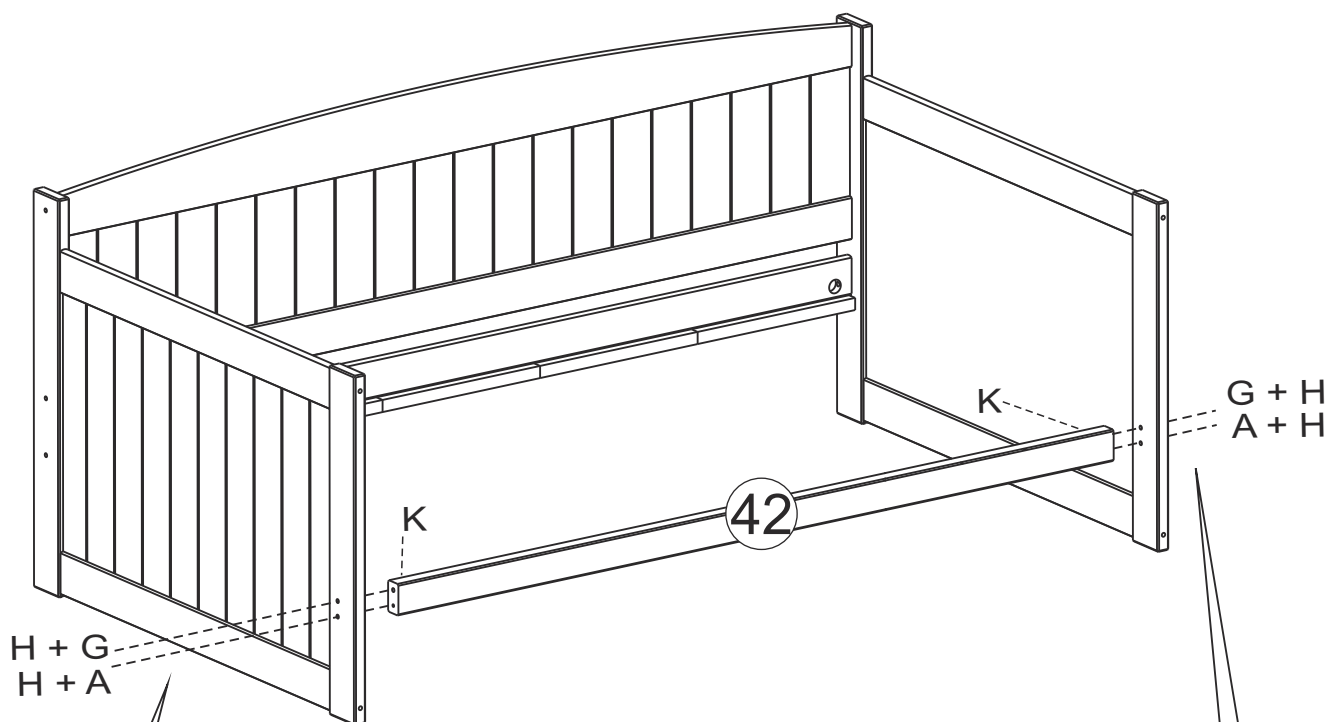

08


C



4,0 x 35




24

I




3" 1/4

02

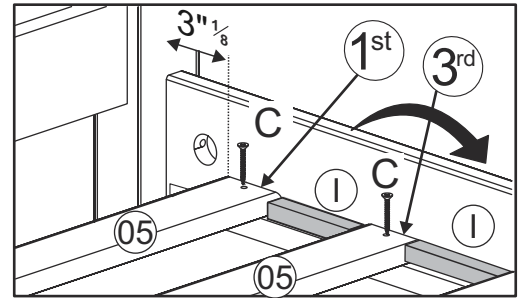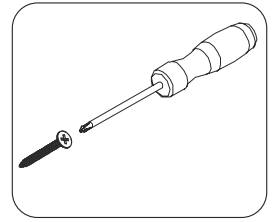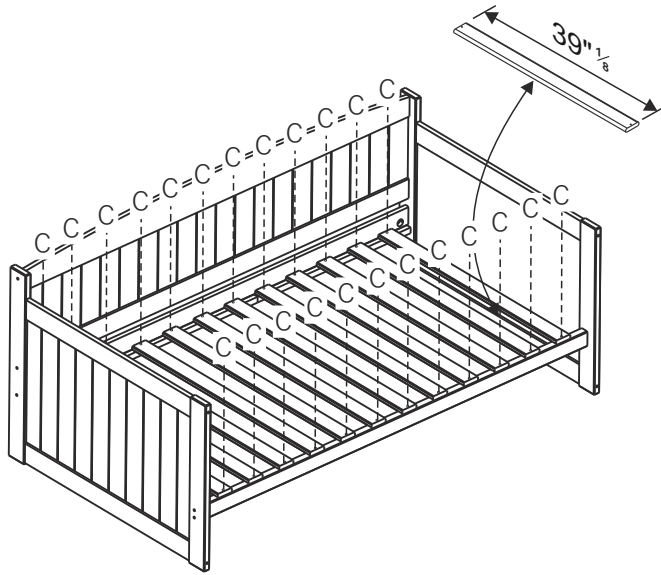


!
SPACING
BETWEEN
BED **POST**
AND SLATS
MUST BE
3" 1/8

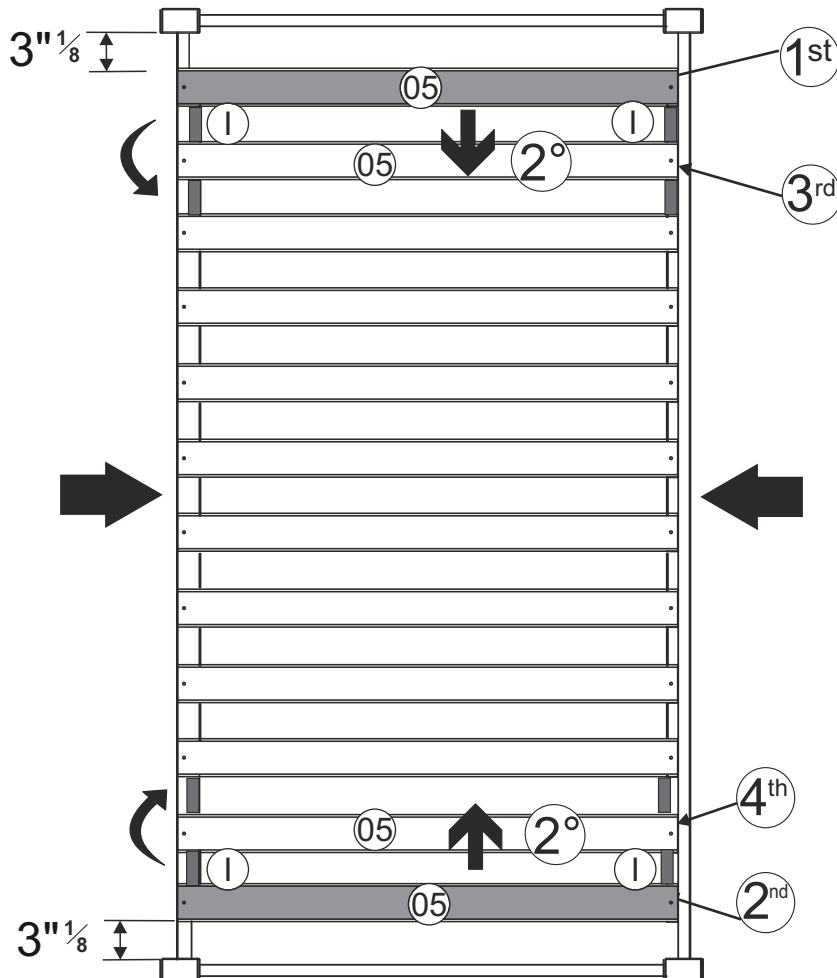

!
SPACING
BETWEEN SLATS
MUST BE 3" 1/4.

**USE THE WOOD
SPACER I**

**FIX THE SLATS FROM
OUTSIDE IN.
ALTERNATING SIDES
1st, 2nd, 3rd,...**

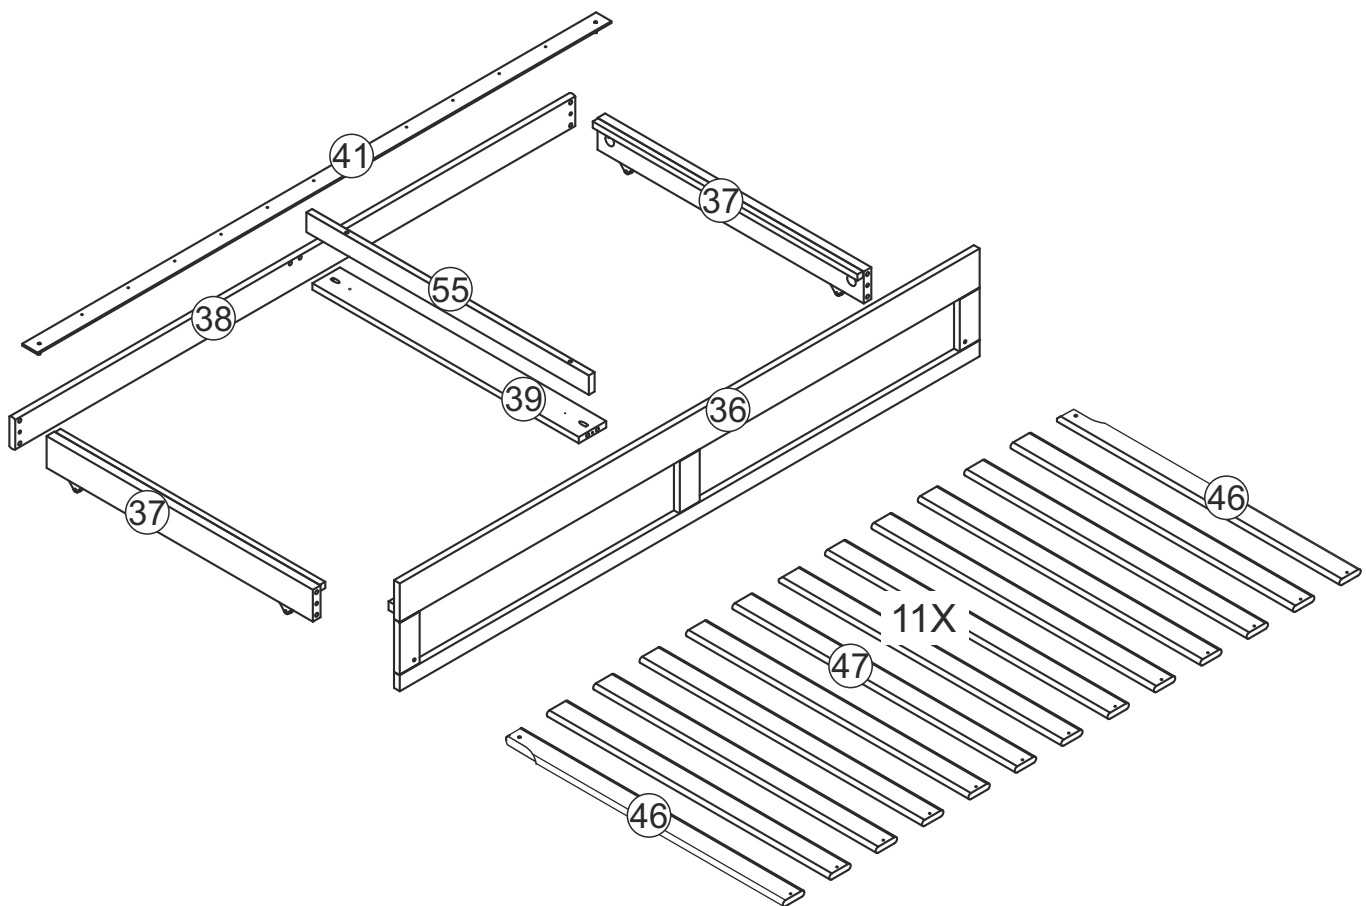

09

D



RD 20

04

F



10X40




12

O




4,0 x 16


08

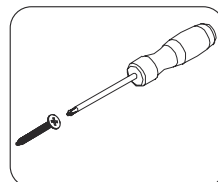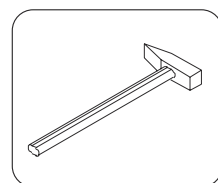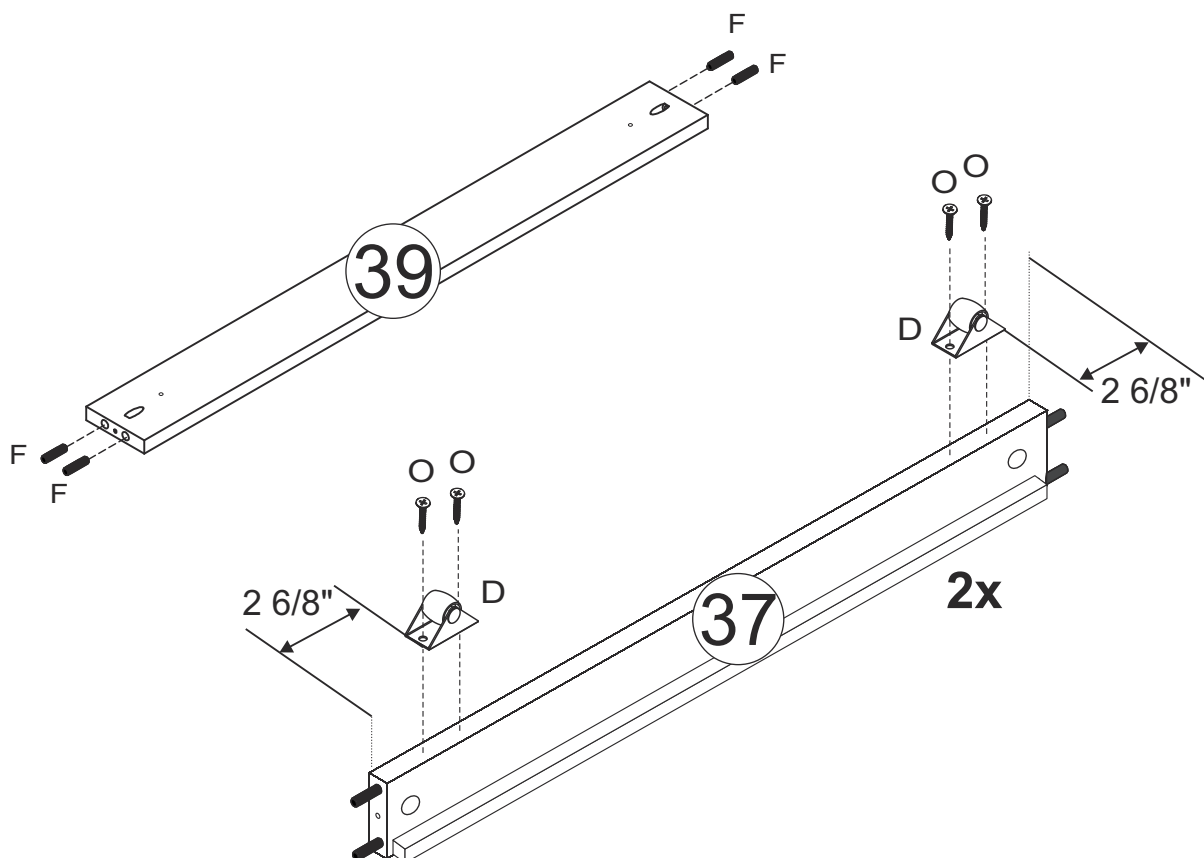


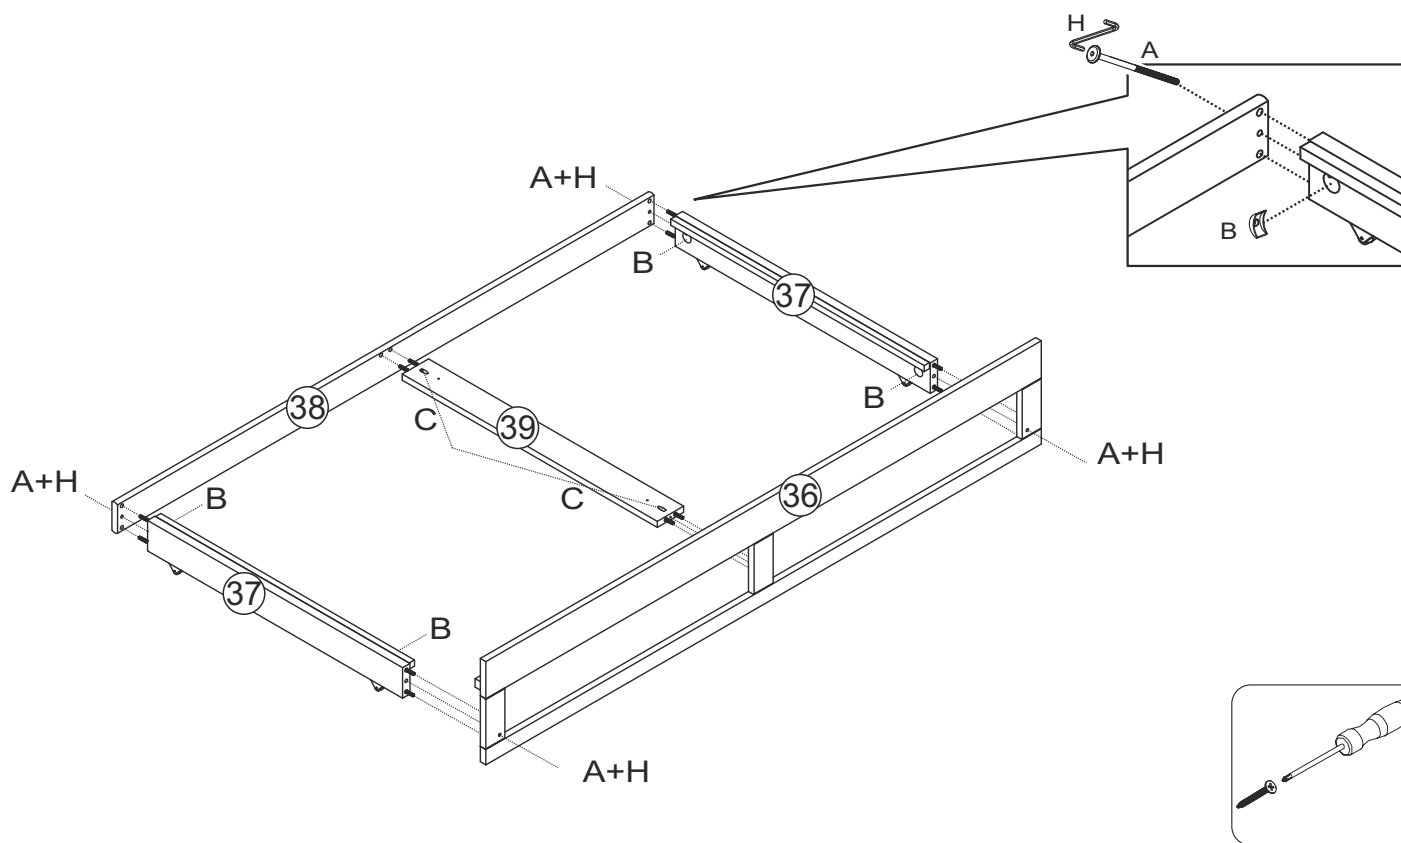
10

A  04
1/4 x 70 x 17mm


B  04


C  02
4,0 x 35

H  01



11

M  02
4,5 x 60

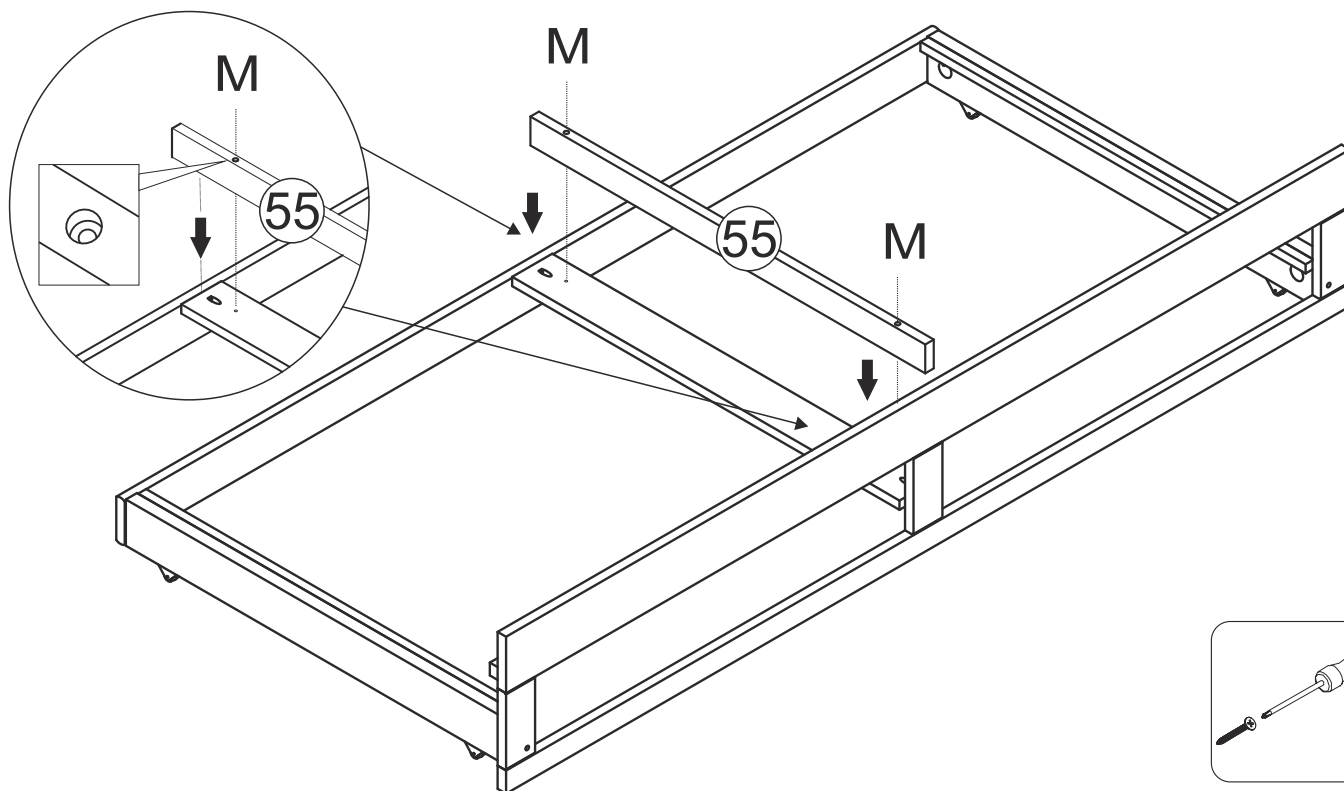

12


C





4,0 x 35

13



CHAMFERED
SIDE
FACING
OUTWARDS

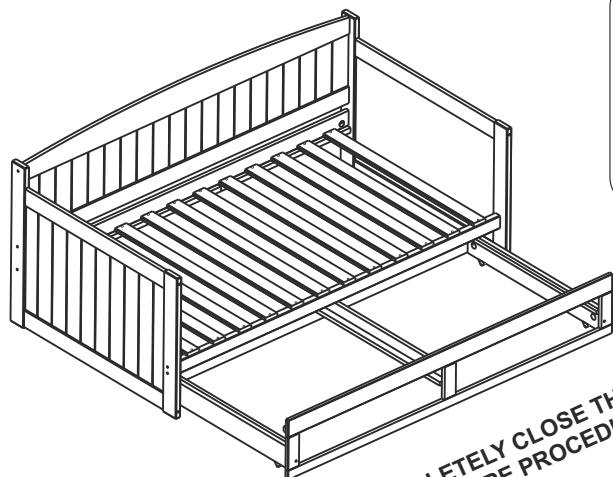


COMPLETELY CLOSE THE
BED BEFORE PROCEEDING

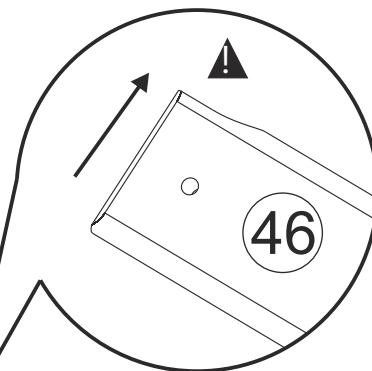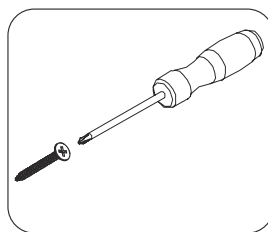



40" $\frac{1}{8}$

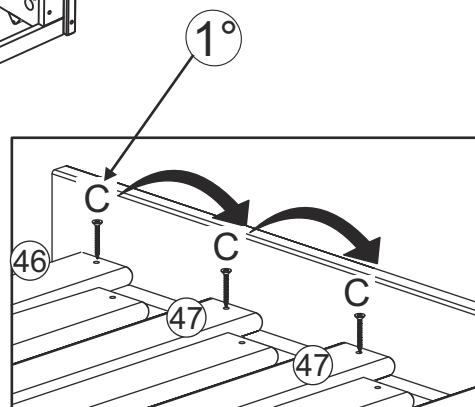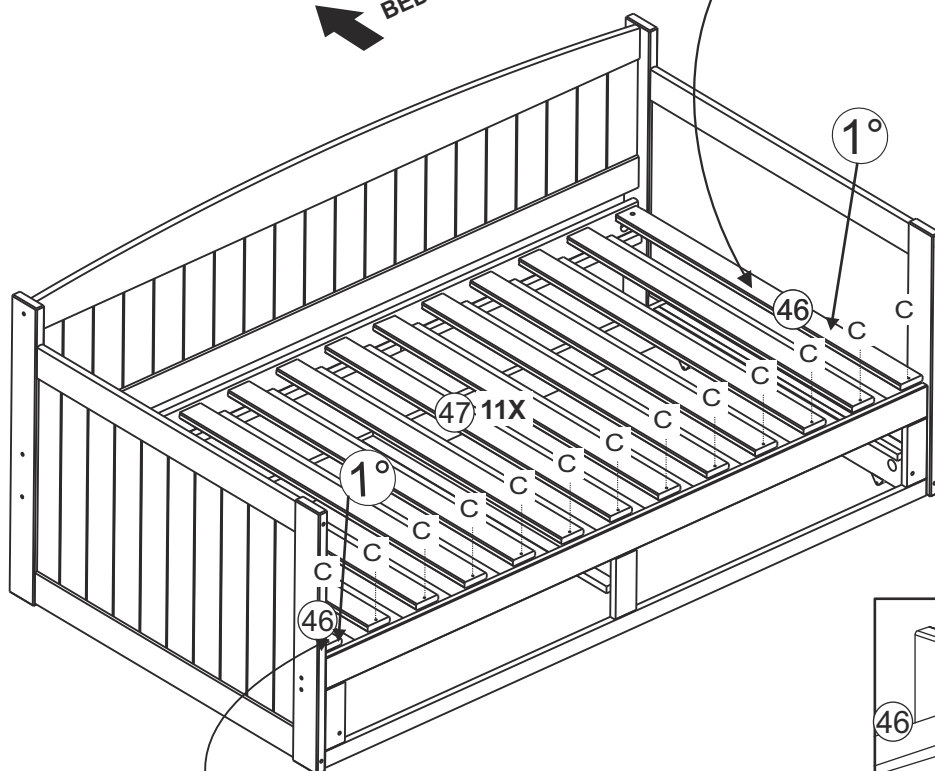

CHAMFERED
SIDE
FACING
OUTWARDS

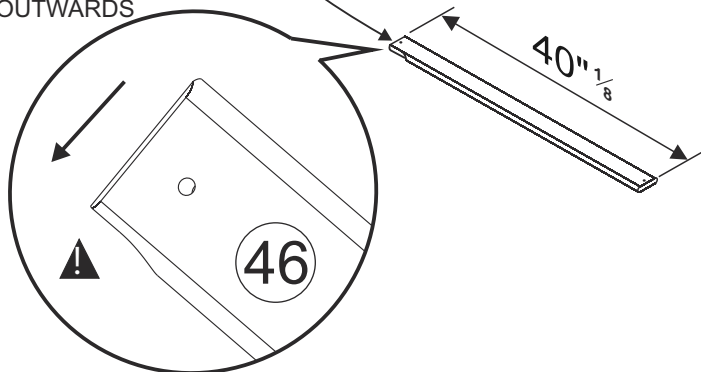


40" $\frac{1}{8}$

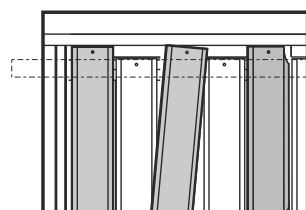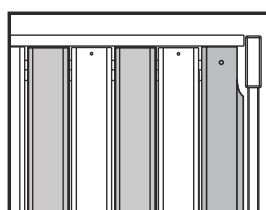

MAKE SURE THE SLATS ARE ALIGNED
AND NOT TOUCHING EACH OTHER

13


O



4,0 x 16



13

P





6,0 x 45



02

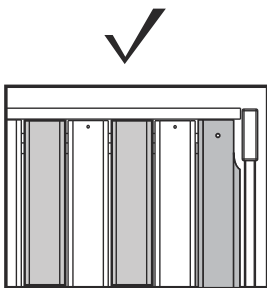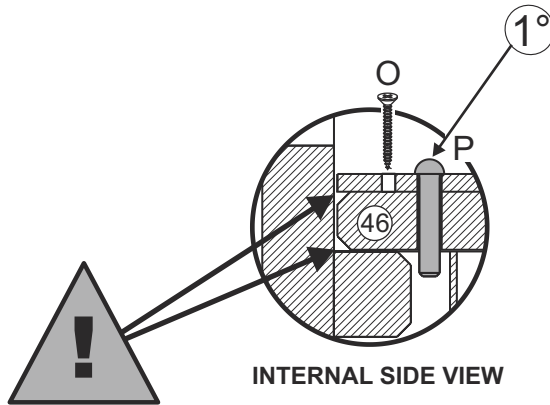


**MAKE SURE THE SLATS ARE ALIGNED
AND NOT TOUCHING EACH OTHER**

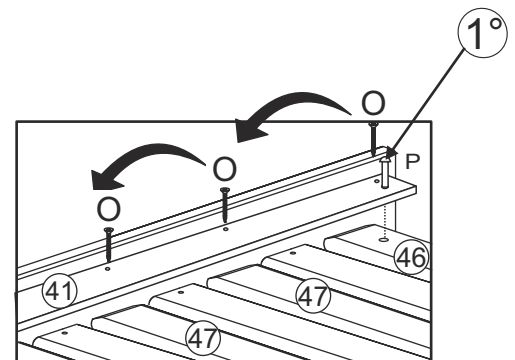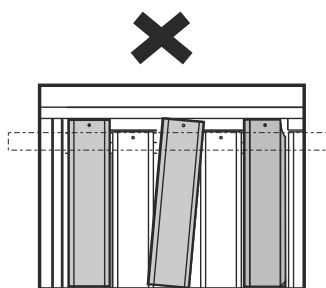

**SECURE THE STRIP O WITH THE
METAL PIN P. THEN PROCEED WITH
FIXING THE SLATS**

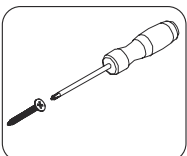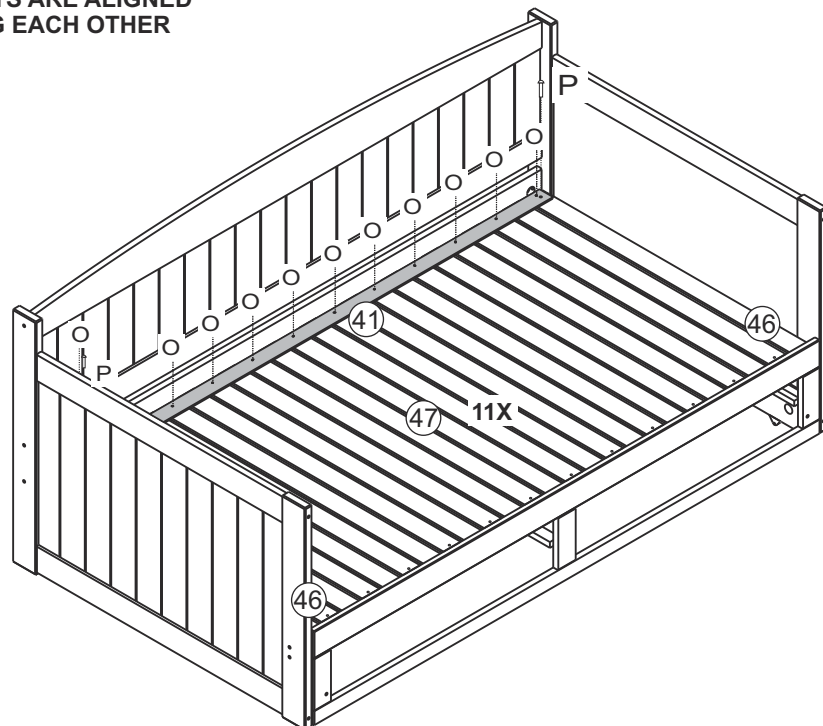

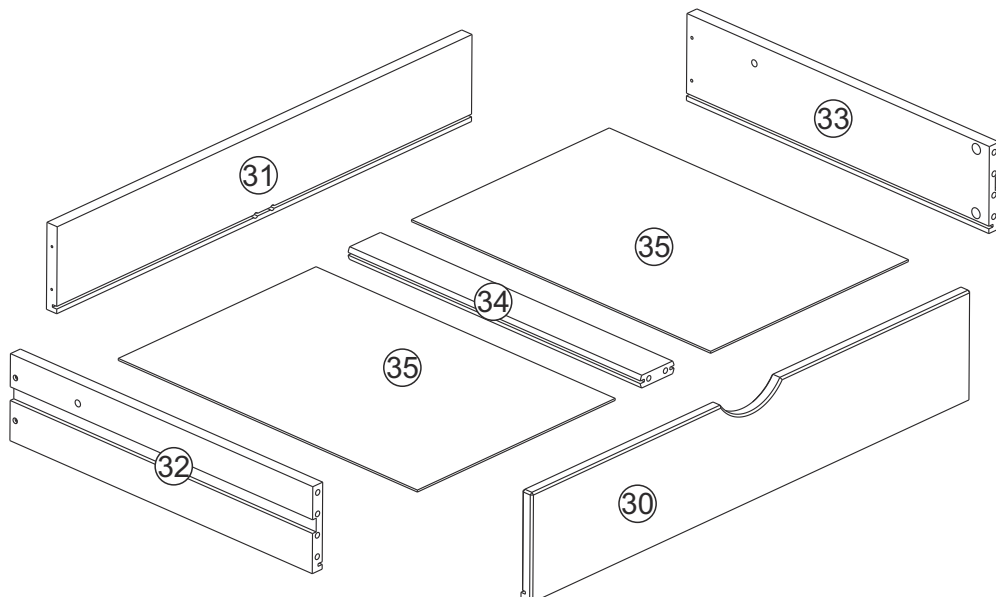

2x

14

L




8X35

16



R



01

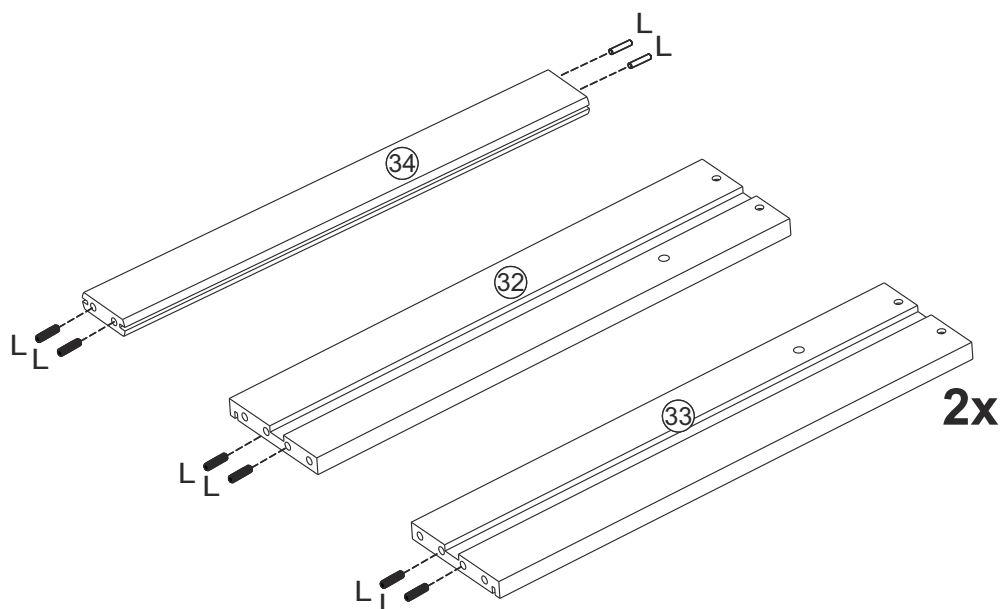


2x

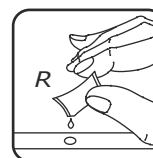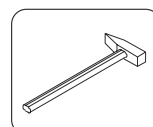




! "Irreversible operation"

15

N



08

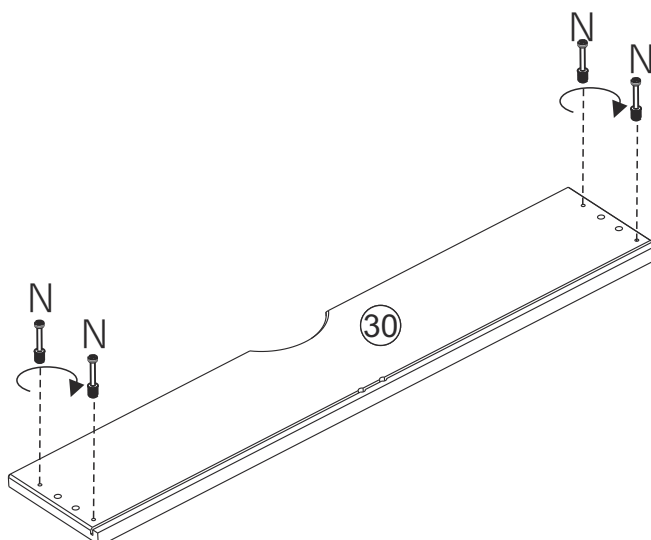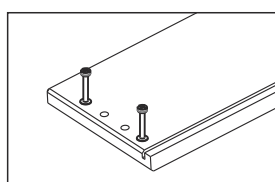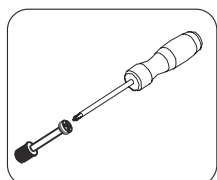

16

C









4,0 x 35

08

S



08

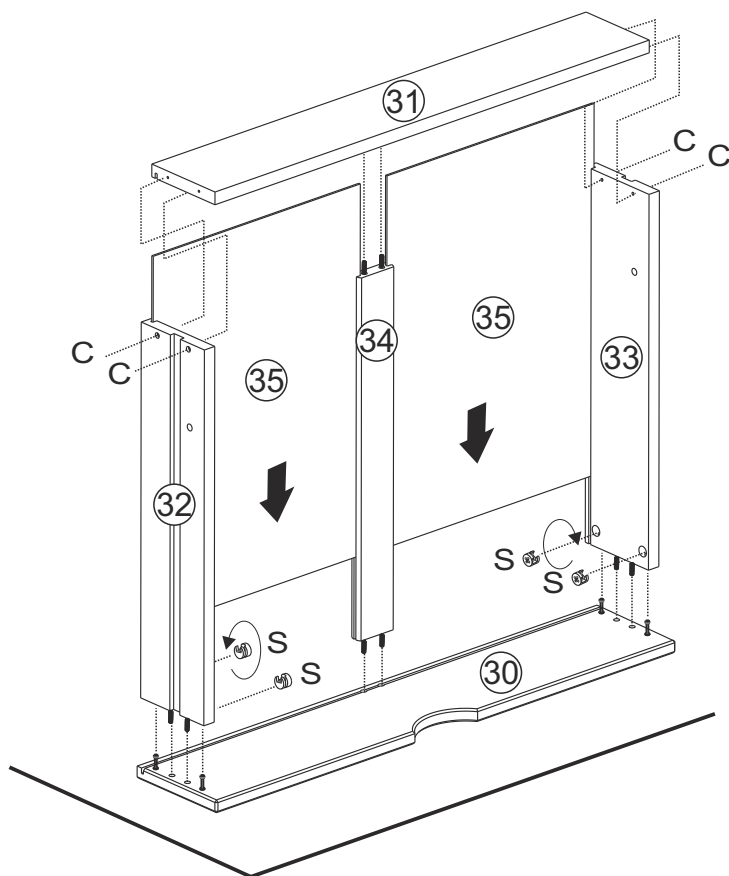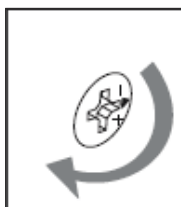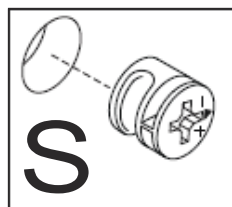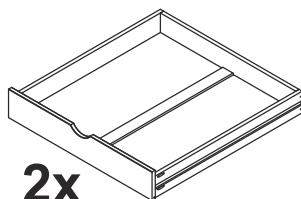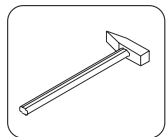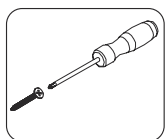


17

F



10X40

04

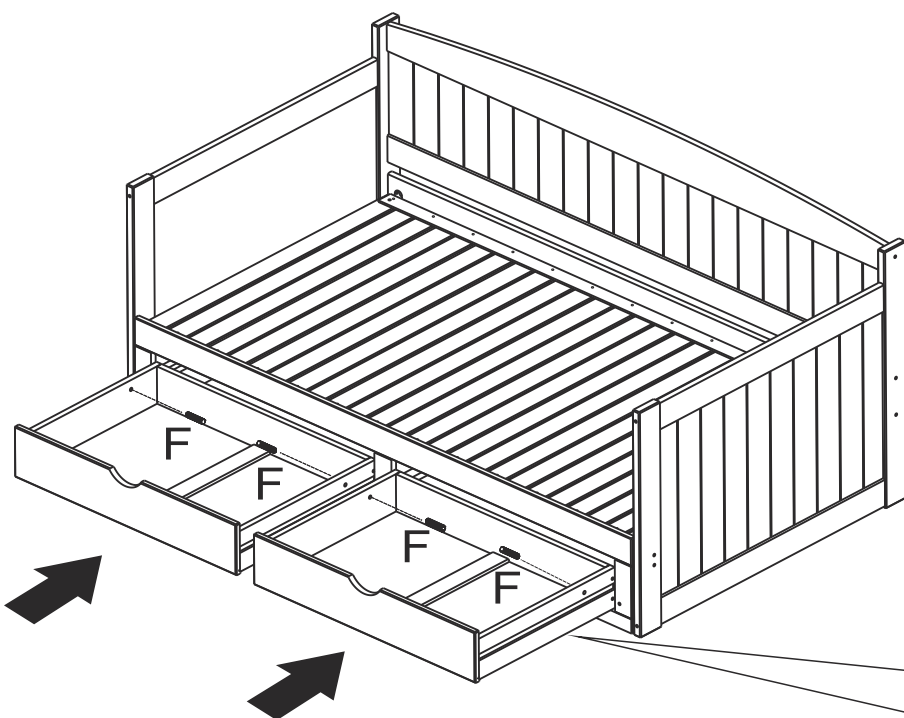

CLOSE THE DRAWER
PARTIALLY SO THAT THE
WOODEN LOCK CAN BE
INSERTED

